 


**thermo
mate**

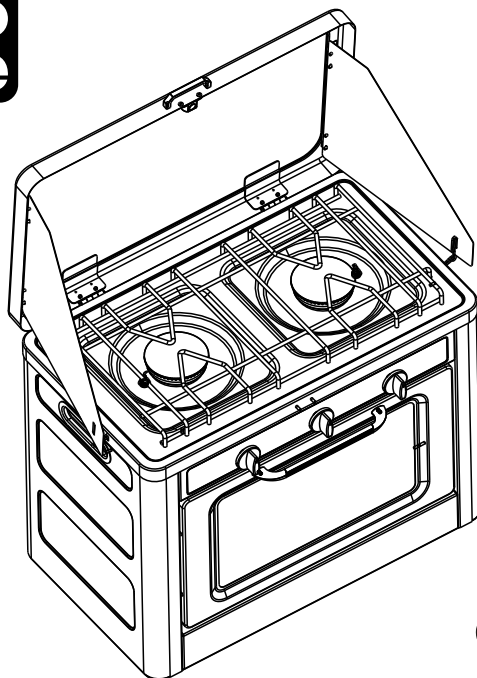

AGA certification No.: 7171

PORTABLE GAS OVEN AND COOKTOP

CAPCOKP2BRTKADJG

Important:

Read these instructions carefully before use.
Familiarise yourself with the appliance before
connecting it to the gas container.
Keep the Instruction manual for future reference.

OUTDOOR USE ONLY

Dear buyer,

We thank you for your choice of our camp stove/oven. By reading the Instructions carefully, you will be satisfied with the stove/oven.

Please read this manual before you light your appliance

Once you have installed your appliance,
we recommend you to retain this manual for future reference.



READ THE SAFETY INFORMATION

Your safety and the safety of others are very important. There are many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol. Recognise this symbol as an indication of important Safety Information!

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol and either the word “DANGER”, “WARNING”, “CAUTION” or “NOTICE”.

These words mean:



DANGER

An imminently hazardous situation that will result in death or serious injury.



WARNING

A potentially hazardous situation that could result in death or serious injury and/or damage to property.



CAUTION

A potentially hazardous situation that may result in minor or moderate injury.


Notice:


Attention is called to observe a specified procedure or maintain a specific condition.



WARNING

- If the instructions in this manual are not followed exactly, fire or explosion may result in causing property damage, personal injury or death.
- This appliance shall only be used in an above ground open-air situation with natural ventilation, without stagnant area, where gas leakage and products of combustion are rapidly dispersed by wind and natural convection
- Do not modify this appliance


DANGER



★ **ONLY USE IN WELL-VENTILATED AREAS**

★ **CARBON MONOXIDE HAZARD**

THIS APPLIANCE CAN PRODUCE CARBON MONOXIDE WHICH HAS NO ODOUR, USING IT IN AN ENCLOSED SPACE (FOR EXAMPLE, CARAVAN, TENT CAR, MOBILE HOME) MAY CAUSE DEATH.

TECHNICAL REQUEST & DATA:

- This appliance shall only be used with a refillable LPG cylinder certified to AS2469.
The proper low-pressure regulator and hose must be used.

NOTICE:

IT MAY BE HAZARDOUS TO FIT OTHER TYPES OF GAS CONTAINERS

- Pressure input: 2.75 Kpa

Burner	Nominal gas consumption (MJ/h)	Nominal injector size (mm)
Boiling (2 off)	5.6	0.675
Oven	3.8	0.575

REQUEST ON REGULATOR & CONNECTION HOSE

- Before you assemble the regulator, please check the gas type and pressure shown on the gas cylinder, and make sure the information on the regulator and cylinder match
- The hose connecting the appliance and gas cylinder is required, and the max. length should not exceed 1.5m
- Do not twist or kink the flexible hose
- After use, turn the gas cylinder valve off, wait for the flame to go out, then turn the appliance control valve(s) off



NOTICE:

Only use the hose assembly as supplied with this appliance for connection to the cylinder- DO NOT USE ADAPTORS

PARTS LIST:

When you open the box of camp stove, you will find two important parts:

- The camp stove body 1pc
- The wire pan-grate 1pc
- The connection hose and regulator 1pc

INSTALLATION:

For the correct assembly of the outback camp stove. Follow the Instructions below:

- 1. Remove the paper between wire pan-grate and stove panel. Put the wire pan-grate in its position. Be sure that the wire ends fit well in the proper holes on the top to prevent the rack from moving.
- 2. Open and close the burner valves: to operate the valves, you must push the valve handle in and turn counter-clockwise to open and clockwise to close
- 3. Be sure that the burner valves are in the “OFF” position before you connect the stove to a gas supply line.

Notice: A qualified installer, service agency or the gas supplier should perform installation. For the correct installation of the stove, please follow the steps indicated below:

- 4. Connect the inlet of the stove with the outlet of the gas regulator. This connection must be made with a specialised hose for LP gas.
- 5. Be sure that the hose is placed correctly and is not being stretched, tied, or bent, also be sure that the hose is not too close to heat sources, especially with the back of the camp stove.
- 6. Check the gas cylinder before connecting it to the appliance, make sure there is enough gas inside. You can weigh the cylinder according to the weight be showed on its body, or take it and check the weight by your feeling, empty cylinder is much lighter than the one filled with gas.
- 7. It is recommended that a manual gas valve is placed between the gas pressure regulator and the inlet of the stove to open or shut off the gas supply. This valve must be in an easily accessible location.
- 8. Be sure that the stove is correctly installed. Check that seals between the appliance and the gas container are in place and in good condition before connecting gas the gas container.

- 9. Check the gas leakage, mix some water with soap, pour some over each connection and look for any bubbles, the bubbles indicate a leak. If there is a leak on your appliance, immediately attempt to turn off the cylinder valve. Remove the appliance to a well-ventilated location away from any ignition source. Check for leaks using soapy water again. Do not try to detect leaks using a flame.

⚠ CAUTION: Following figures are diagrammatical representations of outdoors area. Rectangular areas have been used in these Figures--the same principles apply to any other shaped area

⚠ CAUTION: Any enclosure in which the appliance is used shall comply with one of the following

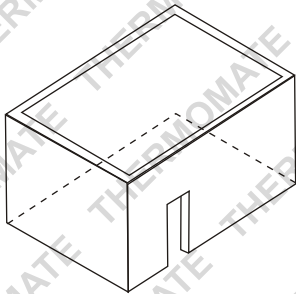 


Figure 1: An enclosure with walls on all sides, but with no overhead cover.

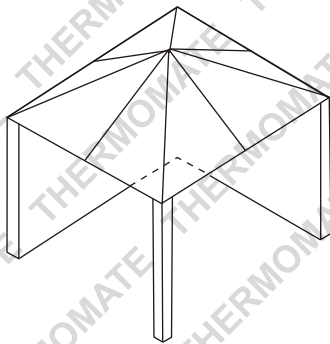
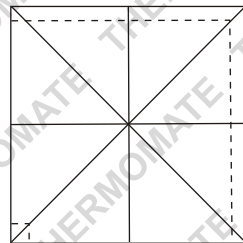 


Figure 2: Within a partial enclosure that includes an overhead cover and no more than two walls

 

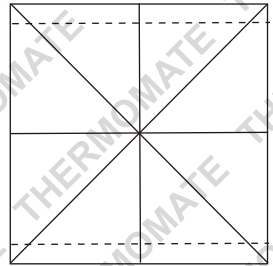 
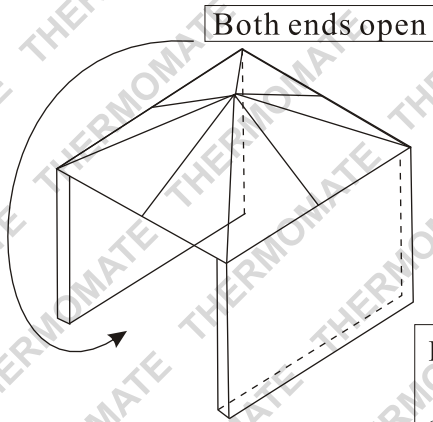 


Figure 3: Within a partial enclosure that includes an overhead cover and no more than two walls


 
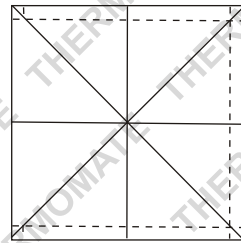 


Figure 4


Open side at least 25% of total wall area

 30 percent or more in total of the remaining wall area is open and unrestricted

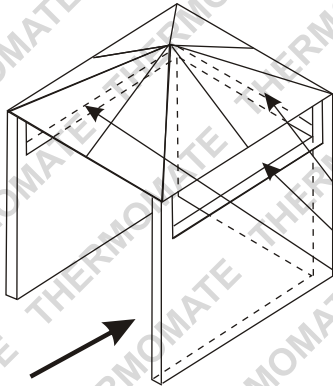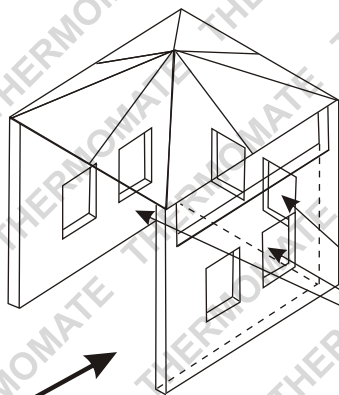

Open side at least
25% of total wall area

 Figure 5

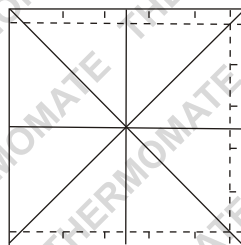

30 percent or more in total
of the remaining wall area
is open and unrestricted



CAUTION:

- ★ In the case of balconies 20% or more of the total wall area shall be and remain open and unrestricted
- ★ Special conditions that must be avoided, e.g. marine environments, and any conditions necessary to ensure optimum performance

HOW TO LIGHT THE BURNER:

TO LIGHT YOUR STOVE IN A SAFE MANNER ACCORDING TO THE
FOLLOWING STEPS
FOR TOP BURNERS

- 1. Push the proper gas valve handle in and turn counter-clockwise to Fully-open position to light the burner.
- 2. Once the burner is lit, you can adjust the intensity of flame desired.

FOR OVEN:

- 1. Light and pull out the bottom oven tray, push the gas valve handle in and turn Counter-clockwise to fully-open position to light the burner
- 2. Keep the handle depressed for 10 seconds.
- 3. If the burner does not stay lit, repeat procedures.
- 4. Before lighting or re-lighting, wait for 5 minutes with all gas shut off.
- 5. To shut off, turn all valves to “OFF” position.

 
 
OPERATION:

Please pay attention to the following issues during operation:

- Before operation, please make sure that the appliance is put in a horizontal position
- Keep 80cm around the item clearance and 1.5m at least away from flammable or explosive materials

⚠ WARNING: Obstructing combustion air opening will cause non-efficient combustion and high level of exhaust gas

- After you have ignited the gas stove and/or oven, you can adjust the control knob, which as the drawing shows, for your ideal flame and temperature you want. (Drawing 1)
- When you could not ignite the flame, or the flame becomes short, or the yellow flame occurs, please check whether there is enough gas in the cylinder.
- After finishing cooking, please wear gloves and take the pan from gas stove or take food from the oven, special attention is required since the appliance is hot
- The gas burner has been set by the producer. Do not try to remove or adjust it.
- The food put on the oven shelf could not exceed 5kg
- Do not move the appliance during operation
- Do not use this appliance if it is leaking, damaged, or does not operate properly
- Do not use this appliance if it has been damaged or seal has been broken.
- Change the gas container in well ventilated area, away from people and from ignition sources.
- Do not put any items on the glass door as the picture shown. (Drawing 2)
- If any burner goes out during operation, turn off gas controls on appliance and turn off cylinder valve. Disconnect then reconnect hose to the bottle, turn on cylinder valve and follow ignition procedures. If burner(s) fail to ignite, turn off gas controls on appliance and turn off cylinder valve then disconnect gas cylinder and return to refuelling station for refill as it may be empty

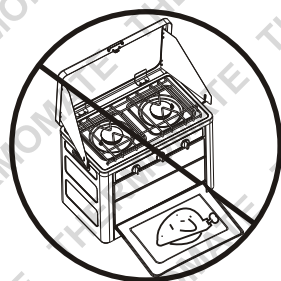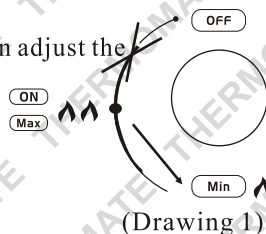

- Turn all knobs to “**OFF**” position, close the regulator to shut off the gas supply. If you smell the gas, check whether the gas leakage happened as point 8 in **INSTALLATION**.

⚠ WARNING: Accessible parts may be very hot, Keep young children away.

.....

MAINTENANCE & STORAGE:

1. Keep stove area clear and free from flammable materials, gasoline and other flammable vapours and liquids.
2. Clean your stove after use, make sure that the ventilation flow is not blocked.
3. Check the flame of the burners, the propane combustion colour is a blue flame, If not, the gas flow may be blocked, clean the burners and check that the orifice of the valve is free from any dirt or from any other things.
4. Clean the stove by using a mild soap and water.

⚠ CAUTION: When cleaning, do not use any solvent or flammable or Combustible Materials!!
Before lighting the stove again, make sure it is completely dry.

5. Please put the appliance in the carry bag provided, the box or other package when you do not use it, and make sure that the children cannot reach it.
6. Store cylinder outdoors in a well ventilated area or in storage area compliant with AS1596

REPAIR

Please return the appliance to seller or call the qualified person for repair and spare parts. The appliance must be serviced by an authorized person .
Do not repair it by yourself

Specially made for Mills Trading International
in PRC to our stringent quality specifications.

Distribution point:

2/5 Stanton Rd,
Seven Hills NSW 2147
Ph. (02) 8667 7874



Some experts believe that the incorrect or prolonged use of almost any product may cause serious injury or death. To help reduce your risk of serious injury or death, refer to the information below. For more information, see www.datastreamserver.com/safety

- Consult all documentation, packaging and product labelling before use. Note that some products feature documentation available online. It is recommended to print and retain the documentation.
- Before each use, check the product for loose/broken/damaged/missing parts, wear or leaks (if applicable). Never use a product with loose/broken/damaged/missing parts, wear or leaks.
- Products must be inspected and serviced (if applicable) by a qualified technician every 6 months. This is based on average residential use by persons of average size and strength, and on a property of average metropolitan size. Use beyond these recommendations may require more frequent inspections/servicing.
- Ensure that all users of the product have completed a suitable industry recognised training course before being allowed access to the product.
- If this product has been purchased in error when considering the information presented here, contact the retailer directly for details of their returns policy, if required.
- The product has been supplied by a general merchandise retailer that may not be familiar with your specific application or description of application. Be sure to attain third-party approval from a qualified specialist for your application before use, regardless of any assurances from the retailer or its representatives.
- This product is not intended for use where fail-safe operation is required. As with any product (for example, automobile, computer, toaster), there is the possibility of technical issues that may require the repair or replacement of parts, or the product itself. If the possibility of such failure and the associated time it may take to rectify could in any way inconvenience the user, business or employee, or financially affect the user, business or employee, then the product is not suitable for your requirements. This product is not intended for use where incorrect operation or a failure of any kind, including but not limited to, a condition requiring product return, replacement, parts replacement or service by a technician may cause financial loss, loss of employee time or an inconvenience requiring compensation.



©2017 Thermomate. All rights reserved. No part of this document, including descriptive content, concepts, ideas, diagrams or images may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying, scanning or recording, or any information storage and retrieval system, without express permission or consent from the publisher.