

**EUROGRILLE®**



# **Electric Grill**

## **User Manual**

[Revision 3.0 October 2018]

---

READ THIS MANUAL CAREFULLY BEFORE USE – FAILURE TO DO SO MAY RESULT IN INJURY, PROPERTY DAMAGE AND MAY VOID WARRANTY. • KEEP THIS MANUAL FOR FUTURE REFERENCE. • Products covered by this manual may vary in appearance, assembly, inclusions, specifications, description and packaging.

---

# Table of Contents

<b>Safety Precautions</b> .....	1
<b>Item Details</b> .....	2
<b>Assembly and Use</b> .....	3
Assembling the Grill Stand .....	3
Using the Grill Indoors.....	3
<b>Tips on Grilling</b> .....	4
Grill Cooking Chart .....	4
<b>Cleaning Instructions</b> .....	5
<b>Proper Disposal</b> .....	5
<b>Specifications</b> .....	5

# Safety Precautions

**When using electrical appliances, basic safety precautions should always be followed, including the following:**

- Read all instructions carefully.
- This appliance may only be connected to the same main voltage as shown on the rating plate.
- To protect against risk of electrical shock, do not immerse or rinse housing, cord or plug in water or other liquid.
- Close supervision is necessary when any appliance is used near children.
- Unplug from outlet when not in use, before putting on or taking off parts and before cleaning.
- Do not touch any moving parts while the appliance is operating.
- If the supply cord is damaged, it must be replaced by the manufacturer or its authorised service agent or a similarly qualified person in order to avoid hazard & damage to the unit.
- The use of attachment or accessories which are not supplied with the appliance are not recommended. This could result in electrical shock or injury or permanent damage to the appliance.
- Do not let the cord hang over the edge of the table or counter or touch hot surfaces.
- Do not use the appliance for other than intended household use.
- Switch off the appliance before changing accessories or approaching parts, which move when in use.
- This appliance is for household use and may be plugged into any AC electrical outlet (ordinary household current). Do not use any other electrical outlet.
- Do not touch hot surfaces. Use handles or knobs.
- When opening the lid cover, hot steam might escape which can cause burns.
- When roasting for an extended time, make sure that the fat from food does not overflow from the drip tray.
- An insulated hot pad protection is recommended when using this grill on surfaces which its heat can cause damage.
- The temperature of accessible surfaces may be high when the appliance is operating.
- The appliance is not intended to be operated by means of an external timer or separate remote-control system.
- The appliance cannot be partially or fully immersed in water for cleaning.
- Only the appropriate connector supplied by the manufacturer must be used.
- The appliance can only be used for indoor, household only.
- This appliance is not intended for use by children or other persons without assistance or supervision if their physical, sensory or mental capabilities prevent them from using it safely. Children should be supervised to ensure that they do not play with the appliance.

# Item Details



- A. High dome lid with sliding door
- B. Cool-touch, easy-grip handles
- C. Grill & griddle rest
- D. Cord-holder clip
- E. Removable oil & grease tray
- F. Removable thermostat control

- G. Convenient cup holder's tray
- H. Cup holders
- I. Sturdy stand pole
- J. Strong, stable leg stand
- K. Non-stick grilling surface
- L. Non-stick griddle surface

# Assembly and Use

## Assembling the Grill Stand

1. Take the stand pole and connect one end of the pole to the insert on the top of the leg stand.
2. Slide the cup-holder tray down onto the pole and set in position.
3. Take the Grill & Griddle rest and insert into the top of the pole.

**CAUTION:** Please attach the thermostat control to the CORD HOLDER CLIP located at the back of the grill base AND cup holder tray before use.

## Using the Grill Indoors

1. When using the grill indoors without the stand, place the grill on a flat and sturdy surface.

**Recommended:**

When placing the grill on surfaces that can sustain damage from prolonged heat, it is recommended that an insulated heat pad be placed beneath the grill.

2. Slide the removable oil & grease tray into the rails under the grill. For roasting, the slide-back, high-dome lid can be used to cover.
3. Always make sure that the thermostat control knob is at the "OFF" position BEFORE inserting it into the temperature control receptacle. Plug into a 230V/50Hz AC outlet.
4. When the thermostat is set to the desired temperature, the indicator light will turn on for preheating. When the indicator light shuts off, the grill is preheated to the desired temperature and is ready for use.

**NOTE:** During the cooking process, the indicator light may cycle on and off to maintain the desired temperature.

5. To protect the non-stick cooking surface, make sure to always use wooden or heat-resistant plastic utensils.

**NOTE:** Do not use a knife to cut food directly on the grill, as this can damage the surface.

6. When roasting food, the slide-back, high-dome lid can be placed over the grill. The loose fit allows steam to escape during cooking.

**CAUTION:** Make sure to always use the cool-touch handle on the lid when removing it.

7. When the cooking cycle is complete, turn the thermostat to the "OFF" position and unplug the power cord from the wall outlet. Remove the food and serve.

**CAUTION:** Always allow the grill to cool down completely before cleaning or removing any parts.

**WARNING:** Do not place the grill on or near a stove, or in a heated oven. Be careful when handling the thermostat control switch. When impacted or dropped onto hard surfaces, the control switch can sustain damage and can cause the temperature control to malfunction while cooking.

Discontinue use of the thermostat control switch if it is damaged in any way.

# Tips on Grilling


## Please read the following tips before grilling:

- Preheat the grilling surface until the temperature indicator light goes “OFF” before grilling.
- For best results, partially pre-cook foods such as ribs or fresh sausages before grilling. If this is not done, it may result in over-cooking the outside of the meat and the inside may be undercooked.
- To maintain a cleaner cooking surface, we recommend brushing a bit of vegetable oil onto the cooking surface before cooking.
- Be sure to use precaution when grilling foods that may contain a small amount of fat, such as beef, chicken, sausages, and pork. The grease in them can splatter.
- For kebabs, turn and brush marinades frequently onto the food until the food is fully cooked to your satisfaction. Leaving spaces between foods when grilling could also result in more even cooking.
- A continuous use of the grill for 30 – 45 minutes is the maximum time allowed for the grill to remain warm.
- When using the cover while cooking, be careful when sliding back the cover. Hot steam may have gathered inside the oven and can be rapidly released.

## Grill Cooking Chart

This cooking chart is for reference only.


FOOD TEMPERATURE	APPROX. TIME	FOOD TEMPERATURE	APPROX. TIME
Beef steaks ½ thick 200°C	10 - 15 minutes	Sausages 175°C	5 – 10 minutes
Chicken breasts °C	20 - 30 minutes	Fish filets 165°C	10 – 15 minutes
Pork chops 165°C	15 - 20 minutes	Bacon 165°C	10 – 12 minutes
Hamburgers 190°C	10 – 15 minutes	Vegetables 165°C	10 – 15 minutes
Hot dogs 165°C	10 – 15 minutes	Pancakes 165°C	10 – 15 minutes

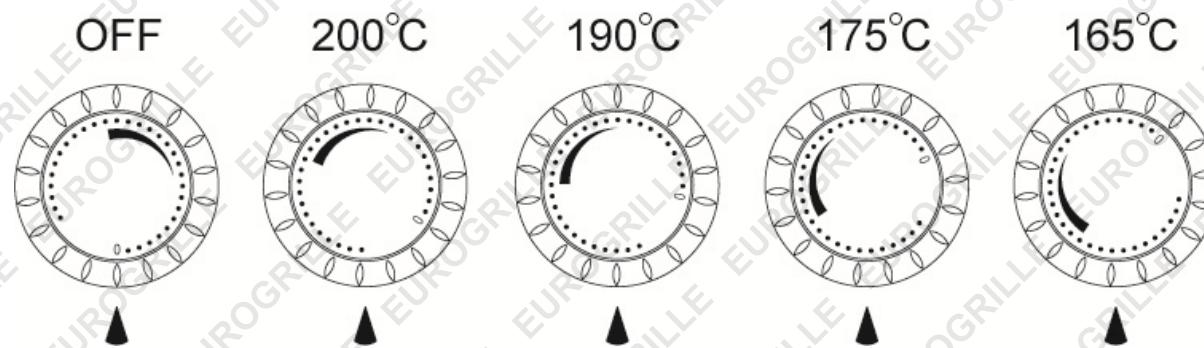

# Cleaning Instructions

1. Disconnect the plug from the wall outlet and then remove the power cord connector together with the power cord from the appliance.
2. Allows the unit to completely cool down.
3. Wipe off the grill pan and lid with warm, soapy water using a sponge or dishcloth.
4. Wipe off thoroughly to remove soap residue.
5. Always unplug the grill and allow it to cool before starting to clean it.
6. Do not use abrasive cleaners or scouring pads.
7. Empty the oil drip tray after each use to avoid the oil drip tray from overflowing.
8. Be careful when cleaning up the removable oil drip tray. Always wait for oil to cool down before disposing the oil.
9. Do not put the temperature control or power cord in the dishwasher.
10. Never immerse the cord, plug or temperature selector in any liquid.
11. Do not soak the grill in water.
12. When using the grill, DO NOT touch or handle the oil drip tray. It can be very HOT during the cooking process and can cause burns.
13. The connector must be removed first before the appliance is to be cleaned. The appliance inlet must be dried first before the appliance is to be used again.

## Proper Disposal

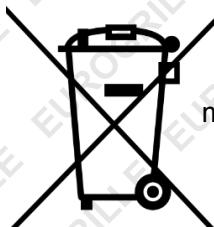

Do not dispose this product in the usual household garbage at the end of its life cycle. Hand it over at a collection point for the recycling of electrical and electronic appliances. The symbol on the product, the instructions for use or the packaging will have information about the methods for disposal.

The materials are recyclable as mentioned in its marking. By recycling, material recycling or other forms of re-utilization of old appliances, you are making an important contribution in protecting our environment.

Please inquire at your community administration for the authorised disposal location.

## Specifications

Rated Voltage	220-240V~
Rated Frequency	50Hz
Rated Power	2000W



**Some experts believe that the incorrect or prolonged use of almost any product may cause serious injury or death. To help reduce your risk of serious injury or death, refer to the information below. For more information, see [www.datastreamserver.com/safety](http://www.datastreamserver.com/safety)**

- Consult all documentation, packaging and product labelling before use. Note that some products feature documentation available online. It is recommended to print and retain the documentation.
- Before each use, check the product for loose/broken/damaged/missing parts, wear or leaks (if applicable). Never use a product with loose/broken/damaged/missing parts, wear or leaks.
- Products must be inspected and serviced (if applicable) by a qualified technician every 6 months. This is based on average residential use by persons of average size and strength, and on a property of average metropolitan size. Use beyond these recommendations may require more frequent inspections/servicing.
- Ensure that all users of the product have completed a suitable industry recognised training course before being allowed access to the product.
- The product has been supplied by a general merchandise retailer that may not be familiar with your specific application or description of application. Be sure to attain third-party approval from a qualified specialist for your application before use, regardless of any assurances from the retailer or its representatives.
- This product is not intended for use where fail-safe operation is required. As with any product (for example, automobile, computer, toaster), there is the possibility of technical issues that may require the repair or replacement of parts, or the product itself. If the possibility of such failure and the associated time it may take to rectify could in any way inconvenience the user, business or employee, or financially affect the user, business or employee, then the product is not suitable for your requirements. This product is not intended for use where incorrect operation or a failure of any kind, including but not limited to, a condition requiring product return, replacement, parts replacement or service by a technician may cause financial loss, loss of employee time or an inconvenience requiring compensation.
- If this product has been purchased in error when considering the information presented here, contact the retailer directly for details of their returns policy, if required.



©2018 EuroGrille. All rights reserved. No part of this document, including descriptive content, concepts, ideas, diagrams or images may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying, scanning or recording, or any information storage and retrieval system, without express permission or consent from the publisher.