

EUROGRILLE®



EG-40E Electric Grill

User Manual

[Revision 2.0 October 2018]

READ THIS MANUAL CAREFULLY BEFORE USE – FAILURE TO DO SO MAY RESULT IN INJURY, PROPERTY DAMAGE AND MAY VOID WARRANTY. • KEEP THIS MANUAL FOR FUTURE REFERENCE. • Products covered by this manual may vary in appearance, assembly, inclusions, specifications, description and packaging.

Safety

- **Electric shock/electrocution hazard** - NEVER immerse the electrical cord or thermostat in water.
- Unplug the appliance from the electrical supply while not in use, when assembling or changing accessories, and before cleaning.
- Switch off power at the appliance and the mains outlet before unplugging the power cord. Do not unplug the cord by pulling on it.
- Do not use the appliance with a damaged cord or plug or if the unit has been dropped, or is otherwise damaged. Contact an authorised service centre if this is the case.
- Ensure the appliance is used on a flat, level and stable surface. Do NOT operate on sloping, wet, unstable or slippery surfaces.
- Keep the appliance thermostat away from water. Do not connect the thermostat to the electrical supply if it is wet.
- Disconnect the appliance from the electrical supply and allow it to cool completely before cleaning, moving or storing it.
- Do not use the grill for more than 40 minutes continuously or damage to the unit may result. Allow the appliance to cool sufficiently before using again.
- Some surface of the appliance may be extremely during and after use. Do NOT touch hot surfaces – always use handles and wear suitable heat-protective gloves etc.
- Take due care when opening the appliance during or after use as steam / hot air escaping may cause injury.
- The appliance is for domestic use only.
- Do not use the appliance outdoors. Covered outdoor areas such as patios etc that have protected electrical sockets may be suitable.
- Do not cover the appliance when in use.
- Do not leave the appliance unattended while in use.
- Supervision is necessary when using the appliance near children.
- Do not allow children to operate or play with the appliance.
- Lift/carry the unit by holding it with both hands. Do not carry the unit by the power cord.
- Do not use the appliance for any purpose other than it is designed for.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge. All users should have adequate training in safely operating the product or be under supervision of a person responsible for their safety

Before First Use

- Unpack the appliance.
- Check that the voltage indicated on the rating label corresponds to the mains voltage.
- Wash the grill plate and cover in warm water and mild detergent. Rinse and dry.
- Before use, ensure the thermostat is in the "lowest / OFF" position.

Table of Contents

| | |
|---------------------------------------|----------|
| Safety | 2 |
| Before First Use | 2 |
| Parts Identification | 4 |
| Assembly | 5 |
| Operation | 6 |
| Temperature Setting | 6 |
| Cooking Guide | 7 |
| Cleaning and Maintenance | 7 |
| Specifications | 8 |

Parts Identification



| No. | Name | No. | Name |
|-----|----------------------------------|-----|---------------------------------------|
| 1 | Grill Plate (includes drip tray) | 5 | Grill Cover |
| 2 | Base | 6 | Accessory Tray |
| 3 | Stand Tube | 7 | Thermostat (includes electrical cord) |
| 4 | Grill Body | | |

Assembly

1. Place the base (A) on a solid and level surface, then insert the narrow end of the stand tube (B) into the base. Push the stand tube firmly into the base so that there is no "wobble".



2. Slide the accessory tray (C) over the stand tube. It is in the correct position when the screw in the stand tube engages with the groove in the tray (D).
3. Place the grill body (E) in position on top of the stand tube – ensure that the drip tray hole is lined up with the accessory tray handle. Push the grill body firmly onto the stand tube so there is no "wobble".



4. Insert the grill plate (F) into the grill body – tilt it slightly so the electrical socket (G) enters the hole in the grill body, then gently lower it. Ensure that the locating pins under the grill plate go into the recesses in the grill body and the drip tray (H) is aligned with the slot in the grill body.



5. Hold the grill cover (I) in a near vertical position so the hinge tabs align with the slots in the cover brackets (J), then gently lower the cover until the tabs and brackets "click" into position. Ensure that the cover can be opened and closed smoothly – if not, it has not been inserted correctly.

Operation



Disconnect the appliance from the electrical supply and allow it to cool before cleaning, moving or storing it. • Do not use the grill for more than 40 minutes continuously or damage to the unit may result. Allow the appliance to cool sufficiently before using again. • Some surface of the appliance may be extremely during and after use. Do NOT touch hot surfaces – always use handles and wear suitable heat-protective gloves etc. • Take due care when opening the appliance during or after use as steam / hot air escaping may cause injury.

The appliance uses a "thermostat" control for adjusting the grill plate temperature. To use the appliance:

Insert the thermostat (K) into the grill plate electrical connector (G). Ensure that the alignment pin (L) on the end of the thermostat enters the hole in the grill plate and that the "groove" under the thermostat slides over the "tongue" in the grill body (M).

Rotate the dial (N) on the thermostat with reference to the pointer (O) to set the grill plate temperature, as required.


Connect the appliance electrical cord to a standard 240VAC power outlet and switch ON – the appliance begins heating. Keep the cover down to speed up the heating process



When the grill plate is heating, the "arrow" on the thermostat illuminates. When the required temperature is reached, the lamp switches off.

Temperature Setting

The approximate thermostat control temperature settings are below. When the grill plate is heating, the "arrow" on the thermostat illuminates.

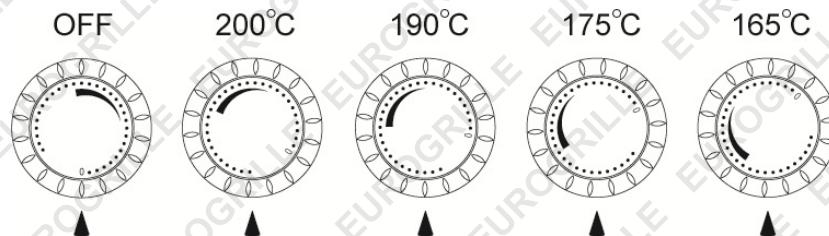

Cooking Guide

The following tips should be followed:

- Pre-heat the grill to the required temperature before grilling.
- Brush or spray a little vegetable or olive oil onto the grill plate before cooking.
- Leave adequate space between foods to produce more even cooking.
- Marinades – turn and brush marinades frequently onto foods.
- Foods containing fat, such as beef, sausages, pork etc may splatter during cooking.
- Some foods, such as ribs or thick sausages should be partially cooked before grilling to help prevent over-cooking the outside and under-cooking the inside of the food.

| Food | Temperature | Duration (Minutes) |
|--|-------------|--------------------|
| Beef steak (approximately ½" / 12mm thick) | 200°C | 10 to 15 |
| Chicken breast | 180°C | 20 to 30 |
| Pork chops | 165°C | 15 to 20 |
| Hamburger patties | 190°C | 10 to 15 |
| Hot dogs | 165°C | 10 to 15 |
| Sausages | 175°C | 5 to 10 |
| Fish fillet | 165°C | 10 to 15 |
| Bacon | 165°C | 10 to 12 |
| Vegetables | 165°C | 10 to 15 |
| Pancakes | 165°C | 10 to 15 |

Cleaning and Maintenance

- Before cleaning, switch OFF, then unplug the thermostat from the appliance.
- Allow the appliance to cool completely before cleaning.
- Clean the body and cover of the appliance with a damp sponge and allow to dry.
- Clean the grill plate using warm water and a mild detergent and a sponge or dishcloth – wipe away all soap residues thoroughly and dry after cleaning. Do NOT immerse the grill plate in water.
- Do not use metal brushes or abrasives for cleaning the food dehydrator; it may damage the surface.
- Regularly drain and clean the drip tray.

Specifications

| | |
|------------------------|---------------------|
| Model | EG-40E |
| Power | 2000W |
| Input Voltage | 240V |
| Cooking area | 40x40cm |
| Cooking Surface | Vitreous Enamel |
| Body | Aluminium |
| Cord Length | 1.4m |
| Power Plug | Australian Standard |

Note: Assembly required



Some experts believe the incorrect or prolonged use of almost any product could cause serious injury or death. For information that may reduce your risk of serious injury or death, consult the points below and additionally, the information available at www.datastreamserver.com/safety

| | |
|--|--|
| <ul style="list-style-type: none">• Consult all documentation, packaging and product labelling before use. Note that some products feature online documentation which should be printed and kept with the product.• Check product for loose / broken / damaged / missing parts, wear or leaks (if applicable) before each use. Never use a product with loose / broken / damaged / missing parts, wear or leaks (if applicable).• Products must be inspected and serviced (if applicable) by a qualified specialist every 6 months assuming average residential use by a person of average weight and strength, above average technical aptitude, on a property matching average metropolitan specification. Intended use outside these guidelines could indicate the product is not suitable for intended use or may require more regular inspection or servicing.• Ensure all possible users of the product have completed an industry recognized training course before being given access to the product. | <ul style="list-style-type: none">• The product has been supplied by a general merchandise retailer that may not be familiar with your specific application or your description of the application. Be sure to attain third-party approval for your application from a qualified specialist before use regardless of prior assurances by the retailer or its representatives.• This product is not intended for use where fail-safe operation is required. As with any product (take an automobile, aircraft, computer or ball point pen for example), there is always a small chance of technical issues that needs to be repaired or may require replacement of the product or a part. If the possibility of such failure and the associated time it takes to rectify could in any situation inconvenience the user, business or employee then the product is not suitable for your requirements. This product is not for use where incorrect operation or a failure of any kind, including but not limited to a condition requiring product return, replacement, service by a technician or replacement of parts could cause a financial loss, loss of employee time or an inconvenience requiring compensation.• If this item has been purchased in error after considering the points above, simply contact the retailer directly for details of their returns policy, if required. |
|--|--|



©2018 EuroGrille. All rights reserved. No part of this document, including descriptive content, concepts, ideas, diagrams or images may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying, scanning or recording, or any information storage and retrieval system, without express permission or consent from the publisher.