

E U R O C H E F®



Popcorn Machine

User Manual

[Revision 2.0 May 2017]

READ THIS MANUAL CAREFULLY BEFORE USE – FAILURE TO DO SO MAY RESULT IN INJURY, PROPERTY DAMAGE AND MAY VOID WARRANTY. • KEEP THIS MANUAL FOR FUTURE REFERENCE. • Products covered by this manual may vary in appearance, assembly, inclusions, specifications, description and packaging.

Table of Contents

Safety	1
Set-Up	2
Operation	3
Cleaning	3
Recipes	4


Safety

Basic safety precautions should always be followed when using electrical appliances, including the following:

- NEVER immerse the appliance, kettle, electrical cord or plug in water or other liquids.
- Do NOT operate any appliance with a damaged electrical cord or plug, or if the appliance malfunctions or has been damaged in any manner. Contact customer service.
- NEVER use near water.
- Do NOT use outdoors.
- Disconnect the appliance from the electrical supply when not in use and during cleaning.
- Do NOT use abrasive sponge, cloths, harsh detergents or chemicals to clean the appliance.
- NEVER leave appliance unattended while in use.
- Do NOT clean any parts of this appliance in a dishwasher.
- Keep out of reach of children.
- Children should be supervised while in proximity of the appliance to ensure that they do not play with it.
- Keep the appliance door closed during operation.
- The manufacturer does not recommend the use of accessories or attachments not supplied with the original product.
- Do NOT leave the kettle motor running once popping has ceased.
- Do NOT move the appliance while it is in use or still hot.
- Do NOT use the appliance for other than its intended use.
- Check the kettle for presence of foreign objects prior to use.
- Ensure the kettle is properly attached to the hanging brackets before operating and that the motor cable is plugged into the kettle. Do NOT force the kettle in or out of the brackets as this may cause gears to become misaligned and appliance will not operate properly.
- The marked electrical rating of extension cords should be equal to or greater than the electrical rating of the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of appliance by a person responsible for their safety.
- The appliance is not intended to be operated by means of external timer or separate remote control system

Set-Up

1. Open the door to the appliance body (1), and insert the kettle (2) onto the hanging brackets (3), ensuring that the driven gear (4) on top of the kettle engages with the drive gear of the main unit.
2. Ensure that the electrical cord (5) inside the main unit is connected to the socket on the underside of the kettle.
3. Insert the handle (6) through the hole on the right-hand side of the main unit and screw it into the kettle – the handle uses a left-hand thread, which means you need to rotate it left (anti-clockwise) to screw it in.

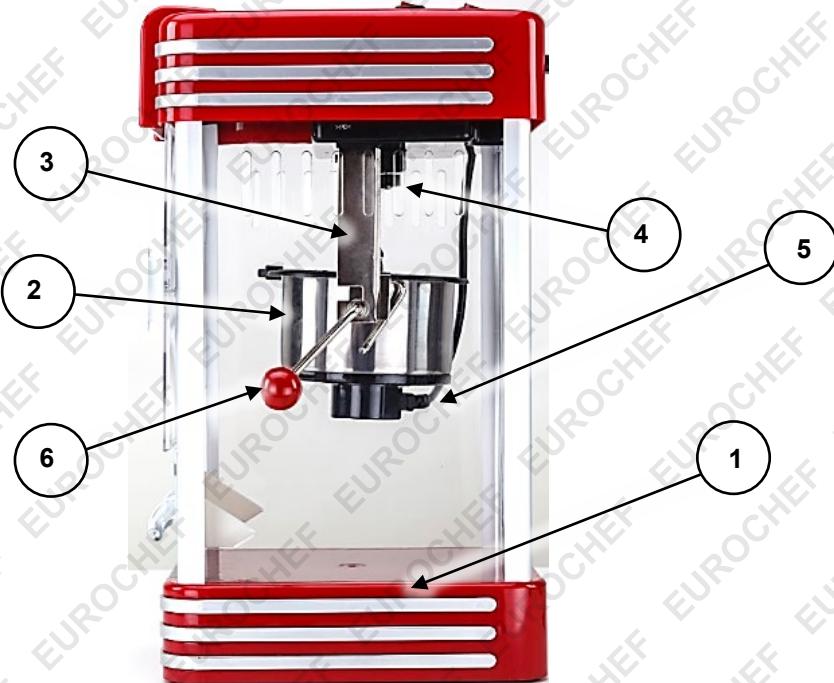

Operation

Before first use, clean the inside of the unit by wiping with a moist, non-abrasive sponge, towel or cloth and then wipe with a non-abrasive dry towel. Wipe down the inside of the kettle and be sure it is properly placed in the brackets before starting.

1. Place the appliance on a flat and level surface near an electrical outlet before starting (it is acceptable to use an extension cord if required). Make sure the electrical cord is away from any water source and that the appliance main switch (1) is in the OFF ("O") position.
2. Connect the appliance to the electrical supply.
3. Place the appliance main switch in the ON ("I") position.
4. Allow the appliance to run for 3 to 5 minutes to heat the kettle.
5. Place the appliance main switch in the OFF ("O") position.
6. Add 2/3 tablespoon of cooking oil to the kettle using the supplied measuring spoon. For best popping results, it is suggested to use light vegetable oil.
7. Add 2/3 cup corn kernels to the kettle using the supplied measuring spoon.
8. Switch the appliance ON and close the door. As the kettle heats, popping occurs – the popcorn will eventually fall from the kettle and into the bottom of the appliance body.
9. Once the kernels have stopped popping, tip the Kettle using the handle to release any remaining popcorn.
10. Switch the appliance OFF and disconnect it from the electrical supply.



NOTE: If your appliance begins to smoke during cooking, it may be due to grease build up. To reduce smoking, make sure that you clean the inside of the kettle after each use.

Cleaning

1. Ensure the appliance is switched OFF and disconnected from the electrical supply before cleaning.
2. Disconnect the kettle motor plug inside the Main Unit.
3. Use a slightly damp, non-abrasive sponge, towel or cloth to wipe down the inside and outside of the appliance body, then wipe dry with a non-abrasive towel or cloth.
4. Unscrew the handle (rotate right) from the kettle.
5. Unhook the kettle from the hanging brackets and remove the kettle, then:
 - a. Fill the kettle 2/3 full with hot, soapy water.
 - b. Let the kettle sit for 15 to 20 minutes to cut the grease (time may vary – use your judgment depending on the amount of cleaning necessary).
 - c. Empty the kettle. If necessary, use the scrubber side of a cleaning sponge to scrub the inside of the kettle.
 - d. Rinse the kettle inside carefully, then dry.
 - e. Wipe the outside of the kettle with damp cloth, then dry.

CAUTION: Never immerse the kettle in any liquid. Never place any parts in the dishwasher. Always wash by hand.

Recipes

Enjoy popcorn in a variety of ways:

- Butter and salt.
- Add a pinch of sugar and salt for a sweeter flavour.
- Flavoured popcorn – add seasoning from any gourmet popcorn seasoning kit.

Parmesan Popcorn

- 3.8L of popped corn
- 1 tsp. garlic powder
- 3 green onions, finely chopped
- ½ tsp. cracked pepper
- 1 tsp. sea salt
- 1 cup parmesan cheese, grated (more or less to taste)
- 3 tbsps. olive oil, heated

1. Pop the corn kernels.
2. Combine garlic powder, green onions, cracked pepper, sea salt and parmesan cheese. Set aside.
3. In a large mixing bowl, drizzle hot olive oil over popcorn. Toss around until well-coated.
4. Slowly add in dry ingredients while continuously stirring the popcorn until well-coated.
5. You may also shake the dry ingredients over popcorn in a large paper or muslin bag.

Traditional Popcorn Balls

- ½ cup popcorn
- ½ cup corn syrup
- ½ cup granulated sugar
- ½ tsp. salt
- 1 stick of butter, softened

1. Pop the corn kernels.
2. Mix corn syrup, sugar and salt together in pot and dissolve over medium heat for about 3 minutes.
3. Add popcorn to pot, stirring and tossing consistently.
4. Remove from heat. Use softened butter to form balls while popcorn mixture is still warm.
5. Wrap individual balls in plastic wrap, tie and store at room temperature.

Chunky Monkey

- 3.8L popcorn
- 350g milk chocolate chips
- 350g peanut butter morsels
- 120g banana chips, broken into small pieces
- 300g peanuts

1. Pop the corn kernels.
2. Melt chocolate chips and peanut butter morsels over stove, as packaging recommends.
3. Line cookie sheet with wax paper.
4. Toss together popcorn and banana chips. Spread popcorn and banana chip mixture evenly over cookie sheet.
5. Drizzle melted chocolate and peanut butter mixture over popcorn and banana chips.
6. Sprinkle peanuts over chocolate and peanut butter mixture.
7. Allow to cool.
8. When chocolate and peanut butter has hardened, break up the Chunky Monkey into pieces.
9. Can be stored in plastic freezer bags.

Popcorn Peppermint Bark

- 3.8L popped corn
- 350g milk or dark chocolate chips
- 1 ¼ cup peppermint sticks, crushed

1. Pop the corn kernels.
2. Melt chocolate chips over stove, as packaging recommends.
3. Line cookie sheet with wax paper. Spread popcorn evenly over cookie sheet.
4. Drizzle melted chocolate over popcorn.
5. Sprinkle crushed peppermints over chocolate. Allow to cool.
6. When chocolate has hardened, break-up popcorn peppermint bark into pieces.
7. Can be stored in plastic freezer bags.



Some experts believe the incorrect or prolonged use of almost any product could cause serious injury or death. For information that may reduce your risk of serious injury or death, consult the points below and additionally, the information available at www.datastreamserver.com/safety

- Consult all documentation, packaging and product labelling before use. Note that some products feature online documentation which should be printed and kept with the product.
- Check product for loose / broken / damaged / missing parts, wear or leaks (if applicable) before each use. Never use a product with loose / broken / damaged / missing parts, wear or leaks (if applicable).
- Products must be inspected and serviced (if applicable) by a qualified specialist every 6 months assuming average residential use by a person of average weight and strength, above average technical aptitude, on a property matching average metropolitan specification. Intended use outside these guidelines could indicate the product is not suitable for intended use or may require more regular inspection or servicing.
- Ensure all possible users of the product have completed an industry recognized training course before being given access to the product.
- The product has been supplied by a general merchandise retailer that may not be familiar with your specific application or your description of the application. Be sure to attain third-party approval for your application from a qualified specialist before use regardless of prior assurances by the retailer or its representatives.
- This product is not intended for use where fail-safe operation is required. As with any product (take an automobile, aircraft, computer or ball point pen for example), there is always a small chance of technical issues that needs to be repaired or may require replacement of the product or a part. If the possibility of such failure and the associated time it takes to rectify could in any situation inconvenience the user, business or employee then the product is not suitable for your requirements. This product is not for use where incorrect operation or a failure of any kind, including but not limited to a condition requiring product return, replacement, service by a technician or replacement of parts could cause a financial loss, loss of employee time or an inconvenience requiring compensation.
- If this item has been purchased in error after considering the points above, simply contact the retailer directly for details of their returns policy, if required.



©2017 Eurochef. All rights reserved. No part of this document, including descriptive content, concepts, ideas, diagrams or images may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying, scanning or recording, or any information storage and retrieval system, without express permission or consent from the publisher.