



## Assembly:

1. Use a Phillips screwdriver to remove the screw from the plastic handle. Slide metal tube into the plastic handle, align the holes, reinstall and tighten the screw. (see illustration 1).
2. Locate the other metal handle tube and slip the end with one hole over the plastic handle connector on the finished handle assembly. Make sure the locking pin protrudes through the hole in the side of the lower tube (see illustration 2).
3. Remove the screw from the black painted yoke, and insert the metal handle tube into the yoke. Reinstall the screw, and tighten (see illustration 3).

## Operation:

1. **Start the machine:** Step on the handle release pedal and lower the handle to activate the brushes.
2. **Cleaning hard floors:** Place the micro-fibre pads under the brushes, or place the pads on the floor and set the machine on them. The weight of the machine will hold the pads in place. Spray household surface cleaner on a small area of the floor and immediately run the machine over the area. When one side of the pads becomes dirty, flip the pads over and use the opposite side. When both sides of the pad are dirty, they can be cleaned and rinsed in water or cleaned in a washing machine.
3. **Polishing wooden floors:** Attach the felt discs to the brushes using the plastic retaining clips. "Snap" the retaining clip through the centre of each felt disc and onto the shaft to securely retain the disc.
4. **Removing spots and stains from carpets:** Spray a small section of the carpet with a household "spot and stain" remover. Using the brushes, agitate the spot or stain until it is removed.
5. **Cleaning high traffic zones and large spots and stains on carpets:** Attach the felt discs to the brushes using the plastic retaining clips. "Snap" the retaining clip through the centre of each felt disc and onto the shaft to securely retain the disc. Slip the carpet bonnet over each felt disc. Spray the carpet lightly with a household "spot and stain" remover. Run the machine over the area until the stains are removed. Rinse or clean the carpet bonnets as needed.

## Parts Identification and Assembly:

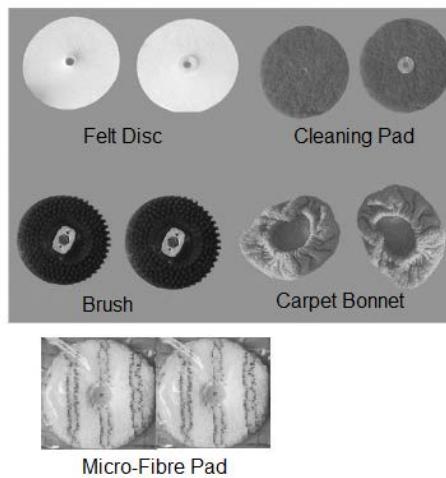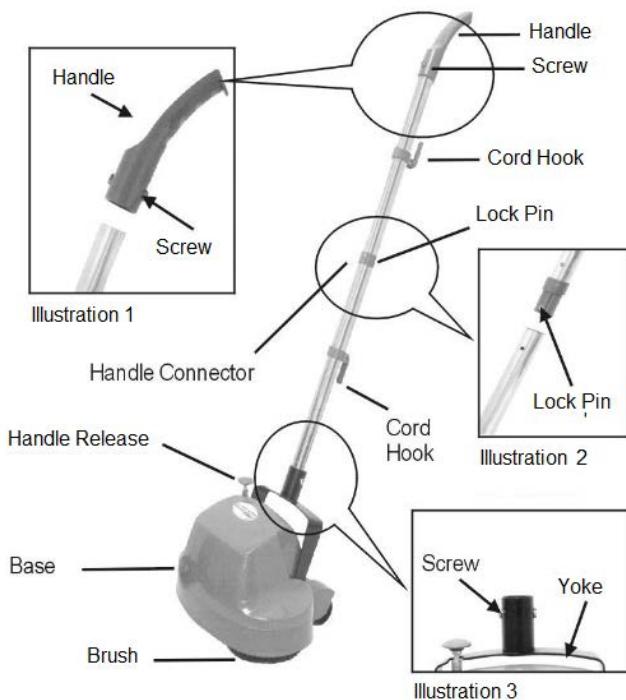

**WARNING:** To reduce the risk of fire, electrical shock, or injury:

- Never carry the machine by the electrical cord, or pull on the cord to disconnect the machine from the electrical supply. Instead, grasp the plug, and pull to disconnect.
- Keep the electrical cord away from hot surfaces. Do not pull the cord around sharp edges or corners. Do not close doors on the cord.
- Do not touch moving parts.
- Do not use outdoors.
- Do not leave the appliance unattended, when plugged in. Disconnect the appliance from the electrical supply when not in use, and before servicing.
- Do not handle the plug or appliance with wet hands.
- Follow all label, and marking instructions.
- Do not allow the product to be used by children. Close attention is needed when product is used near children.
- Do not use if the electrical cord or plug is damaged. If the appliance is malfunctioning, has been dropped, damaged, or exposed to water, take it to an authorized service centre.
- Do not use with, or near flammable liquids.
- Do not store appliance near hot ovens or heating appliances.
- Use only as described in this manual. Use only manufacturer's recommended attachments. Do not use for any purpose other than described in this user's guide.
- Make sure the appliance is connected to the correct voltage. The correct voltage is listed on the rating label.
- Do not attempt to repair the product. If repairs are required, take it to an authorised service centre.
- Do not submerge the appliance in water, or other liquid. Do not place, or store the appliance where it can fall, or be pulled into a tub, sink, or other vessel containing liquid. Do not wash the machine.
- If using the machine to polish floor wax. Make sure the wax is completely dry before polishing.
- This machine is equipped with a thermal limiting device to protect the motor from overheating. If the machine suddenly stops operating, disconnect it from the electrical supply and allow it to cool. If the appliance is not disconnected from the electrical supply, it could start unexpectedly when the motor cools.

## Technical Information:

Voltage: 240VAC / 50Hz

Motor: 180W / 400RPM



**Some experts believe that the incorrect or prolonged use of almost any product may cause serious injury or death. To help reduce your risk of serious injury or death, refer to the information below. For more information, see [www.datastreamserver.com/safety](http://www.datastreamserver.com/safety)**

- Consult all documentation, packaging and product labelling before use. Note that some products feature documentation available online. It is recommended to print and retain the documentation.
- Before each use, check the product for loose/broken/damaged/missing parts, wear or leaks (if applicable). Never use a product with loose/broken/damaged/missing parts, wear or leaks.
- Products must be inspected and serviced (if applicable) by a qualified technician every 6 months. This is based on average residential use by persons of average size and strength, and on a property of average metropolitan size. Use beyond these recommendations may require more frequent inspections/servicing.
- Ensure that all users of the product have completed a suitable industry recognised training course before being allowed access to the product.
- If this product has been purchased in error when considering the information presented here, contact the retailer directly for details of their returns policy, if required.
- The product has been supplied by a general merchandise retailer that may not be familiar with your specific application or description of application. Be sure to attain third-party approval from a qualified specialist for your application before use, regardless of any assurances from the retailer or its representatives.
- This product is not intended for use where fail-safe operation is required. As with any product (for example, automobile, computer, toaster), there is the possibility of technical issues that may require the repair or replacement of parts, or the product itself. If the possibility of such failure and the associated time it may take to rectify could in any way inconvenience the user, business or employee, or financially affect the user, business or employee, then the product is not suitable for your requirements. This product is not intended for use where incorrect operation or a failure of any kind, including but not limited to, a condition requiring product return, replacement, parts replacement or service by a technician may cause financial loss, loss of employee time or an inconvenience requiring compensation.



©2018 Auch. All rights reserved. No part of this document, including descriptive content, concepts, ideas, diagrams or images may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying, scanning or recording, or any information storage and retrieval system, without express permission or consent from the publisher.