




Office Massage Chair Assembly Guide

Parts List


No.	Image	Name	Qty.
A		Wheel	5
B		Base	1
C		Gas Strut	1
* D		Strut Cover	1
E		Height Adjustment Lever	1
F		M6x20mm Screw	4
G		M6x25mm Screw	8
H		Arm Rest	2
I		Seat Base	1
J		Back Support	1
K		Cap	8

* Applies to some non-chrome finish models.


Design and appearance may vary to those shown in this guide.

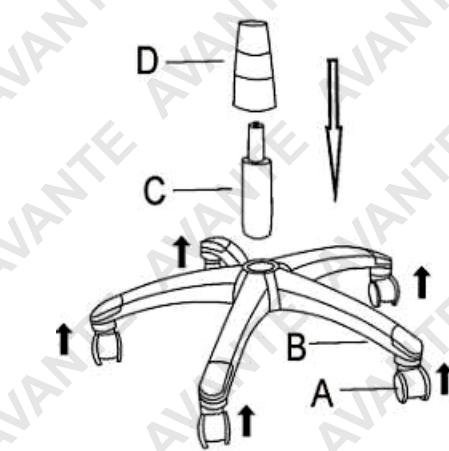

1: Attach wheels (A) to frame (B), then insert gas strut (C) into base. Some non-chrome models may include a strut cover (D) – if included, place it over the strut.

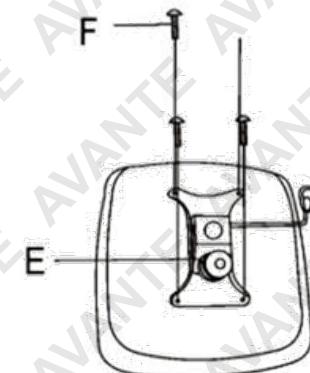

2: Attach height adjustment lever (E) to the seat base (I) using 4 M6x20mm screws (F). The end of the lever should face toward the front of the chair.

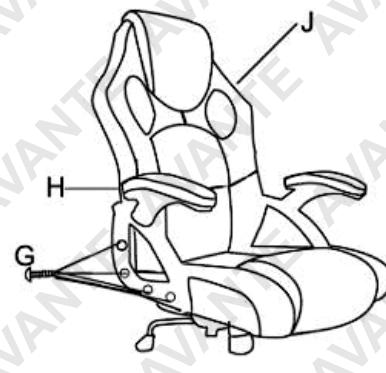

3: Attach each arm rest (H) to the seat base (I) using 2 M6x25mm screws (G), then attach the back support (J) to each arm rest using 2 M6x25mm screws (G).



4: Push the seat assembly firmly on to the top of the gas strut.



5: Insert a cap (K) into each arm rest screw hole.




The chair is now ready for use.

Massage Operation

The massage functions are available when the massage control unit is properly connected and power is available.

Set-Up

1. Connect the chair back and seat cushion cables together – "white" connectors (A).
2. Connect the massage control unit cable to the chair cable – large "DIN" style connectors (B).
3. Connect the power supply output cable to the chair power cable – "black" connectors (C).
4. Plug the power supply into a 240VAC mains socket and switch power on (D).

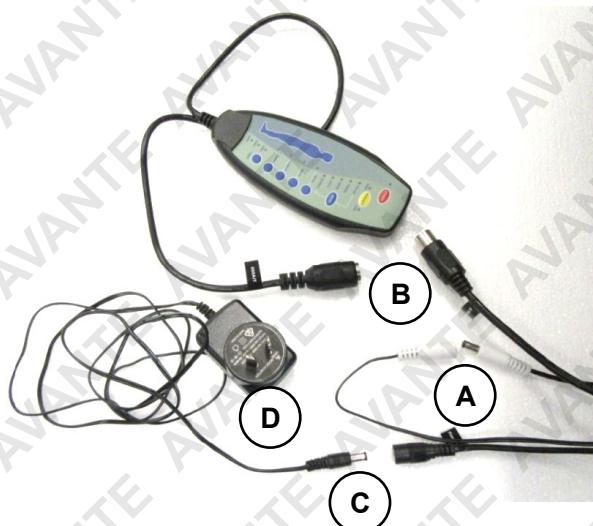

Using the Massage Control

Once the massage control unit is connected and mains power is available, press **POWER** on the massage control unit to activate massage operation. Use the massage controls as desired. When finished, press **POWER** again to deactivate massage operation.

When a massage function is active, the lamp next to the function illuminates. Massaging is timer controlled to prevent it being left on accidentally.



Control	Function
POWER	Press to activate / deactivate massage operation.
INTENSITY	Press to toggle between "HIGH" and "LOW" settings. When "HIGH", the strength of the massaging functions is increased.
MODE	Press to switch between various massage vibration patterns. The pattern will apply to all currently selected massage areas: <ul style="list-style-type: none">• PULSE – Vibration applies in a gradual build-up then fade out fashion.• PRESS – Vibration applies in a gradual build-up then stop fashion.• WAVE – Vibration applies in a stepped fashion between selected massage areas. For example, if all areas are selected, neck, then back, then lumbar etc.• AUTO – Vibration applies in a continuous fashion.• NORMAL – Vibration applies in a variable fashion.
NECK	Press to activate / deactivate the upper back area massaging.
BACK	Press to activate / deactivate the central back area massaging.
LUMBAR	Press to activate / deactivate the lower back area massaging.
THIGH	Press to activate / deactivate the upper leg area massaging.
TIMER	Press to switch between various massage timers. All massage functions stop automatically when the timer finishes. Press to switch between 15 minute, 30 minute and 60 minute timers.



Some experts believe that the incorrect or prolonged use of almost any product may cause serious injury or death. To help reduce your risk of serious injury or death, refer to the information below. For more information, see www.datastreamserver.com/safety

- Consult all documentation, packaging and product labelling before use. Note that some products feature documentation available online. It is recommended to print and retain the documentation.
- Before each use, check the product for loose/broken/damaged/missing parts, wear or leaks (if applicable). Never use a product with loose/broken/damaged/missing parts, wear or leaks.
- Products must be inspected and serviced (if applicable) by a qualified technician every 6 months. This is based on average residential use by persons of average size and strength, and on a property of average metropolitan size. Use beyond these recommendations may require more frequent inspections/servicing.
- Ensure that all users of the product have completed a suitable industry recognised training course before being allowed access to the product.
- The product has been supplied by a general merchandise retailer that may not be familiar with your specific application or description of application. Be sure to attain third-party approval from a qualified specialist for your application before use, regardless of any assurances from the retailer or its representatives.
- This product is not intended for use where fail-safe operation is required. As with any product (for example, automobile, computer, toaster), there is the possibility of technical issues that may require the repair or replacement of parts, or the product itself. If the possibility of such failure and the associated time it may take to rectify could in any way inconvenience the user, business or employee, or financially affect the user, business or employee, then the product is not suitable for your requirements. This product is not intended for use where incorrect operation or a failure of any kind, including but not limited to, a condition requiring product return, replacement, parts replacement or service by a technician may cause financial loss, loss of employee time or an inconvenience requiring compensation.
- If this product has been purchased in error when considering the information presented here, contact the retailer directly for details of their returns policy, if required.



©2018 Avante. All rights reserved. No part of this document, including descriptive content, concepts, ideas, diagrams or images may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying, scanning or recording, or any information storage and retrieval system, without express permission or consent from the publisher.