

Shelf-Tek

STORAGE SYSTEM

22 BIN STORAGE RACK



ADULT ASSEMBLY REQUIRED DUE TO THE PRESENCE OF SMALL PARTS, SHARP POINTS AND EDGES

2 persons required for assembly. If you have any questions regarding assembly or if you are missing parts, contact customer service.

READ THIS MANUAL CAREFULLY BEFORE USE – FAILURE TO DO SO MAY RESULT IN INJURY, PROPERTY DAMAGE AND MAY VOID WARRANTY. • KEEP THIS MANUAL FOR FUTURE REFERENCE. • Products covered by this manual may vary in appearance, assembly, inclusions, specifications, description and packaging.

Parts List

Read and understand all instructions and verify that all parts listed have been supplied before assembly.



A - Frame Leg (4)




B - Double Pin Long Rack Support (6)




C - Single Pin Long Rack Support (6)




D - Double Pin Short Rack Support (6)

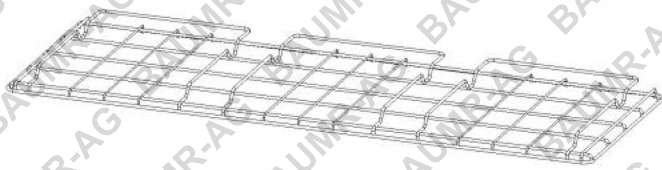


E - Extra Large Bin Rack (1)

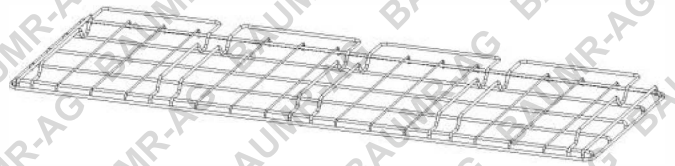


F - Large Bin Rack (1)

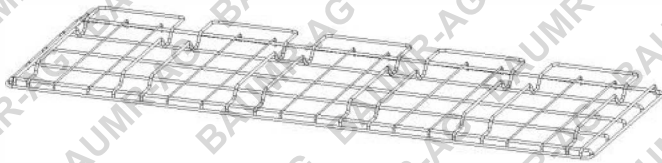


G - Medium Bin Rack (3)

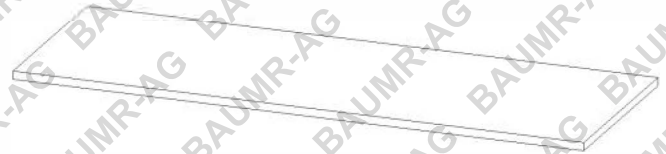


H - Top Panel (1)

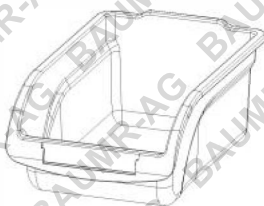

I - Large Bin (4)

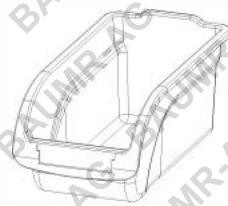

J - Medium Bin (15)

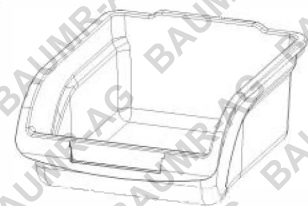

K - Extra Large Bin (3)



L - Locking Caster (2)



M - Caster (2)



N - Leg Cap (4)

Tools required (not included): Rubber mallet

Safety Instructions - maximum capacity = 68kg per shelf (evenly distributed), 408kg total for unit


The unit should be placed on a level surface. Failure to do so can result in poor product performance or create a possible safety hazard. Do not use this unit for anything other than the manufactures intend purpose. **DO NOT STAND ON ANY PART OF THE UNIT, OR USE IT AS A LADDER.** Evenly distribute the weight on each level and always keep the heavier loads on the bottom. **DO NOT OVERLOAD.** Use care when working with metal parts.

General Instructions

Assembly is done with the rivets of the beams and braces fitting into the slots of the post. A rubber mallet may be used on the beams and braces to seat the rivets properly. A hammer can also be used, providing one uses a cloth or a block of wood between the hammer head and the parts to prevent damage. Tap gently and be sure the rivets are straight and fully engaged.

Step1

Install the frame cap to the top of each frame leg

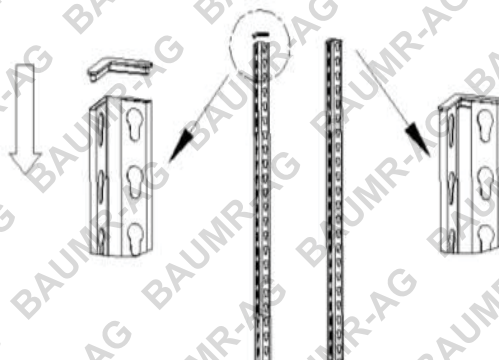

Step2

Double Pin Long
Rack Support

Single Pin Long
Rack Support


Single Pin Long
Rack Support

Double Pin Long
Rack Support


Single Pin Long
Rack Support

Double Pin Long
Rack Support

Insert the pins in the rack supports into the slots in the frame legs and tap them down until they are fully seated.

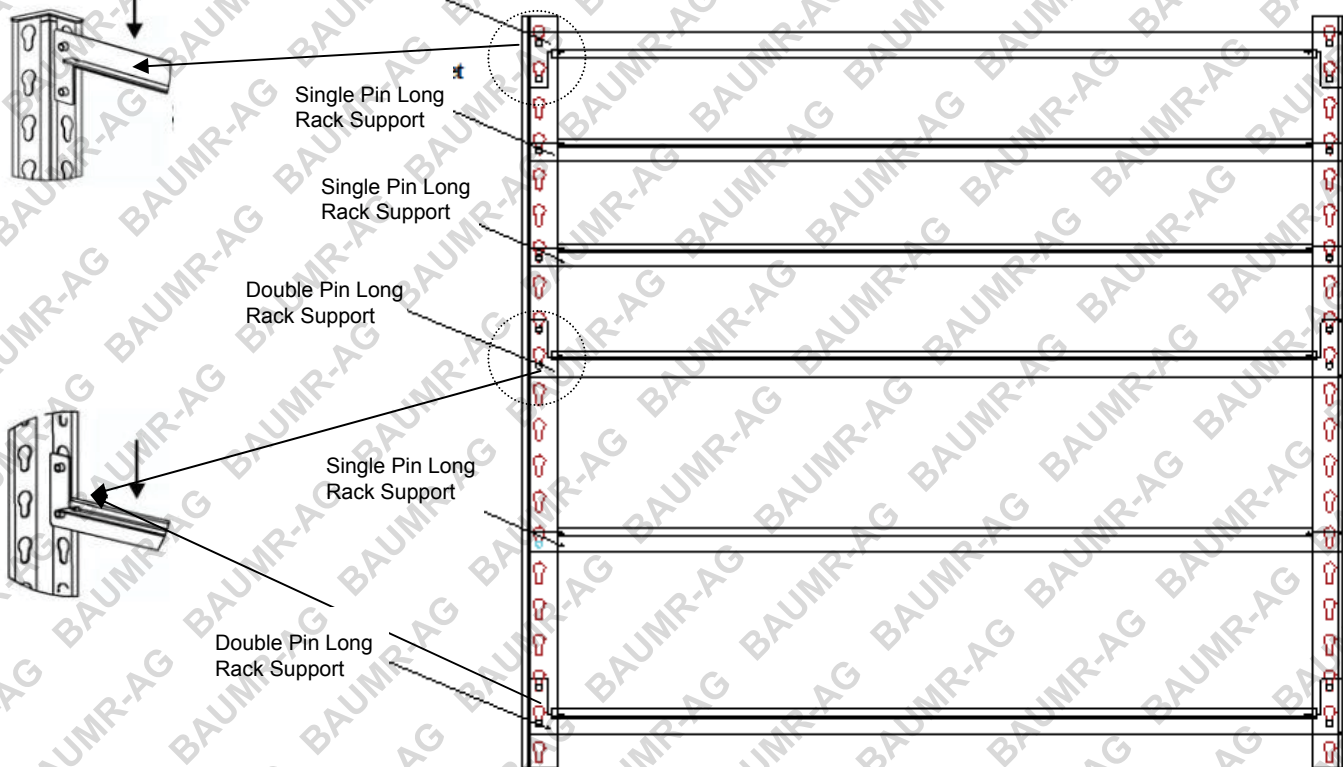

Step3

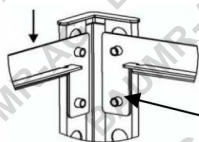

Insert the pins in the rack supports into the slots in the frame legs and tap them down until they are fully seated.


G - Medium Bin Rack (3)

F - Large Bin Rack (1)

E - Extra Large Bin Rack (1)

D - Double Pin Short Rack Support (6)

Place the racks so the bins can be pulled out from the front of the racking.

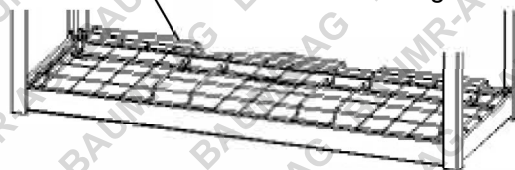

Step4

J - Medium Bin (15)

I - Large Bin (4)

K - Extra Large Bin (3)

1 Hole


2 Holes

1 Hole

4 Holes

3 Holes

Place bins as shown.

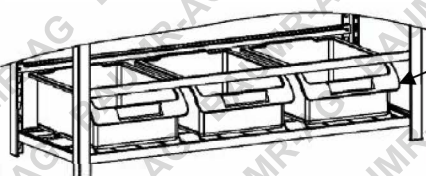

Step5

H - Top Panel (1)

Insert top panel into the recess in the upper support as shown.



Step6


The casters attach to the nuts at the end of the frame legs.

L - Lockable Caster

M - Caster

L - Lockable Caster

M - Caster

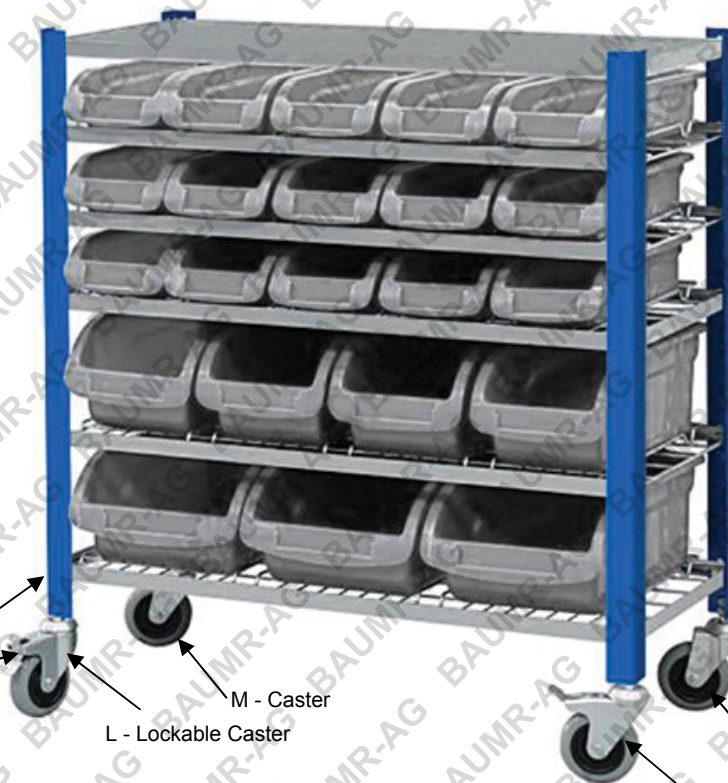



Some experts believe the incorrect or prolonged use of almost any product could cause serious injury or death. For information that may reduce your risk of serious injury or death consult the points below and additionally, the information available at www.datastreamserver.com/safety

- Consult all documentation, packaging and product labelling before use. Note that some products feature online documentation which should be printed and kept with the product.
- Check product for loose / broken / damaged / missing parts, wear or leaks (if applicable) before each use. Never use a product with loose / broken / damaged / missing parts, wear or leaks (if applicable).
- Products must be inspected and serviced (if applicable) by a qualified specialist every 6 months assuming average residential use by a person of average weight and strength, above average technical aptitude, on a property matching average metropolitan specification. Intended use outside these guidelines could indicate the product is not suitable for intended use or may require more regular inspection or servicing.
- Ensure all possible users of the product have completed an industry recognised training course before being given access to the product.

- The product has been supplied by a general merchandise retailer that may not be familiar with your specific application or your description of the application. Be sure to attain third party approval for your application from a qualified specialist before use regardless of prior assurances by the retailer or its representatives.
- This product is not intended for use where fail-safe operation is required. As with any product (take an automobile, aircraft, computer or ball point pen for example) there is always a small chance of a technical issue that needs to be repaired or may require replacement of the product or a part. If the possibility of such failure and the associated time it takes to rectify could in any situation inconvenience the user, business or employee or could financially affect the user, business or employee then the product is not suitable for your requirements. This product is not for use where incorrect operation or a failure of any kind, including but not limited to a condition requiring product return, replacement, service by a technician or replacement of parts could cause a financial loss, loss of employee time or an inconvenience requiring compensation.
- If this item has been purchased in error considering the points above simply contact the retailer directly for details of their returns policies if required.

Bäumr-AG®
.com.au