

Troubleshooting

Review the following before contacting customer service.

Problem	Possible Cause	What to do
Timer knob does not turn	<ul style="list-style-type: none">• Is the power connected?	<ul style="list-style-type: none">• Connect the power cord and switch electrical supply ON.
Drum does not turn	<ul style="list-style-type: none">• Is the door closed?• Is the power connected?	<ul style="list-style-type: none">• Close the door.• Connect the power cord and switch electrical supply ON.
Air is not hot	<ul style="list-style-type: none">• Is the timer incorrectly set to air dry?	<ul style="list-style-type: none">• Set the timer to hot air.
The laundry is not thoroughly dried	<ul style="list-style-type: none">• Are the filters clear?• Is there too much laundry in the dryer?• Have items been added whilst the dryer is in operation?• Has the laundry become twisted whilst drying?• Has the dryer been placed in a poorly ventilated area?• Is the drying time sufficient?	<ul style="list-style-type: none">• Clean the filters.• Reduce the amount in the dryer.• Re-dry the items again.• Untwist the items and re-dry.• Place the dryer in a well-ventilated area.• Increase drying time, use full heat
Dryer does not start	<ul style="list-style-type: none">• Is the power connected?• Is the door closed?• Is the timer in the OFF position?	<ul style="list-style-type: none">• Connect the power cord and switch electrical supply ON.• Close the door.• Set the timer.

Specifications

Model:	CSF343W	Drying Capacity:	4.0Kg
Voltage/Frequency:	220-240V~ /50Hz	Rated Input:	1200W/700W
Net Weight:	20Kg	Dimensions(mm):	595x438x671

NOTE: Consistent with our continuing product development policy, improvements may have been made which render the contents of this package slightly different to that shown.

carson



USE AND CARE GUIDE
MODEL NO. : CSF343W

Safety

When using electrical appliances, in order to reduce the risk of fire, electric shock, and/or injury to persons, basic safety precautions should always be followed.

Read all instructions carefully, even if you are quite familiar with the appliance.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Young children should be supervised to ensure that they do not play with the appliance.
- INDOOR USE ONLY - this appliance is not intended for outdoor use.
- Do not place naked flame sources, such as candles, on the appliance.
- Do not locate the appliance or electrical cord near heat sources such as radiators, heaters, air ducts or direct sunlight.
- Do not block any of the ventilation openings. Ensure that vents are not covered or obstructed in any way, etc.
- Do not run the electrical cord under floor coverings. Ensure that it is not a trip hazard.
- To disconnect the appliance, switch the appliance OFF, switch OFF power at the electrical outlet, then remove the plug from the power outlet.
- Do not misuse the electrical cord. Never carry or move the appliance by the cord, or pull the cord to disconnect it from the electrical outlet. Always use the plug to disconnect.
- Do not operate the appliance if it has a damaged cord or plug; if the appliance malfunctions; or has been dropped or damaged in any way.
- Do not attempt to repair, disassemble or modify this appliance. The warranty will be void if not serviced or repaired by a authorised person.
- Do not excessively bend, stretch, twist or bind the electrical cord or place heavy objects on it.
- This appliance is to be serviced by a qualified persons only. There are no user-serviceable parts inside.
- Do not use an extension cord with this appliance.
- Do not install the appliance in a close fitting cabinet.
Do not overload the appliance.
- The door window may be hot after a drying cycle. Ensure children are kept away from the appliance.
- If the appliance is not wall mounted, place it on a flat, firm and level surface. If required, use the adjustable front feet to assist in leveling the appliance. Do not place the appliance on any soft material such as foam or plastic.
- Do not use flammable or combustible materials such as gas, petrol, alcohol or lacquer in the appliance.
- After switching the appliance OFF, wait at least 2 minutes before switching ON again.
- Remove all transport packaging prior to using the appliance.
- If the electrical cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.



**WARNING: Risk of fire/
flammable materials**

Oil-affected items can ignite spontaneously, especially when exposed to heat sources such as in a clothes dryer. The items become warm, causing an oxidation reaction in the oil. Oxidation creates heat. If the heat cannot escape, the items can become hot enough to catch fire.

- If it is unavoidable that fabrics that are contaminated with flammable substances (for example, oils, solvents, petrol etc) be placed in the appliance, they should first be washed in hot water with extra detergent - this will reduce, but not eliminate, the hazard.
- Do not dry unwashed items.
- Fabric softeners, or similar products, should be used in accordance with the manufacturer's instructions.
- Items such as foam rubber (latex), plastic, rubber backed articles, and clothes or pillows containing foam rubber should not be dried in a clothes dryer.
- The final part of the drying cycle does not use heat (cool down cycle) to ensure that the items are at a comfortable handling temperature when removed.
- **WARNING:** Never stop the appliance before the end of the drying cycle. If it is necessary to do so, remove all items quickly and spread them out so that the heat dissipates.
- Remove all objects from pockets such as paper, coins etc.
- The appliance should not be used if industrial chemicals have been used for cleaning the clothes.
- The lint filters must be cleaned after every use.
- Do not allow lint to accumulate around the appliance.
- Adequate ventilation must be provided when the appliance is in use.
- Ensure that carpet or other soft floor coverings does not obstruct any ventilation openings in the base of the appliance.
- Exhausted air from the appliance must not be discharged into a flue that is used for exhausting fumes from appliances burning gas or other fuels.



Correct disposal of this product:



This marking indicates that this product should not be disposed of with household waste. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources.

Save These Instructions

Components

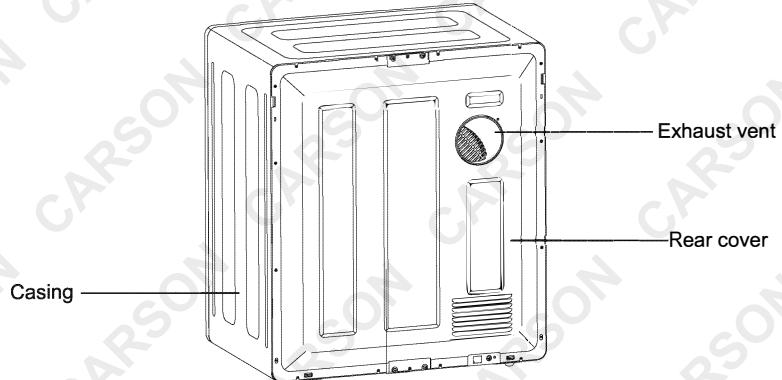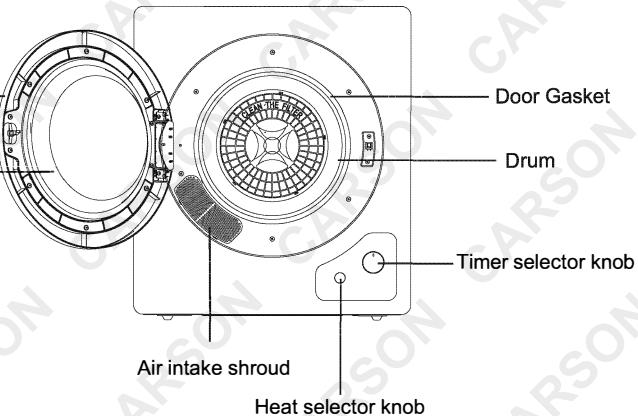

Operation


Electrical Requirements

The unit is required to be plugged into a three pin 240VAC mains electrical socket that is reliably grounded. Plug the electrical cord into the socket.



Loading the Dryer

It is recommended that items are placed into the dryer one at a time. This ensures they are not tangled, which results in uneven drying. Ensure that all items are fully inside the drum.

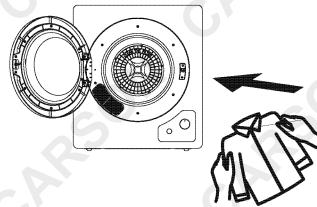

Unsuitable Fabrics

Prior to loading the dryer, check that items do not have the following symbols anywhere on them. If they do, do not tumble dry these items.



Dry flat



Dry in the shade




Do not tumble dry



Hang to dry




Drip dry

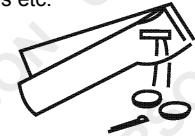

- Check the items to be dried do not have combustible materials or foreign objects within them; for example, paper and coins etc.

- Dryer heat may permanently set stains. Ensure you check prior to drying that stains are removed.
- Separate dark and light colored items as you would do when washing.
- For best results, load the dryer with similar fabrics. Place small delicate items in a mesh bag. Do not overload the dryer.
- The maximum drum capacity is 4.0kg of dry clothing. Do not overload. The appliance is intended only for drying textile material washed in water.
- Push the **Start** button on the door to activate the dryer.

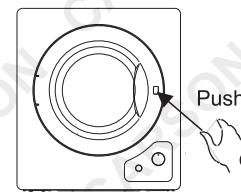

Drying Time Reference

Drying times can be affected by many factors, such as material, bulkiness, how full the dryer is etc. The reference is a guide only.

Load	Approximate Drying Time	
	Full Heat	Half Heat
1kg	30min	55min
2kg	60min	110min
3kg		120min
4kg		200min

Control Panel

Heat Selector button

Select **Full heat** for items that are particularly bulky or large quantities.


Select **Half heat** for delicate items as silk, nylon, linen etc.



Heat Selector Knob

Drying Program Selector

There are five drying functions: Cool, Anti-Wrinkle / Warm, Hot and Air Dry.

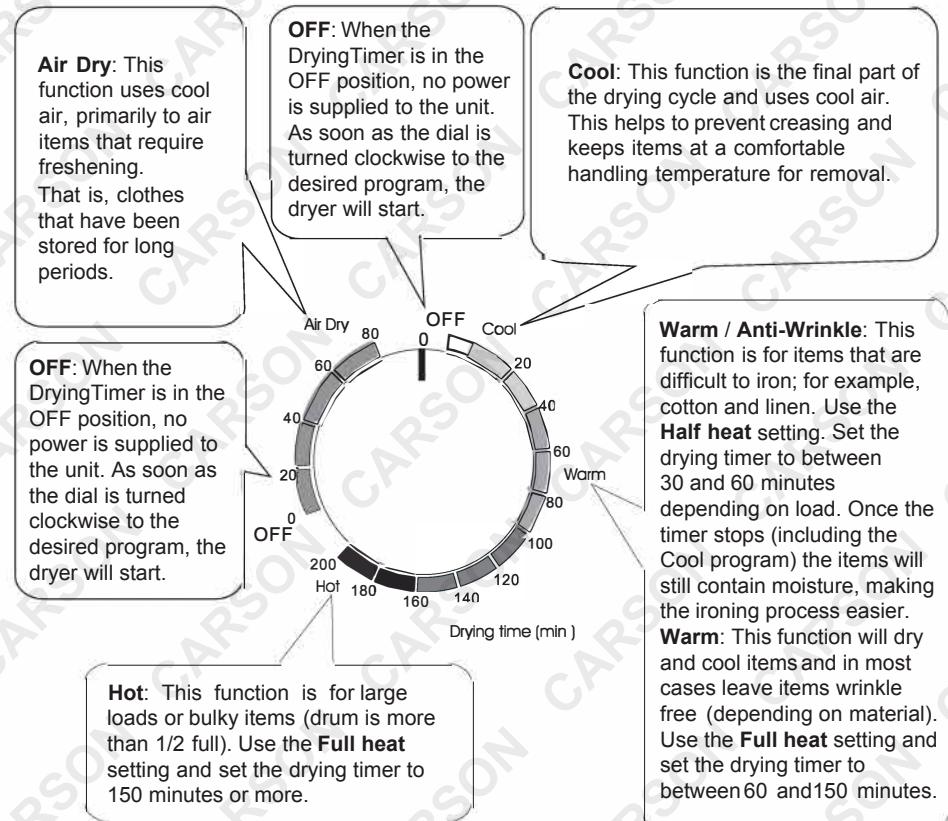

NOTE: The setting used for the Australian energy testing data is 160 minutes at **Full heat**, according to AS/NZS 2442. This is recommended for a normal load at rated capacity.

Drying Tips

Delicate items should be placed into a nylon net bag prior to drying. Drying under-wire bras is not recommended.




To minimize the risk of fire in a tumble dryer, the following should be observed:

Items that have been contaminated with flammable substances (for example, oil) constitute a fire hazard and should not be placed in a tumble dryer.


Oil-affected items can ignite spontaneously, especially when exposed to heat sources such as in a tumble dryer. The items become warm, causing an oxidation reaction in the oil. Oxidation creates heat. If the heat cannot escape, the items can become hot enough to catch fire.




To ensure you get the most out of the Anti-wrinkle function, do not overload the dryer and remove the dried items from the dryer immediately and hang on coat hangers. Iron the items if desired.

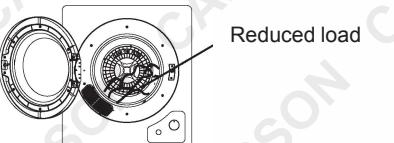

Do not add items into the dryer whilst it is in operation.

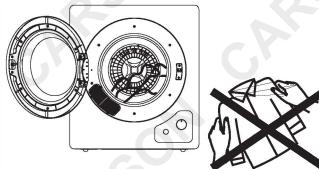

If drying large items, such as blankets, it is recommended that from time to time you open the dryer, remove and shake out the item, then place it back in the dryer and close the door. This will ensure even drying.

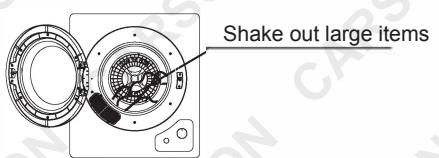


Installation

This dryer can not be used upside down

Place the dryer in a dry well ventilated area. It should be positioned away from heat and direct sunlight.

If the dryer is not wall mounted, it must be placed on firm horizontal ground. Do not place the dryer on carpet as this will block the intake. There should be at least 10cm between the dryer and the walls.

If the dryer is rack mounted. A secure bracket is required to ensure stability and prevent vibration. At least 10cm between the dryer and walls is required (The bracket is not included).

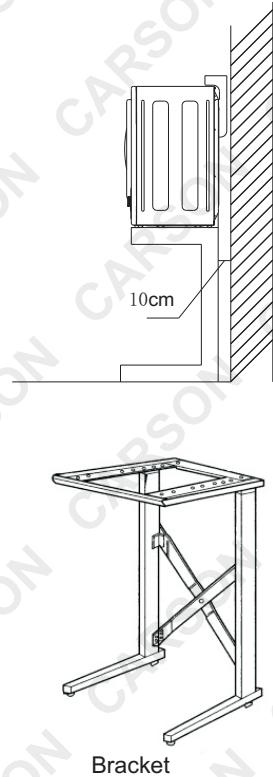



Wall Mounting

1. Fix the 2 mounting brackets to the wall using suitable fasteners (not supplied). The brackets must be mounted at the same height (that is, they must be level), and the distance between the brackets holes must be 554mm.

CAUTION: The wall must be of sufficient strength to support the dryer weight. The dryer weighs in excess of 20kg - 2 or more persons are required to wall mount it.




Wall Mounting Kit Includes			
Description	Hanging brackets		2
Plastic Spacers			2
Exhaust connector			1
25mm Long Screws			4

2. Insert the plastic supports into the holes in the rear panel, and rotate them 90° to lock them in position.

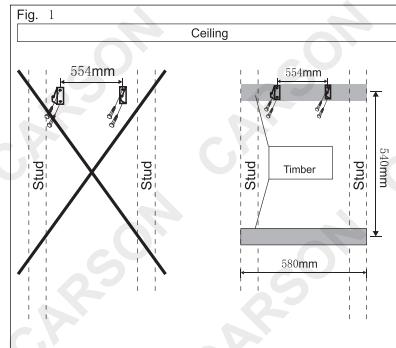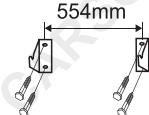

3. Install the exhaust flue to the exhaust vent on the rear panel and adjust the direction of the flue as required.

4. Carefully raise the dryer and position it so the bracket hooks enter the slots in the rear of the dryer. Gently lower the dryer so it is supported by the brackets and the plastic supports are resting against the wall.

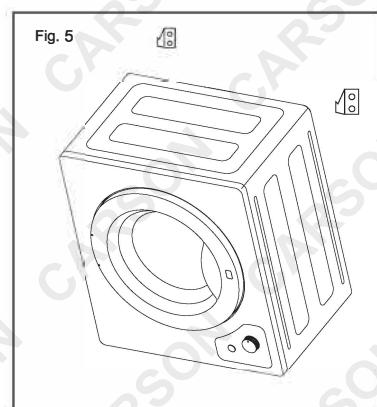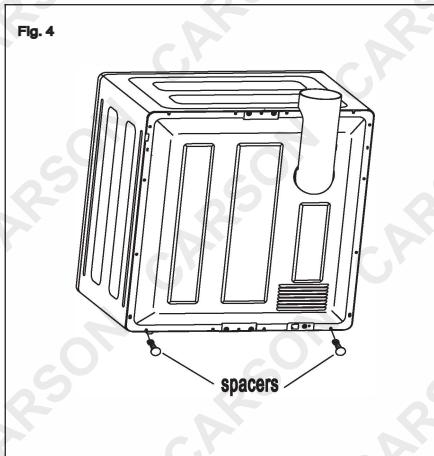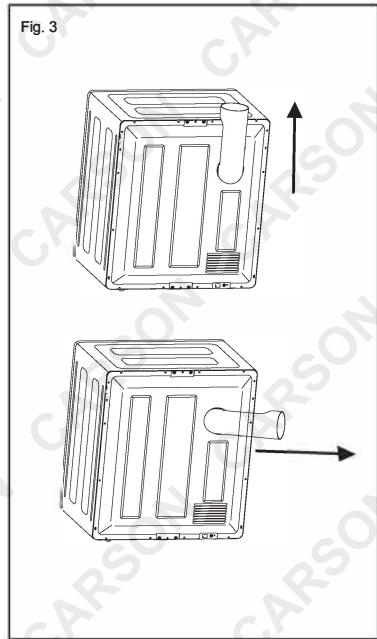

Maintenance

Cleaning the Lint Filter

Disconnect the electrical cord prior to any cleaning. The lint filter must be in place whenever drying. It must be cleaned before each use.

1. Removing the filters

Grasp the exhaust vent shroud firmly then pull to remove it. The filter has 3 parts: exhaust vent shroud, lint filter and exhaust filter (Figure1).

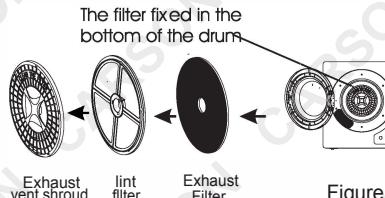


Figure 1

2. Cleaning the filter


Separate exhaust vent shroud, lint filter and exhaust filter. Gently clean the lint filter and exhaust filter with a soft brush or vacuum cleaner. Do not damage the filters (Figure 2)



Figure 2

3. Re-installing the filter

After cleaning, assemble in the sequence of exhaust filter - lint filter- exhaust vent shroud. Align the recesses in the center of the shroud with the mounting in the drum and press it on firmly - it should "click" into place (Figure 3).

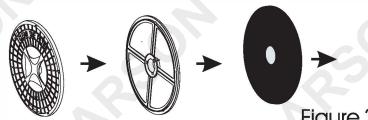


Note: The filter fixed in the bottom of the drum should also be cleaned with a soft brush.

Cleaning the Air Intake Filter

The filter should be cleaned once a month.


Remove by pulling outwards holding the upper and lower ends of the air intake shroud. Remove the filter inside the shroud and clean it with a soft brush. Reassemble and install as before.

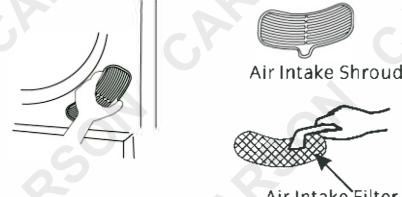

Slightly push upwards with your thumb until the latch hook disconnects, then remove.

Cleaning the Dryer

Do not wash directly with water. Do not use flammable substances (solvents, petrol etc). Do not use any type of spray cleaner when cleaning the interior. If the drum becomes stained, clean it with a damp cloth. Remove any residue before drying the next load. Clean the cabinet with mild soap and water. Do not use harsh or abrasive cleaners, this could damage the dryer.

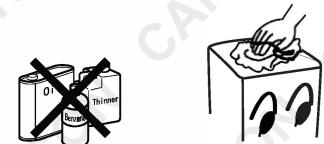

WARNING: Clean the lint filter after **EVERY** use.

