

Specifications

Dimension	595×530×840(mm)	Weight of product	32Kg
Rated input power	1700W	Rated volume of dryer	6.0Kg (Dry clothes)
Rated voltage	220-240V~	Rated frequency	50Hz

carson



USE AND CARE GUIDE
MODEL NO. : CSF262W

Contents

Safety	- - - - -	2
Part Name	- - - - -	5
Installation before use	- - - - -	5
Simple Installation	- - - - -	8
Operation Explanation	- - - - -	9
1.Preparing before drying	- - - - -	9
2.Check filter	- - - - -	9
3.Put clothes into the dryer	- - - - -	9
4.Close the door	- - - - -	10
5.Instruction on control panel	- - - - -	10
6.End of Program	- - - - -	12
7.Take out the Plug	- - - - -	12
8.Clear filter, cabinet and inner tub	- - - - -	12
Other Functions Description	- - - - -	13
Trouble Solution	- - - - -	13
Notice	- - - - -	15
1. Read before use	- - - - -	15
2. When using	- - - - -	16
Instruction of Upside Down	- - - - -	17
Specifications	- - - - -	back cover

Blank page

Safety

When using electrical appliances, in order to reduce the risk of fire, electric shock, and/or injury to persons, basic safety precautions should always be followed.

Read all instructions carefully, even if you are quite familiar with the appliance.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Young children should be supervised to ensure that they do not play with the appliance.
- INDOOR USE ONLY - this appliance is not intended for outdoor use.
- Do not place naked flame sources, such as candles, on the appliance.
- Do not locate the appliance or electrical cord near heat sources such as radiators, heaters, air ducts or direct sunlight.
- Do not block any of the ventilation openings. Ensure that vents are not covered or obstructed in any way, etc.
- Do not run the electrical cord under floor coverings. Ensure that it is not a trip hazard.
- To disconnect the appliance, switch the appliance OFF, switch OFF power at the electrical outlet, then remove the plug from the power outlet.
- Do not misuse the electrical cord. Never carry or move the appliance by the cord, or pull the cord to disconnect it from the electrical outlet. Always use the plug to disconnect.
- Do not operate the appliance if it has a damaged cord or plug; if the appliance malfunctions; or has been dropped or damaged in any way.



**WARNING: Risk of fire/
flammable materials**

Oil-affected items can ignite spontaneously, especially when exposed to heat sources such as in a clothes dryer. The items become warm, causing an oxidation reaction in the oil. Oxidation creates heat. If the heat cannot escape, the items can become hot enough to catch fire.

- If it is unavoidable that fabrics that are contaminated with flammable substances (for example, oils, solvents, petrol etc) be placed in the appliance, they should first be washed in hot water with extra detergent - this will reduce, but not eliminate, the hazard.
- Do not dry unwashed items.
- Fabric softeners, or similar products, should be used in accordance with the manufacturer's instructions.
- Items such as foam rubber (latex), plastic, rubber backed articles, and clothes or pillows containing foam rubber should not be dried in a clothes dryer.
- The final part of the drying cycle does not use heat (cool down cycle) to ensure that the items are at a comfortable handling temperature when removed.
- **WARNING:** Never stop the appliance before the end of the drying cycle. If it is necessary to do so, remove all items quickly and spread them out so that the heat dissipates.
- Remove all objects from pockets such as paper, coins etc.
- The appliance should not be used if industrial chemicals have been used for cleaning the clothes.
- The lint filters must be cleaned after every use.
- Do not allow lint to accumulate around the appliance.
- Adequate ventilation must be provided when the appliance is in use.
- Ensure that carpet or other soft floor coverings does not obstruct any ventilation openings in the base of the appliance.
- Exhausted air from the appliance must not be discharged into a flue that is used for exhausting fumes from appliances burning gas or other fuels.


Correct disposal of this product:



This marking indicates that this product should not be disposed of with household waste. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources.

Save These Instructions

Components




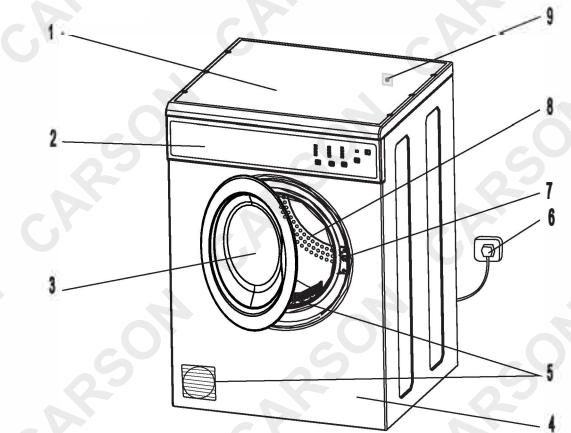


1. Topboard 2. Control panel 3. Door 4. Cabinet 5. Filter
6. Power lead 7. Door lock 8. Tumbling box 9. Reset button


Pre-Installation Check List

Power Source and Grounding

The appliance requires a properly grounded 240VAC / 50Hz mains electrical supply. If you are in any doubt about the electrical supply or grounding, contact a qualified electrician for assistance.

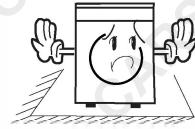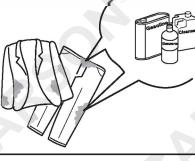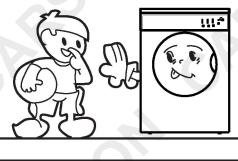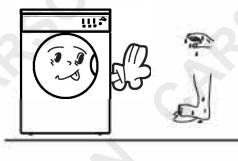
<p>◆ Do not store or install the dryer where it will be exposed to water or the weather.</p> 	<p>◆ Install the dryer in a well ventilated area that has adequate space around the dryer.</p> 
<p>◆ Do not attempt to dry extremely wet clothing - allow to drip dry etc before completing the drying process using the dryer.</p> 	<p>◆ Do not spray combustible aerosols near the dryer during use. If accidental spray occurs do not touch the plug or start/pause button.</p> 
<p>◆ Do not dry clothes that are contaminated with combustible materials (for example, oil, petrol etc).</p> 	<p>◆ Do not operate the dryer if it is damaged, malfunctioning, partially disassembled or has missing or broken parts.</p> 
<p>◆ The dryer is not intended for use by young children or infirm persons without supervision.</p> 	<p>◆ Do not use the machine if your feet or hands are wet</p> 

Installation
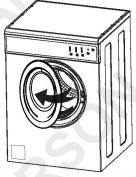
<ul style="list-style-type: none">◆ Do not place heavy or hot objects on top of the appliance. 	<ul style="list-style-type: none">◆ Do not dry clothes containing plastic, foam, rubber or elastic materials that may either be a fire or melt hazard. 
<ul style="list-style-type: none">◆ To avoid scalding, do not open the dryer door until the program has completed. 	
<p>Unsuitable Fabrics - Prior to loading the dryer, check that items do not have the following symbols anywhere on them. If they do, do not tumble dry these items.</p>  <p>Not used for dryer in the tub Hang for dry Drip dry Flat dry Dry automatically</p>	

Step 1:

The dryer should be placed in a well-ventilated area with no less than 10cm distance to any wall from the rear, sides and top of the appliance. It is recommended that there are no obstacles within 1.5m of the front of dryer.

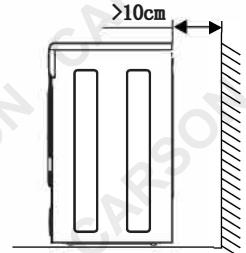

Step 2:

Ensure that the appliance is level. If it is not level (or within approximately 2° of level), it may vibrate excessively which may lead to faults or appliance damage.



Notice:

- Do NOT install the dryer in the open or places easily exposed to water.
- Do NOT place the rear of dryer near curtains or other obstacles.
- Do NOT place the dryer near gas, fuel or flammable materials.

Operation explanation

1. Preparing before drying

- Clothes have to be washed and dehydrated before putting in the dryer.
- Put same kind clothes to dry together.
- Sort your clothes into loads that take a similar time to dry e.g. Heavier items from light items.
- Make sure the decorations and buttons are safe for high temperature and will not damage the inner tube of the dryer. Make sure the clothes are well protected.
- It is suggested to turn the clothes inside-out.
- Please check the clothes after washing, if there is dirt on clothes, the drying process cannot be relied on to remove the remaining dirt.
- Please make sure the power plug is well connected and the supply cord is in good condition.

2. Check filter

- Make sure the filter is well cleaned and in the right position.
- Filter must be cleaned regularly.
- The front filter can be removed easily for cleaning purposes and must be cleaned after every wash.

3. Put clothes into the dryer


- For faster results it is better put clothes with 1/2-2/3 the capacity of the inner tube for drying, because drying needs space to make clothes circulate evenly.
- When drying big clothes, it is better to include several small items to help balance the load.
- When drying expensive or little clothes (<1.5kg) it is better to add several towels whose fibers wont fall off easily, this will help dry the clothes more evenly.
- To avoid creased, rough or static electricity clothes, do not over dry.

The reference weight of dry clothing

	Mixed-fabric clothes (about 800g)		Jacket (about 800g cotton)		Jeans (about 800g)		Towel quilt (about 900g cotton)
	Single bedsheet (about 600g cotton)		Work clothes (about 1120g)		Sleepwear (about 200g)		Long sleeve shirt (about 300g cotton)
	Short sleeve shirt (about 180g cotton)		Short pants (about 70g cotton)		Socks (about 50g mixed-weave)		

4. Close the door

5. Instruction on control panel

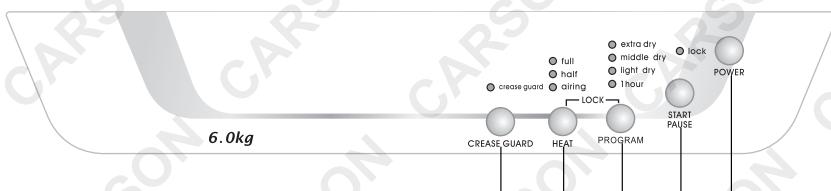

- 1. POWER
- 2. START / PAUSE
- 3. PROGRAM (extra dry / middle dry / light dry / 1 hour)
- 4. HEAT (full / half / airing)
- 5. CREASE GUARD



Notice:

Push PROGRAM and HEAT at the same time, this will enable the lock function. This can help avoid children playing with the device.

- 1) Push Power button.
- 2) Decide on a program according to the texture and capacity of the clothes. Select the program by pushing the "PROGRAM" button repetitively until the indicator light cycles to the desired program.
- 3) Decide on a temperature setting according to the texture and capacity of the clothes. Select the temperature setting by pushing the "HEAT" button repetitively until the indicator light cycles to the desired setting.
- 4) Press the "CREASE GUARD" button if expensive or easily creased clothes are being dried. Crease guard is indicated on/off via the "crease guard" light.
- 5) Push "START/PAUSE" button, this will start the program. If you wish to pause the program to add more clothes push the "START/PAUSE" button again. Be careful when opening dryer door, hot steam can release. To continue program, make sure the door is closed then push the "START/PAUSE" button once again. When the dryer is in pause mode it is possible to change or restart programs.
- 6) Control panel lock feature is initialized by pushing both "PROGRAM" and "HEAT" buttons at the same time. When the lock feature is enable it is indicated by a light, pushing the buttons again will disable this feature.
- 7) If the unit does not heat, push the reset button located at the back of the unit.

⚠️ Notice: Push all buttons will cause a short buzzer with shining lights.

Program function setting

Program	Max volume of dry cloths	Temperature	Clothings type	Air-cold	Anticrease	Child-lock	Max dry time	
1 hour dry	4.0~6.0kg	full ✓	Quick drying clothes	10min	✓	✓	70min	
	<4.0kg	half ✓						
	6.0kg	Air-dry ✓	Fine fabric and clothing not requiring heat to dry					
Light dry	4.0~6.0kg	full ✓	Chemical fiber and small clothing		✓	✓	100min	
	<4.0kg	half ✓						
Middle dry	4.0~6.0kg	full ✓	Cotton weaving and jeans	10min	✓	✓	120min	
	<4.0kg	half ✓						
Extra dry	4.0~6.0kg	full ✓	Cotton clothes, jeans and bedsheets	10min	✓	✓	150min	
	2.0~4.0kg	half ✓						
	<2.0kg	full ✓	Cotton weaving and jeans					

⚠️ Notice:

- Cold air function circulates cold air for 10 minutes at the end of program. This ensures that the items are left at a temperature, and that the items will not be damaged. Crease Guard adds an extra 30s after the program to shake clothes in order to protect against creasing.

- Crease Guard means after programming, it adds extra 30s' one way running to shake clothes in order to protection of creasing.
- The inside temperature and humidity will not affect drying time.
- Check the label attached on clothes and choose the right temperature and time according to the explanation.
- The few clothes below 2.0kg shall be selected with "extra dry" program and "full" heat for drying.

6. End of Program

At the end of program, buzzer rings to remind take out clothes from dryer.

7. Take out the Plug

To be safe, please unplug the unit after each use.

8. Clear filter, cabinet and inner tub.

- Accumulated dust, fiber&debris will affect the air circulation inside the dryer this will cause longer drying times. It is advise to clean the filter and inner tube after each use.
- Make sure to cut off the power before clearing

Filter Clean

1) Remover filter

The lint filter is located in the door opening, remove the lint filter and open it out.



2) Clean filter

Wipe down with a damp cloth.

3) Re-fit filter

Once the filter is dry, re-fit into door opening.

4) Wipe the filter after using every time.

Cleaning cabinet and inner tube

Use a soft damp cloth to wipe the cabinet and inner tube.

- do not rinse by water directly
- do not use scour wipers
- do not use gasoline and alcohol wipers



Make sure open to the front door for aeration after cleaning the inner tube

Troubleshooting

Other functions description

Step 1: Warning function

Fault	Cause of fault	Fault indication (lights)	Fault indication (sound)	Solution of alarm
Exceeded temperature alarm	The inner tube temperature exceeds 63°	"middle dry", "extra dry" indicator flash		Turn off the dryer, Wait for the dryer to cool down
Open door alarm	The door has opened during the program	"light dry", "middle dry" indication flash		Close door
Temperature sensor malfunction alarm	Program start sensor open	"1 hour", "light dry" indication flash	The buzzer sounds for 10 seconds. If the program is not solved, the buzzer sounds every 15 minutes	Reset the dryer. If the problem reoccurs return to manufacturer
	Program start sensor short	"1 hour", "middle dry" indication flash		


Step 2: Auto power-off function

- This machine will auto power-off after 10 minutes when you do not set any program.
- This machine will auto power-off after 6 time's buzzer on drying.

Trouble Solution

Problem	Cause	Solution
Dryer won't start	◆ Power cut ◆ Power plug not correctly connected ◆ Dry clothes exceed maximum volume ◆ Temperature fuse is cut	◆ Wait for power to restore ◆ Check the power socket and make sure plug is connected tight ◆ Remove clothes and check dampness, Max volume of the dryer is 6kg ◆ Please careerman exchange the temperature fuse
Dryer releasing extensive heat	◆ Lint trap requires cleaning ◆ Intake or exhaust passage is obstructed	◆ Clean lint trap ◆ Clean air intake and exhaust and check for obstructions. (eg. Curtain)
Wet clothes	◆ Dryer too full ◆ Clothes left in dryer too long after the end of the program ◆ Clothes not assorted properly ◆ Wrong temperature for clothes	◆ Make sure the dryer is not too full ◆ Immediately remove clothes when program finished ◆ See page 7. Observe the maintenance label on clothes
Shrinks clothes	◆ Clothes over dried	◆ Observe the maintenance label on clothing. Remove clothes from dryer while still damp, finish drying process by hang drying.
Lint balls on clothing	◆ Synthetic fibre rubbing with each other cause lint which attaches to clothes	◆ Use fabric softener. Please spray settled glue on cuff and neckline when ironing.

- If there is no heat from the dryer, please press the plastic push button at rear of dryer to activate the thermostat in order to reheat the element, please see illustration.

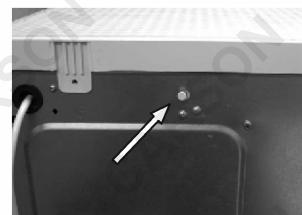

The sound of dryer when runs can cause

- Excessive noise or vibration: Due to heavy wet clothes turning and bumping.
- Air bumping: When drying, machine will generate steam which will come out from exhaust pipe. This will cause bumping with the bottom of the inner tub.


Wall Mounting

Step 1: Fix the 2 mounting brackets to the wall using suitable fasteners (not supplied). The brackets must be mounted at the same height (that is, they must be level), and the distance between the brackets hooks must be 544mm.

CAUTION: The wall must be of sufficient strength to support the dryer weight. The dryer weighs in excess of 30kg - 2 or more persons are required to wall mount it.



Step 2: Turn the dryer over so it is upside-down. Insert the plastic supports into the holes in the rear panel, and rotate them 90° to lock them in position.

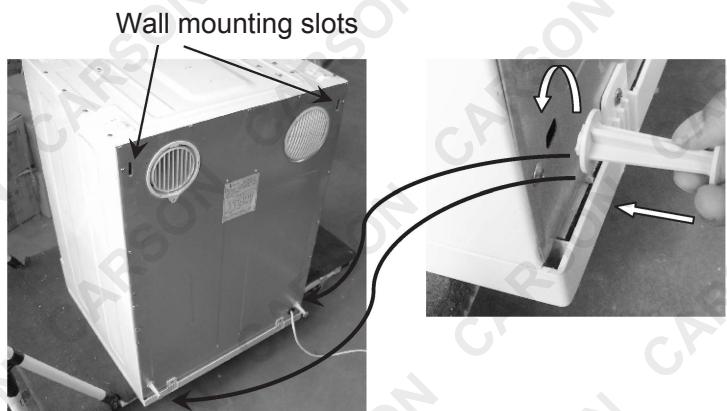

Step 3: Carefully raise the dryer and position it so the bracket hooks enter the slots in the rear of the dryer. Gently lower the dryer so it is supported by the brackets and the plastic supports are resting against the wall.



Step 4: Replace the panel sticker with the supplied inverted sticker.

