



ThermaStrip²⁴

2400W



FEATURES

- Metal radiant heater no glowing element
- Adjustable wall and ceiling bracket
- Black anodised aluminium
- 1.5m long power cord
- Designed for outdoor use
- Ideal for use under verandahs, garages or alfresco areas

Important: Retain these instructions for future use.

For any queries or assistance call



Customer Service

02 8667 7874

Hours of operation:

Monday to Friday 11am - 7pm AEST

Do not return to place of purchase.

Keep your purchase receipt, this will be required to make any claims under the 12 month warranty.

INSTALLATION, OPERATION AND MAINTENANCE INSTRUCTIONS

Safety

Before attempting to operate this wall heater, the following basic safety precautions should be taken to reduce the risk of fire, electric shock and personal injury. It is important to read the instruction manual and to understand its' applications, limitations and potential hazards associated with this wall heater. This wall heater is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety. This wall heater is not designed for use within 1m or above a water source. It is important that you read, understand and follow these instructions very carefully. They are designed for the safety of yourself and others ensuring a long and trouble free service life from your wall heater. This electric wall heater complies with Australian and International standards and safety requirements. Repairs should only be carried out by qualified persons using original spare parts. Failure to do so may result in considerable danger to the operator.

Safe Operation

Beware of Children and Pets

Children should not be allowed to touch or operate wall heaters or touch extension cords, if used. All wall heaters should be kept out of reach of children, preferably stored or locked in a secure cabinet or room when not in use.

Do Not Abuse the Power Cord

Never yank or pull on the power cord to disconnect it from the mains supply socket. Never carry your wall heater by its' power cord. Keep the power cord away from heat, oil, solvents and sharp edges. Check the power cord regularly for any damage and if the power cord becomes damaged have it replaced by an authorised service facility.

Extension Cords and Reels

This wall heater is NOT designed to run off an extension cord. If you require an additional power point please have one installed by a qualified electrician.

The use of extension cords may cause power voltage loss which will result in damage to the motor this will NOT be covered under warranty.

Installation

Always ensure you select the correct fixing accessories which suit the particular wall material you are attaching to, if in doubt please discuss with your local retailer or local hardware store. This wall heater is not designed for use within 1m or above a water source. All installations must meet the requirements of Australia Standard AS/NZS 3000:2007.

Ensure that the wall heater is not positioned directly above, below or in front of a power point or switch.

This wall heater is not designed to be used with 3rd party timer or programmable system.



FOR YOUR SAFETY

WARNING: Fire risk exists if this heater is covered by or positioned close to curtains or other combustible materials.

NOTE: If using this wall heater outside ensure that it is connected directly to an outdoor power point.

The electrical system of this wall heater must be connected with an automatic 30mA circuit breaker and/or residual current device (RCD). If uncertain have a qualified electrician check your electrical system before installation and/or use.

All electrical connections are made in a dry area.

Outdoor power points must be weatherproof and installed by a qualified electrician.

Sitro Group Australia Pty Ltd is not responsible for incorrectly chosen fixing accessories or any damage which may be caused by an incorrectly fitted wall heater.

Specific Safety Instructions



WARNINGS

Do not use the wall heater in areas where there is a risk of explosion or fire from flammable gases. Ensure that the heating area is kept clear of combustible materials. Do not use the wall heater in damp areas, without suitable ventilation. This wall heater is not designed for use within 1m or above a water source. Do not place within one metre (1m) of any water source. Do not place directly below or above any power points or switches.

Fire risk exists if this heater is covered by or positioned close to curtains or other combustible materials.

- This wall heater is intended for domestic/household use only.
- Always ensure that this wall heater is installed as per the requirements noted in Australian Standard AS/NZS 3000:2007.
- Always keep wall heater at least one metre (1m) from combustible materials.
- DO NOT locate this wall heater directly below, above or in front of the power supply socket or switch.
- DO NOT use this wall heater within 1 metre or above any water source.
- DO NOT use this wall heater in either the bathroom or ensuite without suitable ventilation.
- DO NOT use a 3rd party timer, or programmable system with this wall heater.
- DO NOT clean the wall heater while the wall heater is on or plugged into the mains power supply.
- DO NOT touch any part of the wall heater while on, hot surfaces may burn.
- DO NOT use the wall heater as a dryer.
- DO NOT attempt to modify the wall heater, power cord, power plug or the supplied accessories in any way.

- DO NOT expose the wall heater to rain, water, or use in damp wet conditions.
- NEVER cover this wall heater.
- NEVER carry the wall heater by its power supply cord.
- NEVER use with the power cord coiled, bundled up or tied up. Always extend fully before use.
- NEVER use the wall heater if any part of it is damaged.
- Ensure that the wall heater is disconnected from the mains supply when installing, cleaning or removing/installing.
- Ensure this wall heater is not left on when unattended.
- Ensure the wall heater is not used in areas where flammable gases are present, e.g. paint, petrol etc.
- Always turn the wall heater OFF at the unit switch and the power point switch when not in use for extended periods of time.
- Always allow the wall heater to cool, about one (1) hour after the wall heater has been turned off, before cleaning the wall heater.
- Always ensure that the power cord is fully extended and NOT in contact with any part of the heater.
- Always ensure that the wall heater is kept clean and free from dust.
- Only use this wall heater when securely attached to the wall.
- Never use wall heater with cracked/broken glass - replace glass before use.
- Do not look directly at the heater when it is on

Electrical Data

IMPORTANT

This product is fitted with a sealed electrical connection plug that is compatible with the wall heater, the mains supply for Australia and meets the requirements of international standards. This wall heater must be connected to a supply voltage that is equal to that stated on the rating label. If the mains connection plug or power cord becomes damaged it must be replaced with a complete assembly that is identical to the original, and this must be replaced by an authorised service centre. Always follow the Australian requirements for connection to the mains supply. If in doubt always consult a qualified electrician.

Technical Specification

 
Slimline Heater	HEABAR240BIOADJD
Voltage	220-240V AC ~ 50Hz
Input Wattage	2400W
Unit Weight	5.3Kg
IP Rating	IPx4

Heater specifications can be found on the data label.

Assembly


HEATER HEAD

Attach the heater rear bracket using washers and nuts.

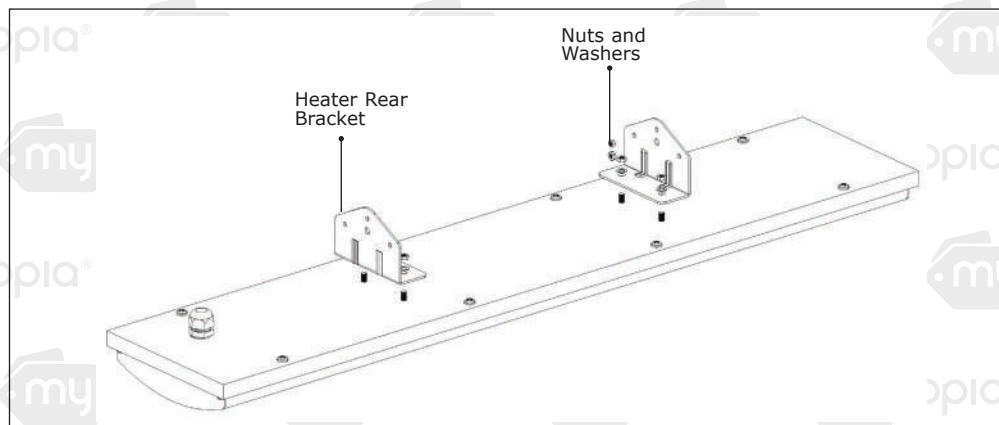

Ceiling bracket assembly

 
1. The bottom of the heater should be 1.8m above the floor, see page 6.
2. Do not position the wall heater directly above or below a power point or switch.
Do not position heater in front of a power point.
3. Mark and drill 3 mounting holes for wall bracket 'C'.
4. Using 3 suitable screws (not supplied) attach the wall bracket to the wall.
Note: If unsure what screws to use please discuss with your local hardware store.
5. Using the screws and nut join the wall bracket to the heater bracket and tighten fully.
6. Heater is now mounted and ready for use. Check the safety distance between the body and flammable surface when wall or corner mounted (see page 6). Do not mount the heater in the ceiling for vertical light direction (see page 6)

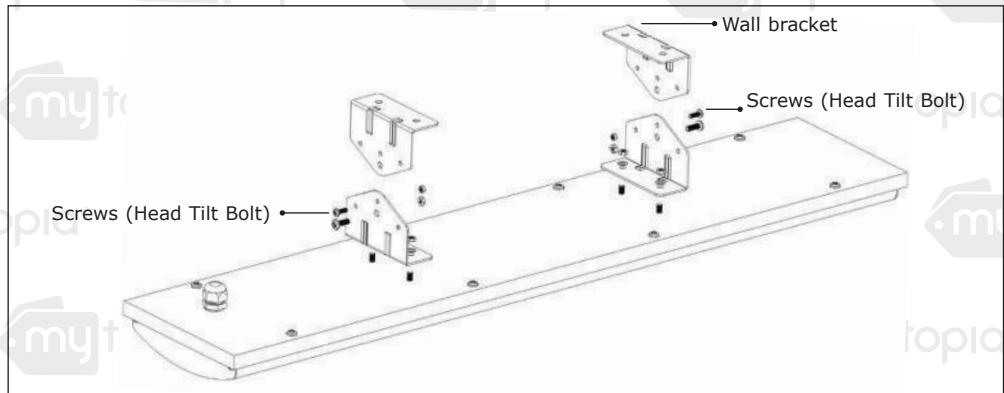

To tilt head




Note: Always ensure that the wall heater is switched off, disconnected from the mains power supply and is cold to touch. If heater has been recently used, please leave the wall heater one (1) hour to cool before tilting head.

 1. Loosen the head tilt bolt, do not remove.
2. Head can be tilted through 10° .
3. Tighten the head tilt bolt when the desired angle is achieved.

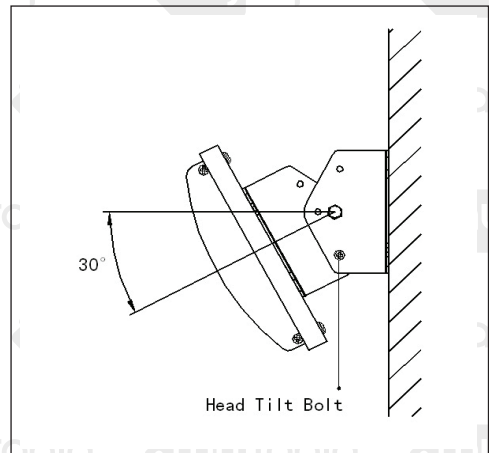

Heater Positioning

   1. Position heater at least 200mm from the eave/lining or ceiling.
2. Position heater at least 1.8m above the floor.
3. Never position in front of a power point.
4. If heater is facing another vertical surface, example – wall, the gap must be at least 1 metre.
5. Never mount heater within 1 metre of a water source, example – tap.

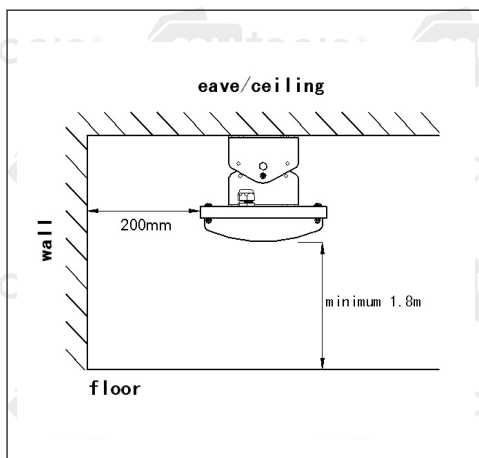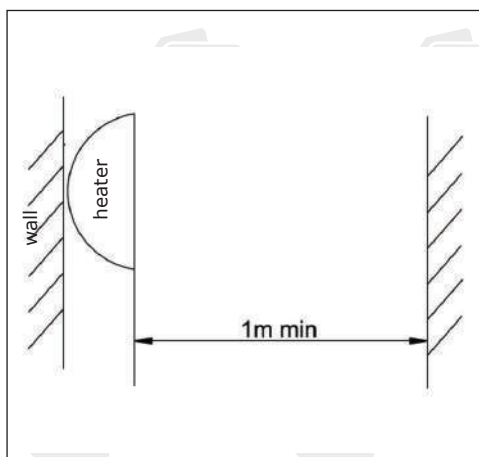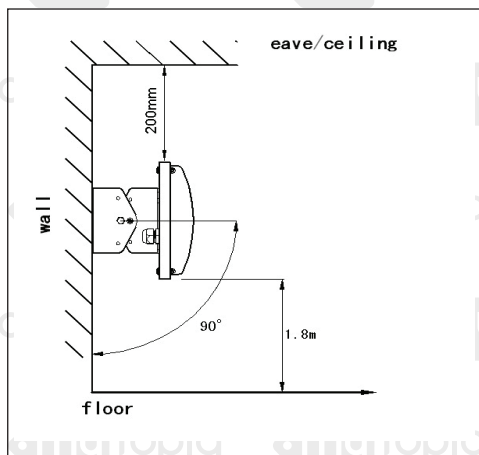

To operate

1. Plug into 240V AC wall socket.
2. To turn on – switch the wall socket on.
3. Turn off – switch the wall socket off.
4. Unplug lead from wall socket when not in use.

Cleaning

Always ensure that the wall heater has been left for one (1) hour to cool before cleaning.

1. Turn off and disconnect from mains power, allow to cool.
2. Wipe unit over with a damp clean soft lint free cloth.
3. For stubborn marks you can use a mild dish washing solution on a damp clean soft lint free cloth.

NEVER allow water or a mild dish washing solution to enter or drip onto the wall heater.

NEVER use solvents, e.g. Petrol, Toluene, Methylated Spirits etc to clean the floor heater, as these will damage the surface finish and may cause a fire when unit is next used.

For any queries or assistance call



Customer Service

02 8667 7874

Hours of operation:

Monday to Friday 11am - 7pm AEST

Do not return to place of purchase.

Keep your purchase receipt, this will be required to
make any claims under the 12 month warranty.

Service & Support: www.mytopia.com.au



Design



Some experts believe the incorrect or prolonged use of almost any product could cause serious injury or death. For information that may reduce your risk of serious injury or death consult the points below and additionally, the information available at www.datastreamserver.com/safety

- Consult all documentation, packaging and product labelling before use. Note that some products feature online documentation which should be printed and kept with the product.
- Check product for loose / broken / damaged / missing parts, wear or leaks (if applicable) before each use. Never use a product with loose / broken / damaged / missing parts, wear or leaks (if applicable).
- Products must be inspected and serviced (if applicable) by a qualified specialist every 6 months assuming average residential use by a person of average weight and strength, above average technical aptitude, on a property matching average metropolitan specification. Intended use outside these guidelines could indicate the product is not suitable for intended use or may require more regular inspection or servicing.
- Ensure all possible users of the product have completed an industry recognised training course before being given access to the product.

- The product has been supplied by a general merchandise retailer that may not be familiar with your specific application or your description of the application. Be sure to attain third party approval for your application from a qualified specialist before use regardless of prior assurances by the retailer or its representatives.
- This product is not intended for use where fail-safe operation is required. As with any product (take an automobile, aircraft, computer or ball point pen for example) there is always a small chance of a technical issue that needs to be repaired or may require replacement of the product or a part. If the possibility of such failure and the associated time it takes to rectify could in any situation inconvenience the user, business or employee or could financially affect the user, business or employee then the product is not suitable for your requirements. This product is not for use where incorrect operation or a failure of any kind, including but not limited to a condition requiring product return, replacement, service by a technician or replacement of parts could cause a financial loss, loss of employee time or an inconvenience requiring compensation.
- If this item has been purchased in error considering the points above simply contact the retailer directly for details of their returns policies if required.

