

COOKER HOOD

USER MANUAL

READ AND SAVE THESE INSTRUCTIONS MANUAL

CONTENTS

TECHNICAL CHARACTERISTICS	1
BODY SIZE	1
MAIN PARTS NAME	2
INSTALLATION PEQUIREMENT.....	2-3
INSTALLATION PROCEDURES.....	4-6
OPERATING INSTRUCTION.....	7-8
MAINTENANCE.....	8
TO REPLACE LIGHT BULB.....	9
IMPORTANT SAFETY INSTRUCTIONS.....	10-11
TROUBLE SHOOTINGS.....	12

Please note that this product is marked with this symbol: 
According to Waste of Electrical and Electronic Equipment (WEEE) directive, WEEE should be separately collected and treated. If at any time in future you need to dispose of this product, Please do NOT dispose of this product with house hold waste. Please send this product to WEEE collecting points where available.

Dear consumer,

Thanks for your purchase of our cooker hood and we hope we can fully satisfy all of your needs. Please read entire instructions carefully before proceeding to obtain the best results of using the cooker hood.

TECHNICAL CHARACTERISTICS

Model No.: RS-668IS-2/RS-610IS-2

Total power: 290W 258W 190W 158W

Motor power: 250W 150W

Halogen Lights: 4 x 10 W / LED Lights: 4 x 2W

Voltage: 220 V~240 V 100V~120 V 127V


Frequency: 50 Hz 60Hz

Aluminum Filter: 6-layer filter 3-layer filter Baffle filter


Control: Push Button Touch control

Soft touch control

BODY SIZE

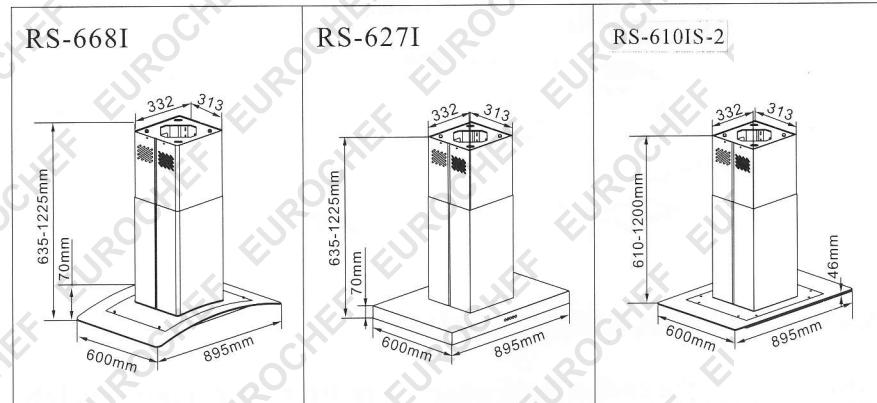


MAIN PARTS NAME

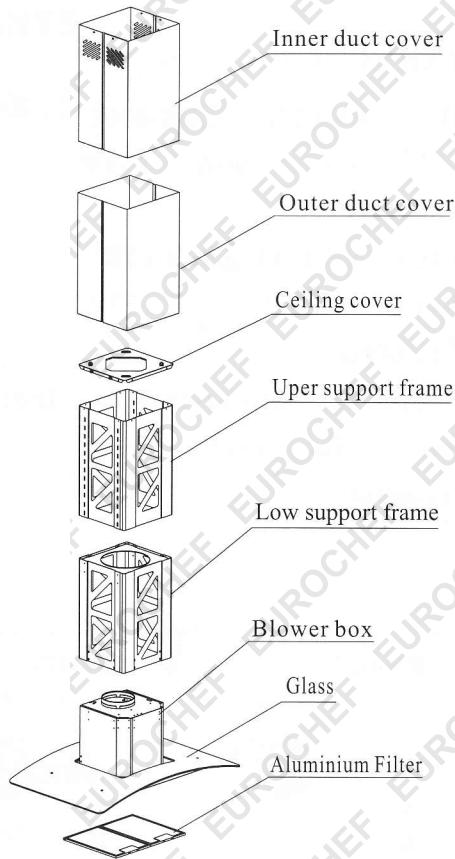

INSTALLATION REQUIREMENT

1. Do not install the cooker hood where there are many doors or windows in order to avoid to effecting the exhaust efficiency of the hood caused by air convection. (Fig. 1)


2. Install the cooker hood right above the hob. The recommended distance between the hob and the lower edge of the cooker hood is minimum 650mm and maximum 700mm. (Fig. 2)
3. In order to get the optimum performance, do not elongate the exhaust pipe too long, and try to make the bend of exhaust pipe less and biggest, ensure the connection is airproof.(Fig. 3)
4. After hanging the unit on the wall, ensure the hood is level and vertical. (Fig. 4)
5. The air outlet must not be connected to chimney flues or combustion gas ducts. The air outlet must under no circumstances be connected to ventilation ducts for room in which fuel-burning appliances are installed.

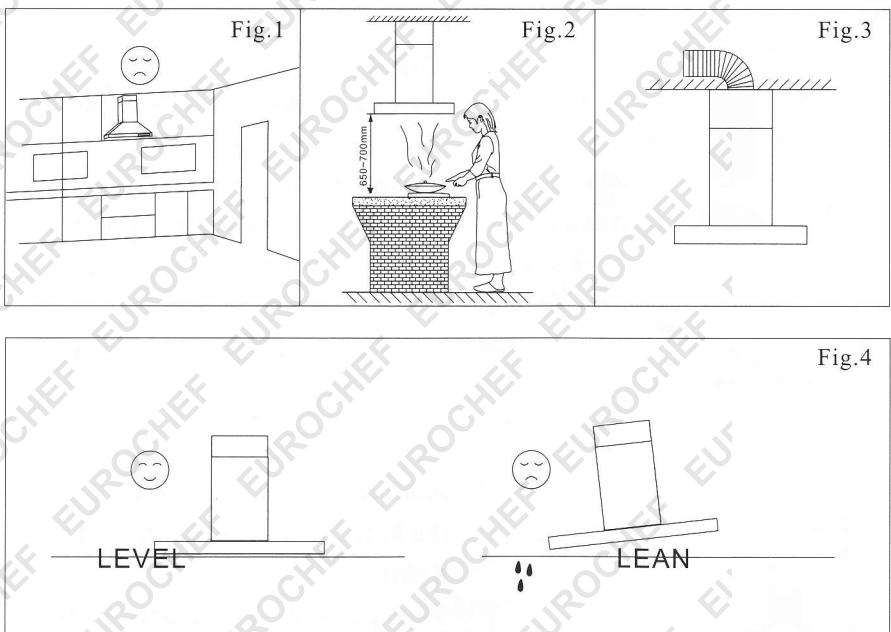

INSTALLATION PROCEDURES


SAFETY WARNING

HOOD MAY HAVE VERY SHARP EDGES; PLEASE WEAR PROTECTIVE GLOVES IF IT IS NECESSARY TO REMOVE ANY PARTS FOR INSTALLING, CLEANING OR SERVICING.

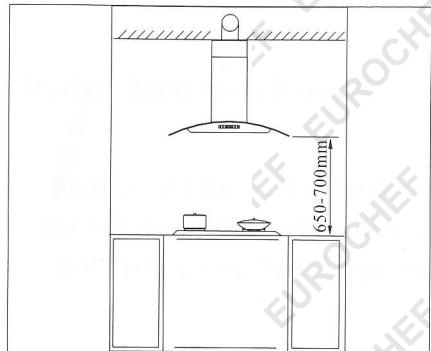


Step 1:

Fix the position of the cooker hood in accordance with the recommended height between 650mm to 700mm from the hob and the lower edge of the hood.

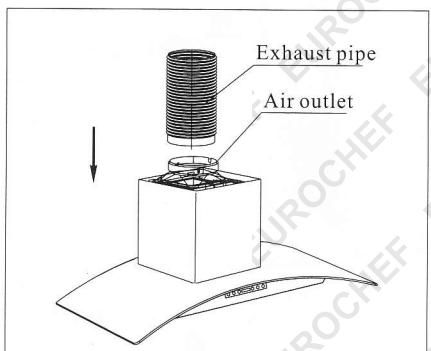

Step 2:


Take out of the cooker hood from the carton and put it on a horizontal work table gently. fix the exhaust pipe into the Air outlet, make sure is connected tightly.

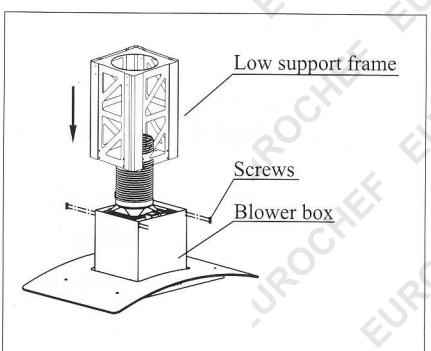

Step 3:


Aiming the Low support frame to the holes on the blower box , fix it tightly.

Then pull out the exhaust pipe to the level of the low support frame.

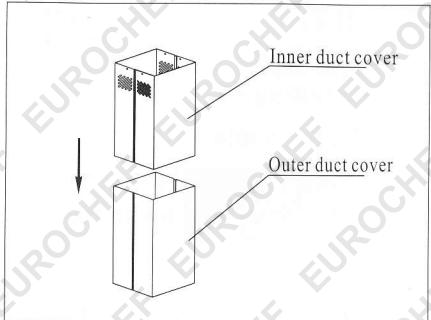


Step 4:

Insert the inner duct cover into the outer duct cover.

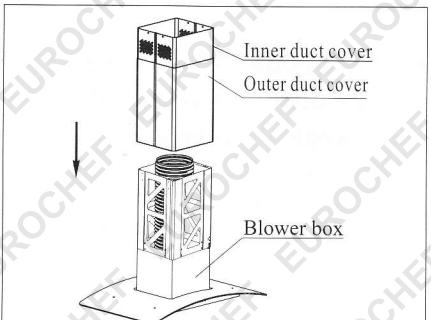


Step 5:

Put the inner duct cover and Outer duct cover on the Blower box. Then pull out the exhaust pipe to the level of the Inner duct cover.

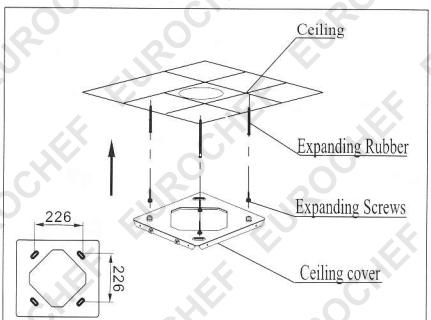


Step 6:

As per the screw positions on the Upper support frame, drill 4 holes (about ϕ 8 mm) , then fill the Expanding Rubber into the holes. Aiming the holes on the ceiling, fix the ceiling cover with the Expanding screws tightly and make sure it is firm.

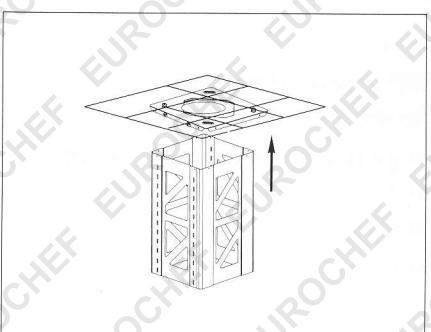


Step 7:

Put upper support frame under the ceiling cover. Use screws to fit the upper support to the ceiling cover.

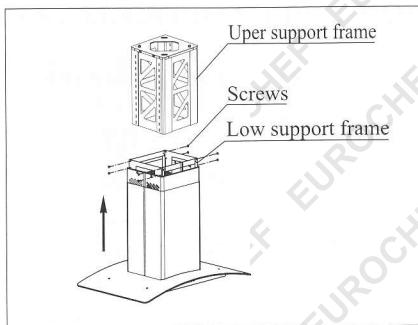


Step 8:

Shift the complete cooker hood , to make the low support frame cover the Upper support frame. Adjust its height. Fix it tightly with 8 pcs M4x10 screws and make sure it is firm.

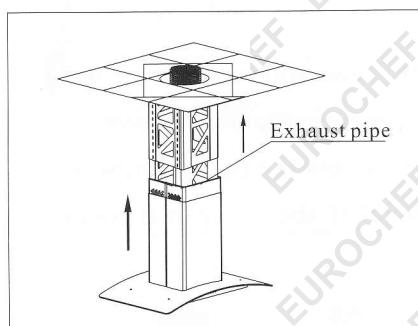


Step 9:

Extend the air outlet of the exhaust pipe out-of-door. Try to make the bend of the exhaust pipe is more than 120° .

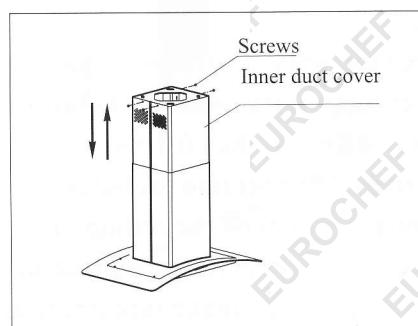

Step 10:

Pull the inner duct cover to the ceiling, aiming the upper support frame , fix it with 4 pcs M4x10 screws.

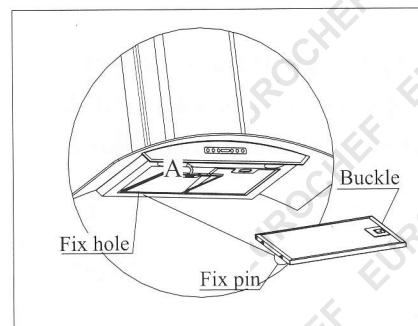

Step 11:

Install grease filter. Match the fix pin to the fix hole and button the filter gently as the direction of arrow A.

OPERATING INSTRUCTION

1. How to use the Soft touch Control



A: Touch A , the fan runs at the low speed. Press it again, the fan turns off.

B: Touch B, the fan runs at the mid speed. Press it again, the fan turns off.

C: Touch C, the fan runs at the high speed. Press it again, the fan turns off.

A, B, C three buttons interact.

D: When the hood stay OFF, keep touching D 3 seconds, and then touch C and E to adjust hour and minute, at that time, G just like a clock. In the screen, left is hour, right is minute;

When the hood is operating , touch D to control working time of hood, 5 minutes per one touch, the longest stay ON time is 1 hour.

E: Touch E, turn on the light. Press it again,turn off the light.

F: When the hood is operating , touch F, the hood will not be OFF at once, it will stay one minute, and then be OFF.

2. How to use the Touch Control

 
A: Press Button A once, turn on the light. Press it again, turn off the light.

B: Press button B, the fan runs at the boost speed.

C: Press button C, the fan runs at the middle speed.

D: Press button D, the fan runs at the low speed.

E: Press button E, the fan turns off.



3. How to use the Push Button

A: Press Button A once, turn on the light.

 
 Press it again, turn off the light.

B: Press button B, the fan runs at the
 boost speed.

C: Press button C, the fan runs at the middle speed.

D: Press button D, the fan runs at the low speed.

E: Press button E, the fan turns off.



MAINTENANCE

*CAUTION: NEVER PUT YOUR HAND INTO THE HOUSING AREA
WHILE THE FAN IS OPERATING.*

*FOR THE OPTIMAL LEVEL OF OPERATION, CLEAN THE RANGE
HOOD SURFACE, FAN, AND ALUMINIUM FILTER REGULARLY.*

1. Use only mild soap or detergent solutions to clean the cooker hood surface. Dry surfaces using soft cloth.
2. Using a stainless steel cleaner to bring the glow back into a stainless steel finish.
3. Clean the aluminium filter once a week or according to use status. Press the buckle of the aluminium filter slightly, take off the aluminium filter and put it into warm soapy water using mild detergent, wipe the aluminium filter with soft brush. Replace the filter after it is dry.
4. Clean the motor fan and other inside parts once half year or according to use by **QUALIFIED PERSON**.
5. DO NOT cleaning motor with water or other liquid.

TO REPLACE LIGHT BULB


*CAUTION: LAMP UNIT MAY BE HOT! WAIT UNTIL UNIT IS COOL.
AND USE THE SAME TYPE LIGHT BULB!*

Make sure all control switches are off, and range hood is unplugged.

Pls follow below instructions:

Warning! Make sure the bulb has cooled before you touch it!


1. Use a flat head screwdriver to pop out the lamp subassembly, then disconnect lamp from the internal wires.
2. Unloose the screw using cross head screwdriver.
3. Remove the lamp cover and take out of lamp bulb.
4. Replace a new 10W lamp bulb, push bulb securely into light socket.
5. Replace the lamp cover, fix it with screws.
6. Connect the lamp subassembly with internal electrical wire and push the light into the hood lamp hole.

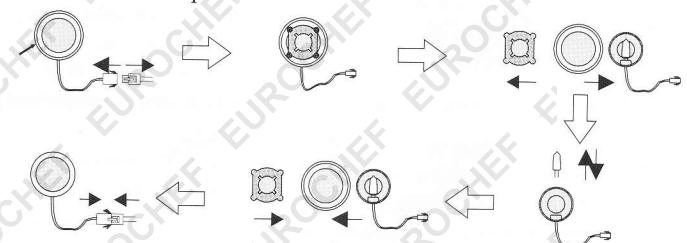


IMPORTANT SAFETY INSTRUCTIONS:



Do not connect the air outlet to chimney flues or combustion gas ducts.

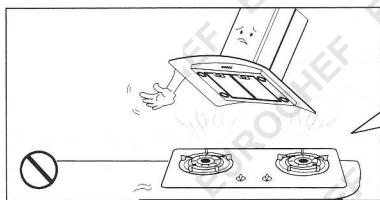


Do not leave naked flames under this hood

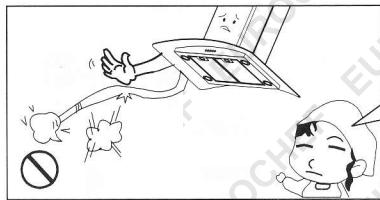


In case of any damage to power cable, replace the broken cable with a new one by qualified person.




Do clean the hood correctly in accordance with instruction stated or it might cause the possibility of fire accident

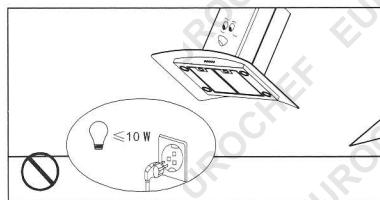


To replace the bulb should be undertaken by a qualified electrician or a competent person. Always use the halogen bulb no more than 10W or LED lamp no more than 2W.

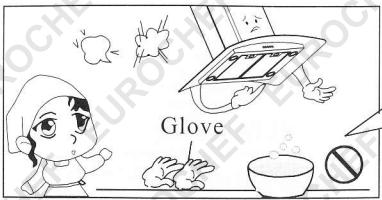


Dress the protective glove before you start to clean the hood. Remove the components gently during carrying out the clearance.

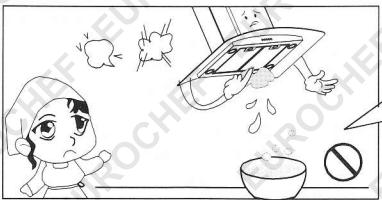


Never wash the control switch with water or other kind of liquid to avoid the liquid might cause electrical problem to the hood.

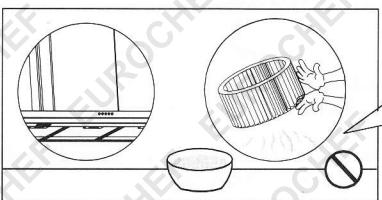

To clean the motor fan should be undertaken by a qualified person, pay top attention to avoid any distortion of the fan during carrying out the clearance.

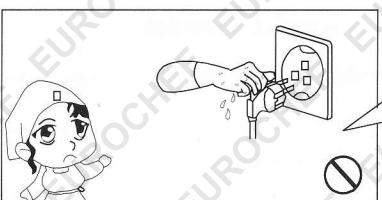

Never pull the plug out of the power supply by wet hand to avoid the possibility of electric shock.

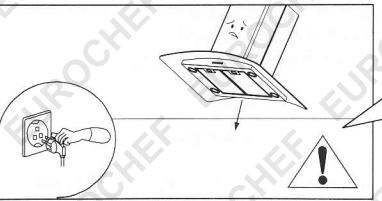

Disconnect the cooker hood from the power supply if this appliance will not be used for a long time.

TROUBLE SHOOTINGS

CAUTION: Disconnect the power supply before servicing.

STATUS	CAUSE AND METHOD OF REPAIRING	TOOL
The power supply is damaged	If the power supply is damaged,please call the technicians to repair.	"" type Screwdriver Sharp Pincers
The lamp works but the motor does not run	a) Remove the vane guard and rotate the vane by hand,If the vane cannot move smoothly, the core or bearings of the motor may be damaged. In this case, replace with a new motor. b) If the motor stops running and has a bad odor after a moment of operation, the motor wires may be burnout. Replace the motor. c) If the starting wire (yellow) is disengaged from the condenser, it needs to be rewired. d) If the condenser is damaged, replace with a new one.	"" type Screwdriver
The lamp works but the motor does not run	a) Take off the filter and check the connection between air inlet and wind chamber is sealed or not. b) Check the connection between air exhaust pipe and wind chamber leaks oil or not. If"YES", please fill it up with the varnish or the thinner.	"" type Screwdriver
Machine vibration	a) If the motors were not firmly screwed, screw tight -ten them up. b) If the vane is damaged or unbalanced, replace with a new one.	"" type Screwdriver
Weakness suction	a) The distance is too far between the Range Hood and the Gas Cooker. b) There are many windows (doors) cause wind convection is too strong. c) Because of the Range Hood is set upon the window, the best solution is that put one three-ply board on the back of the Range Hood for covering the hollow of window.	"" type Screwdriver
Installation of the model is tilt	a) Adjust the height of the model where is hang on the ceiling. b) If the model tilt forward, lock into the wall with wood screw again (the screw peep out around 0.5 ~1 cm from the wall), or check the screws for fixing the model are loose or not.	"" type Screwdriver
Bulb does not light	Just screw off the lamp shade and replace with a new bulb,then put the lamp shade back.	"" type Screwdriver



Some experts believe the incorrect or prolonged use of almost any product could cause serious injury or death. For information that may reduce your risk of serious injury or death consult the points below and additionally, the information available at www.datastreamserver.com/safety

- Consult all documentation, packaging and product labelling before use. Note that some products feature online documentation which should be printed and kept with the product.
- Check product for loose / broken / damaged / missing parts, wear or leaks (if applicable) before each use. Never use a product with loose / broken / damaged / missing parts, wear or leaks (if applicable).
- Products must be inspected and serviced (if applicable) by a qualified specialist every 6 months assuming average residential use by a person of average weight and strength, above average technical aptitude, on a property matching average metropolitan specification. Intended use outside these guidelines could indicate the product is not suitable for intended use or may require more regular inspection or servicing.
- Ensure all possible users of the product have completed an industry recognised training course before being given access to the product.

- The product has been supplied by a general merchandise retailer that may not be familiar with your specific application or your description of the application. Be sure to attain third party approval for your application from a qualified specialist before use regardless of prior assurances by the retailer or its representatives.
- This product is not intended for use where fail-safe operation is required. As with any product (take an automobile, aircraft, computer or ball point pen for example) there is always a small chance of a technical issue that needs to be repaired or may require replacement of the product or a part. If the possibility of such failure and the associated time it takes to rectify could in any situation inconvenience the user, business or employee or could financially affect the user, business or employee then the product is not suitable for your requirements. This product is not for use where incorrect operation or a failure of any kind, including but not limited to a condition requiring product return, replacement, service by a technician or replacement of parts could cause a financial loss, loss of employee time or an inconvenience requiring compensation.
- If this item has been purchased in error considering the points above simply contact the retailer directly for details of their returns policies if required.

