

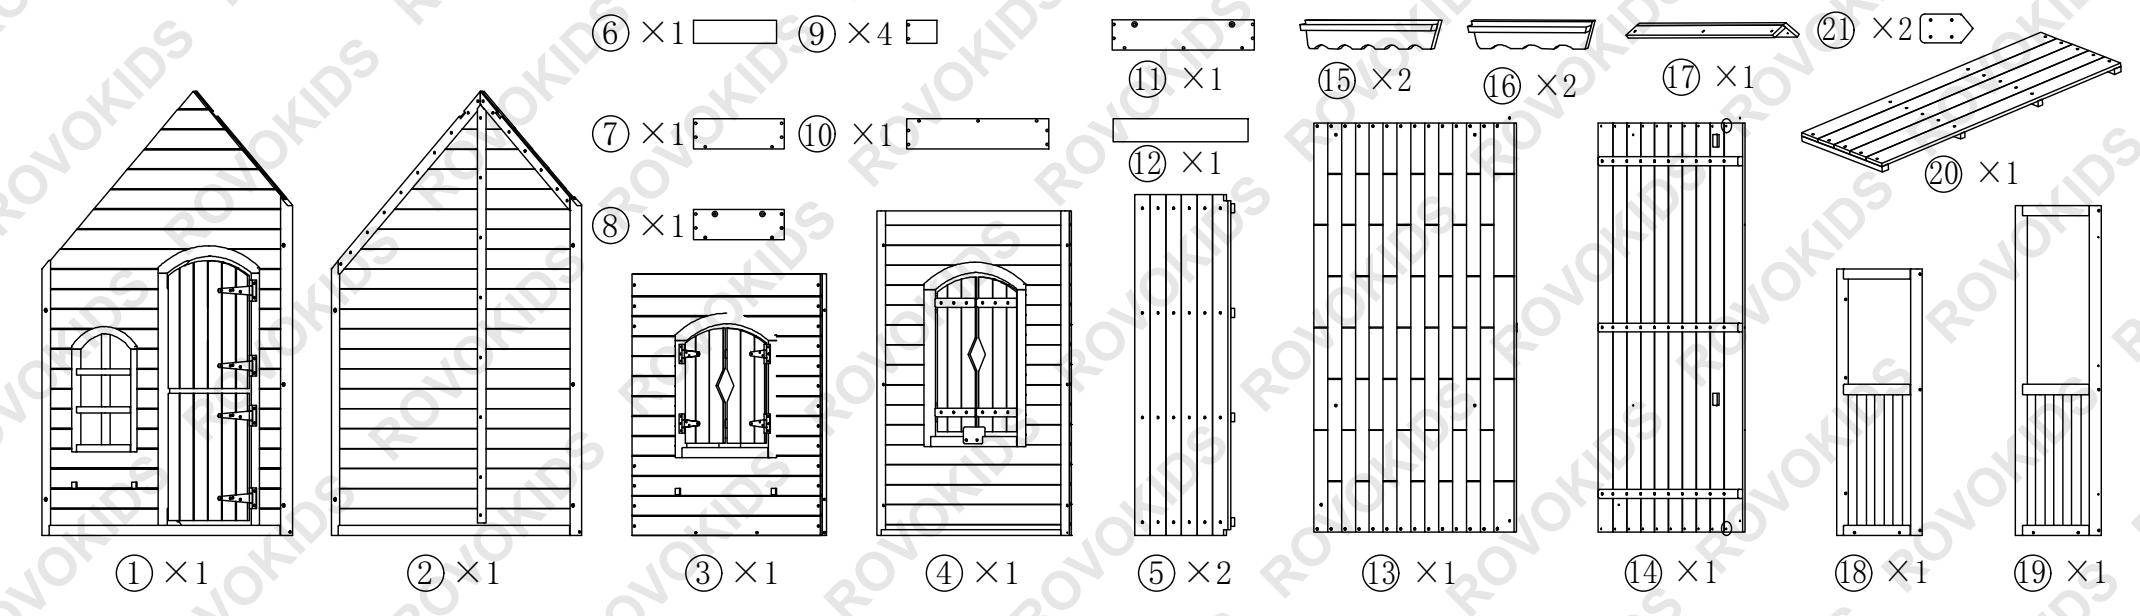


ASSEMBLY INSTRUCTIONS

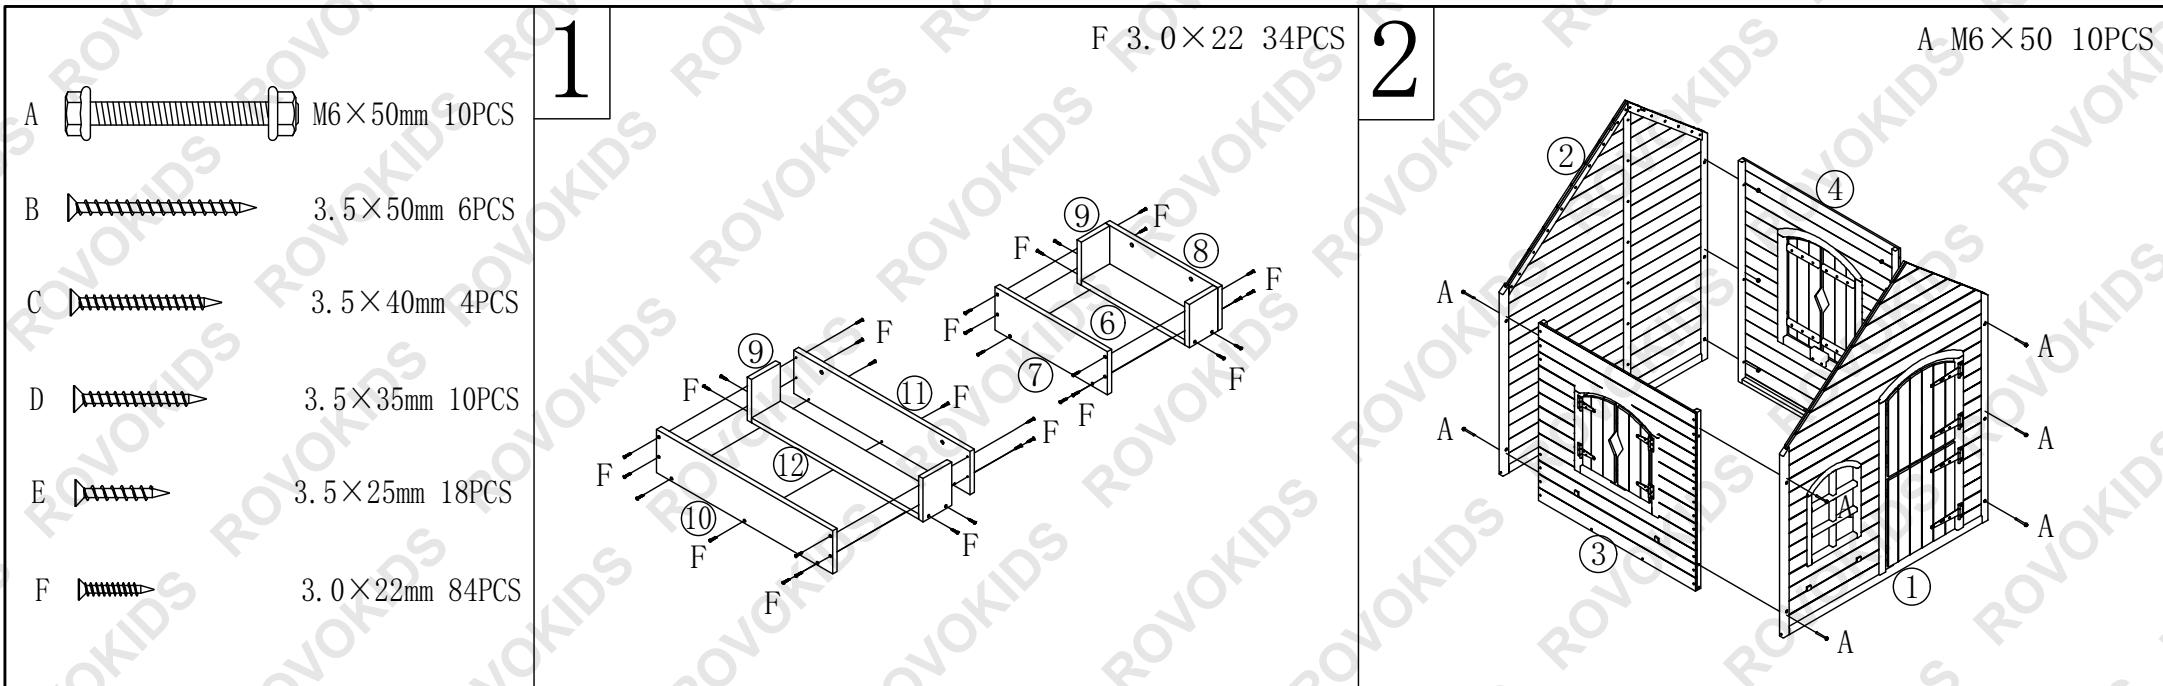


ASSEMBLY INSTRUCTIONS

3

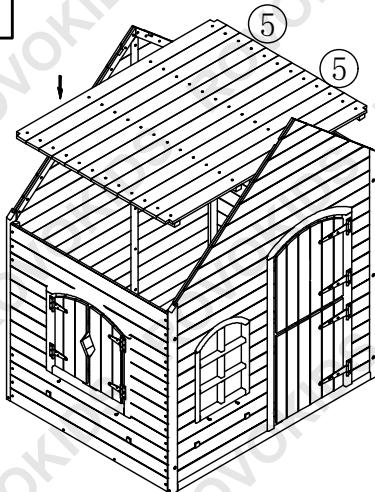


4

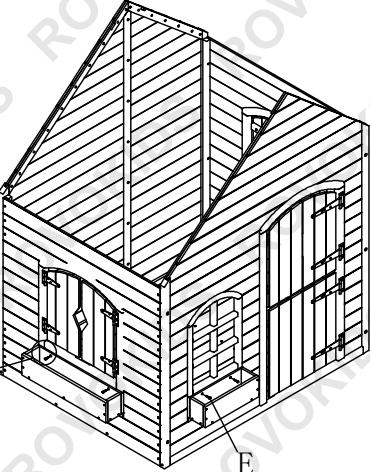


E 3.5×25mm 4PCS

5

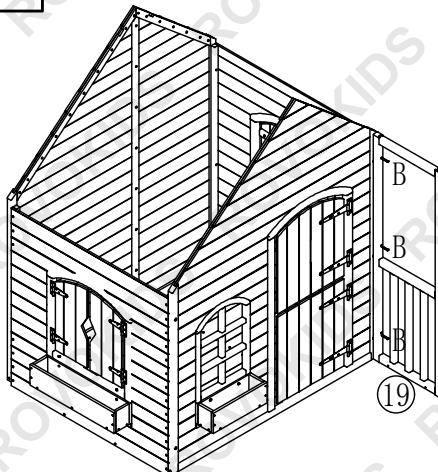


B 3.5×50mm 3PCS

6

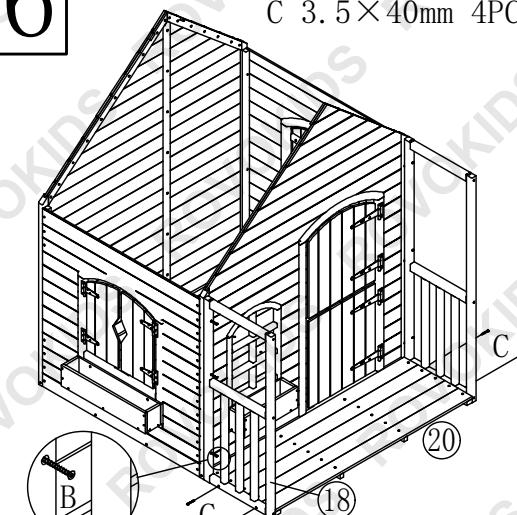


B 3.5×50mm 3PCS
C 3.5×40mm 4PCS

7

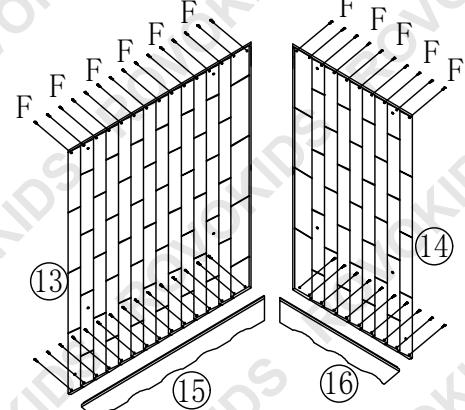


F 3.0×22mm 50PCS

8

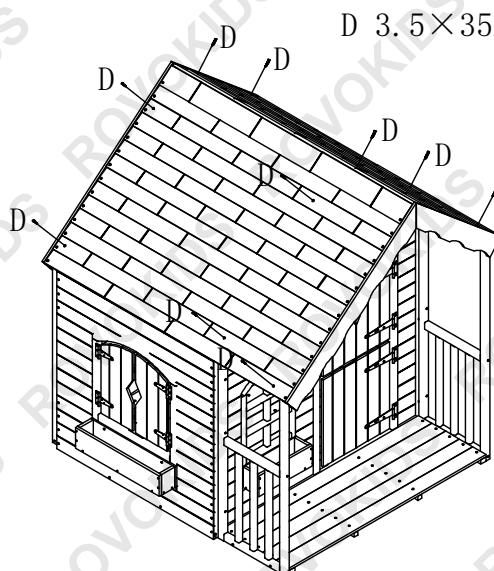

D 3.5×35mm 10PCS

9

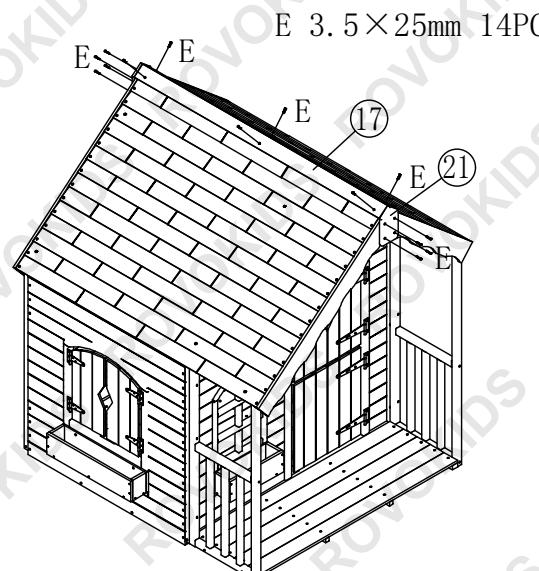

E 3.5×25mm 14PCS

13

14

15

16

D

D

D

D

E

E

E

17

21

Safety

READ THIS MANUAL CAREFULLY BEFORE USE – FAILURE TO DO SO MAY RESULT IN INJURY, PROPERTY DAMAGE AND MAY VOID WARRANTY. • KEEP THIS MANUAL FOR FUTURE REFERENCE. • Products covered by this manual may vary in appearance, assembly, inclusions, specifications, description and packaging.

- Adult assembly required.
- Install the play house on a level surface, preferably on a surface that the play house can be anchored down on. If the supplied anchoring brackets cannot be used, use a suitable anchoring system (not supplied) to secure the play house.
- Install a minimum 2m from any other structure, trees, branches etc.
- Do not install near electrical cables.
- Recommended for children aged 2+.
- It is recommended to unpack all wooden components 48 hours before assembly. Keep the parts outside, but covered so the wood can normalise to moisture in the air.
- For domestic, outdoor use only.
- Never allow anyone to climb on to the roof of the play house.
- Supervise young children at all times.
- Avoid direct contact with sources of ignition, flames etc.
- Do not use or store near flammable substances.
- Regularly check all fasteners for tightness.

