



Wooden Doll House

Assembly instructions


Please retain this information for future reference

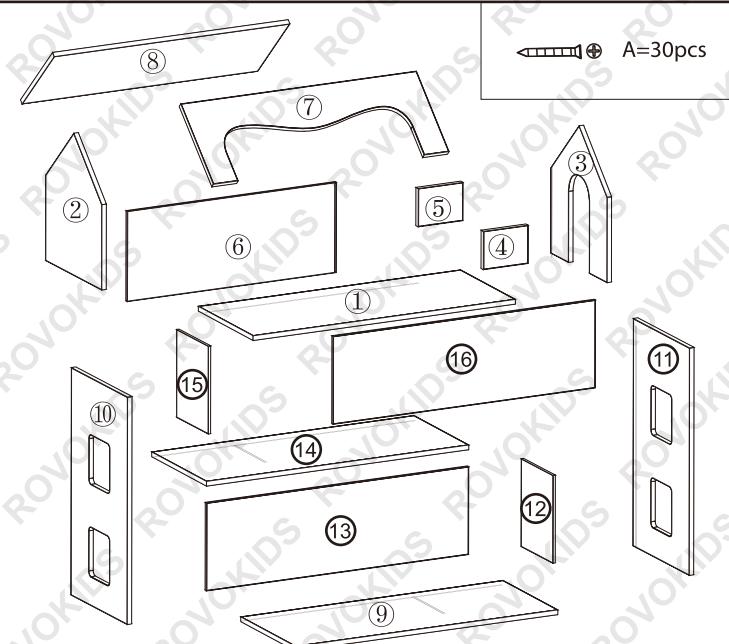


1

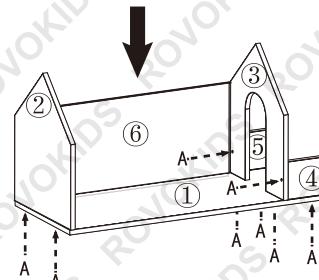


2

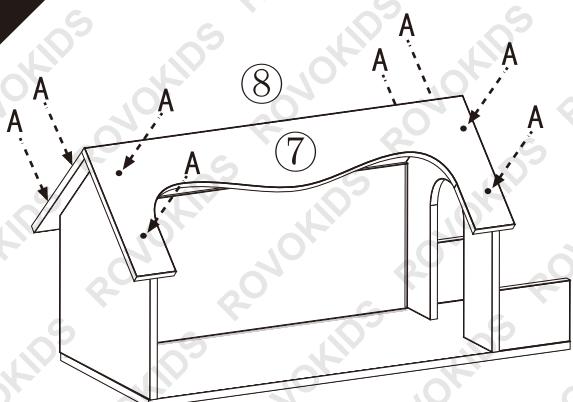


3

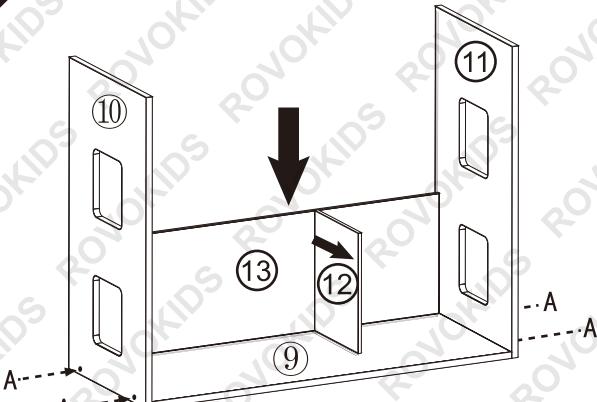

4

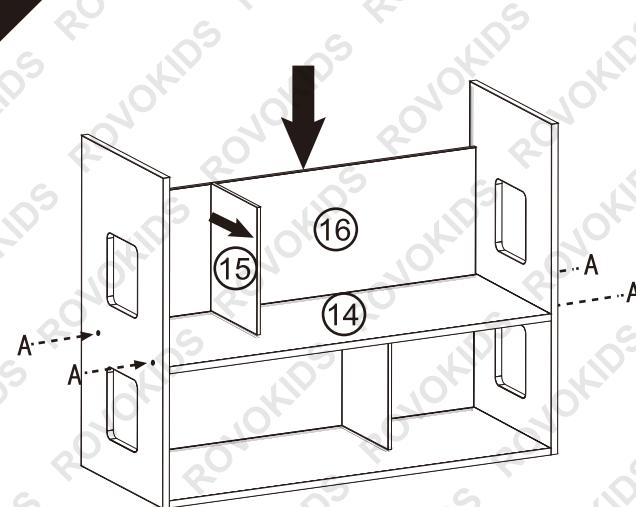

5

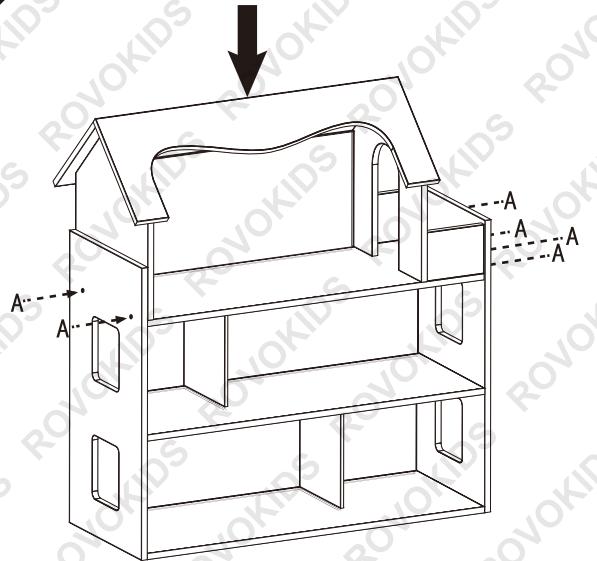

WARNING:

ADULT ASSEMBLY REQUIRED. Product includes small parts with potentially hazardous sharp points and sharp edges in the unassembled state.

Keep unassembled parts away from children.

WARNING: CHOKING HAZARD. Small parts and sharp points, not suitable for children under 3 years.

WARNING: If used improperly, your toys may be pulled over or fall, creating risk of injury or damage. To minimize this risk, we recommend that you use a fixed accessories.

