


# Wooden Toy Kitchen

## Assembly instructions

Please retain this information for future reference

When assembling, follow the order of assembly provided at each step, where provided. For example, 1.1 followed by 1.2 and so on - this may make assembly easier.

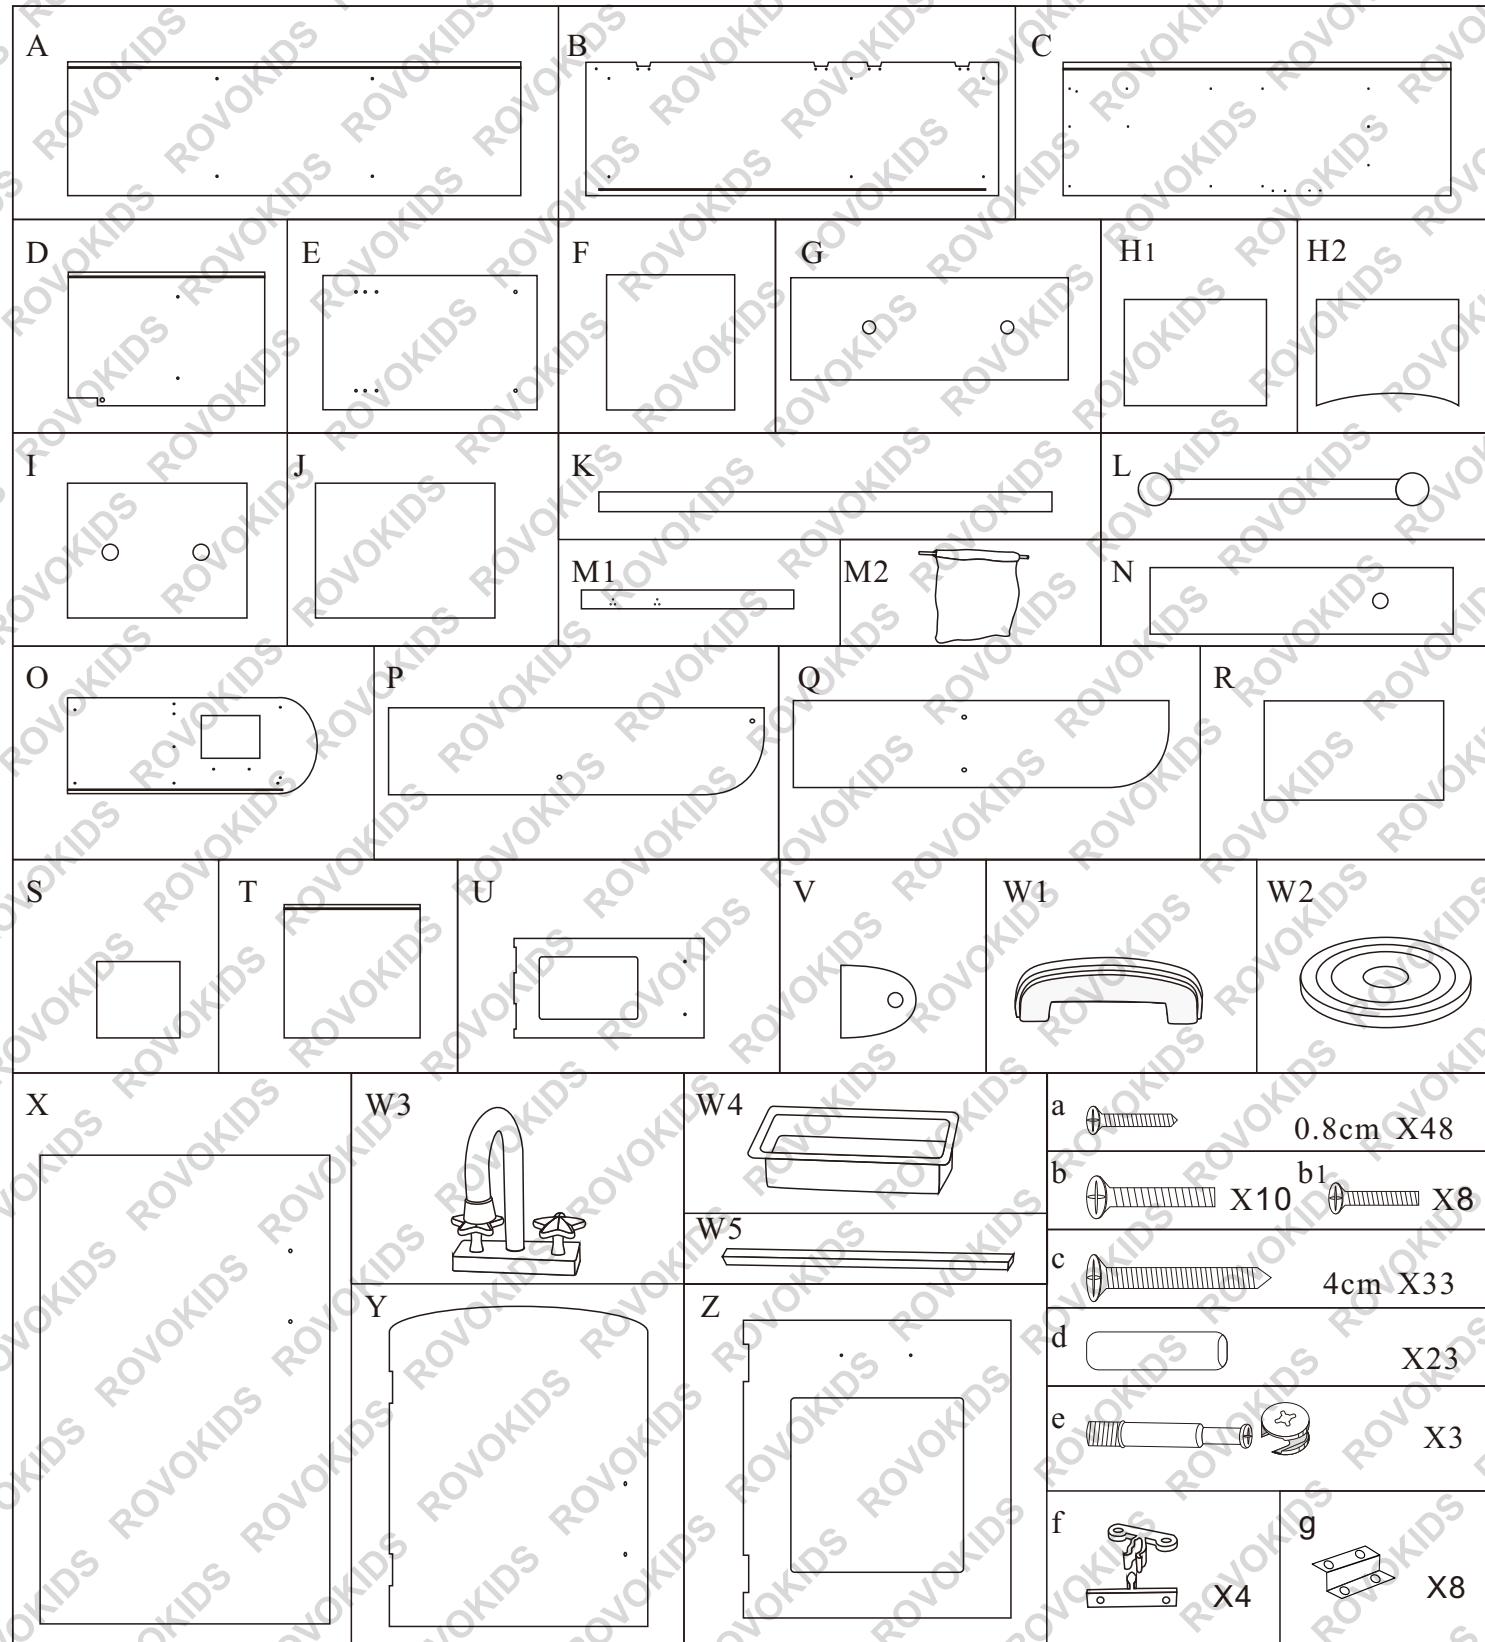

### WARNING:






ADULT ASSEMBLY REQUIRED.

Product includes small parts with potentially hazardous sharp points and sharp edges in the unassembled state.

Keep unassembled parts away from children.

CHOKING HZARD. Small parts and sharp points, not suitable for children under 3 years.

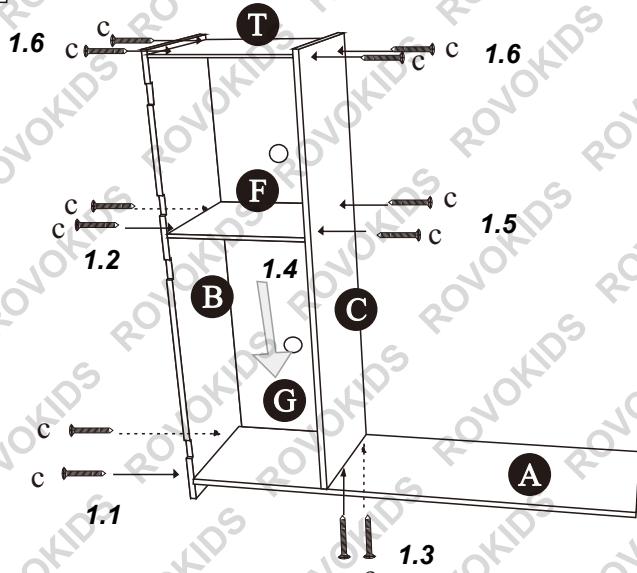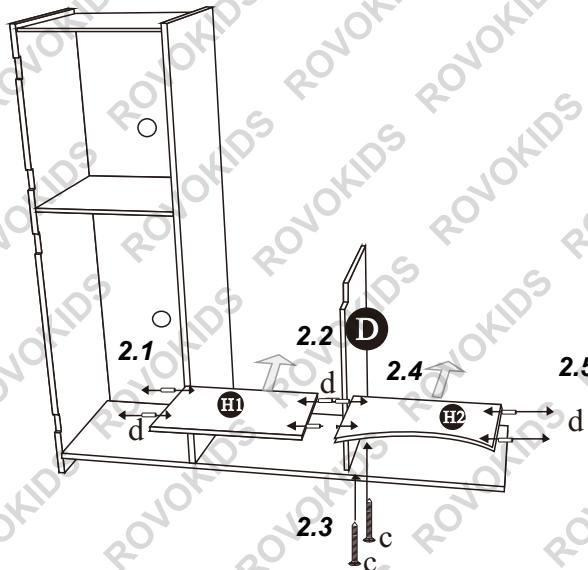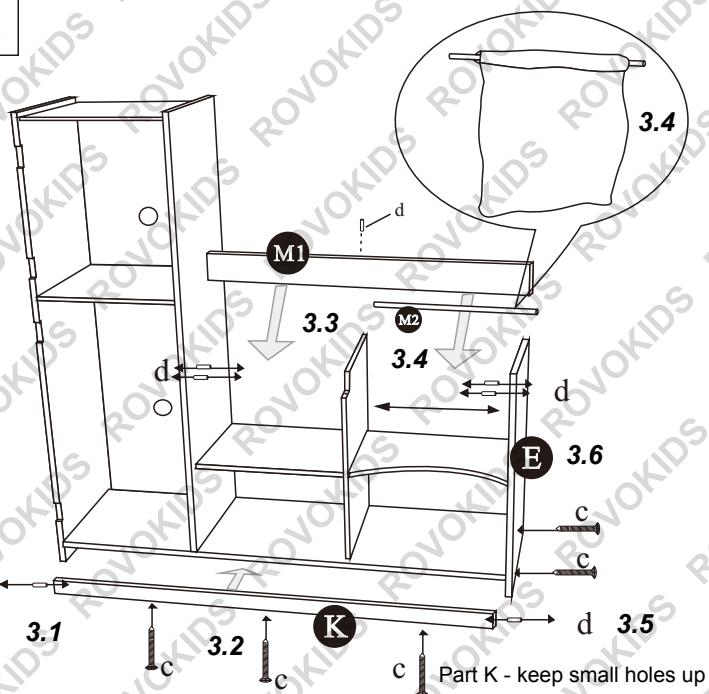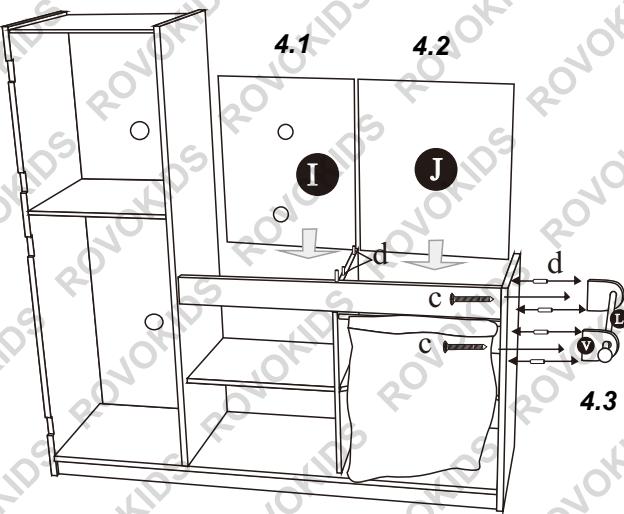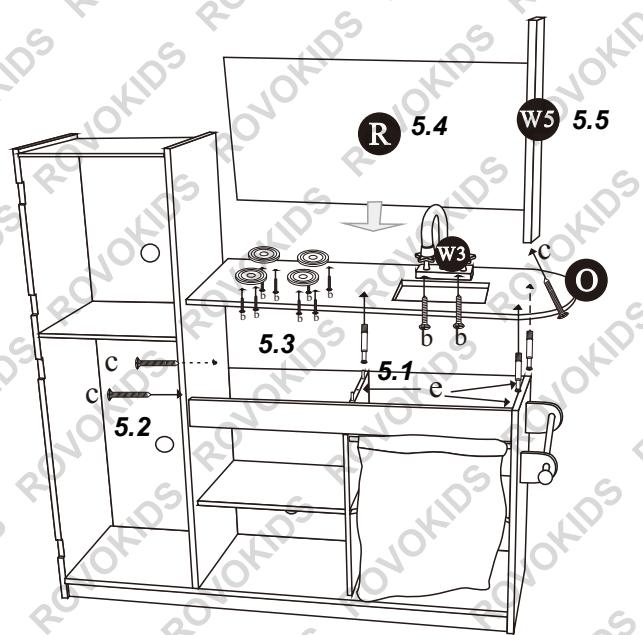

**1****2****3****4****5****6**