

Play Kitchen Set

Assembly instructions

Please retain this information for future reference

a x12



 
b x15



c x5




d x8




e x1




Step1

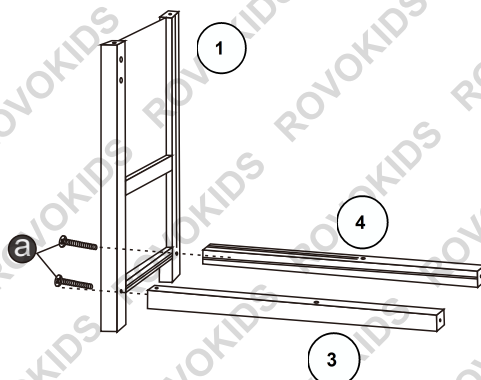


Step2

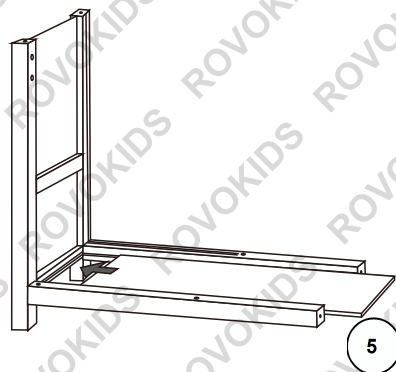


Step3

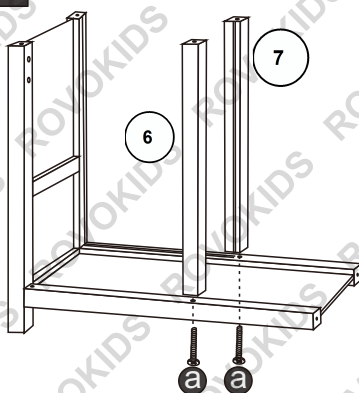


Step4

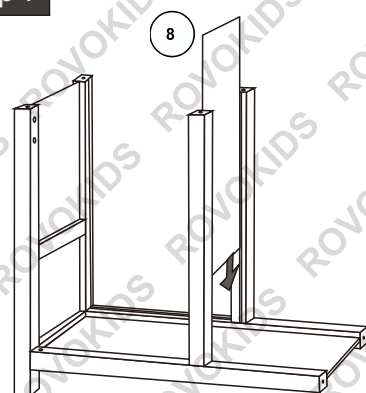


Step5

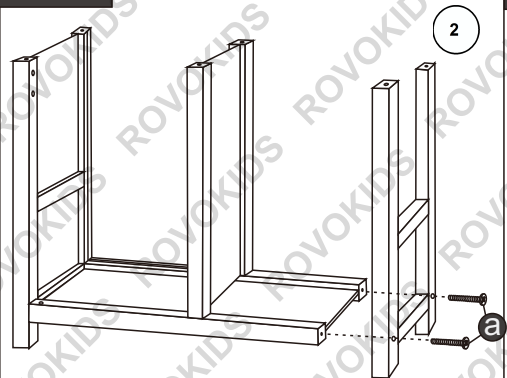


Step6

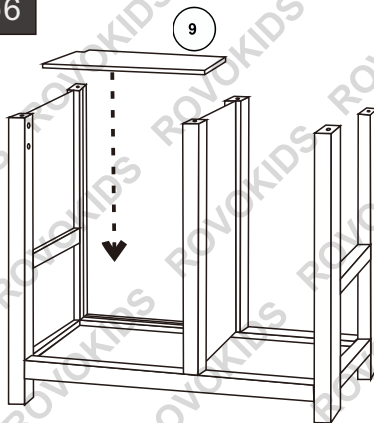


Step7

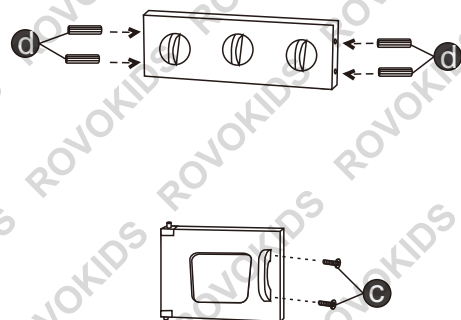


Step8

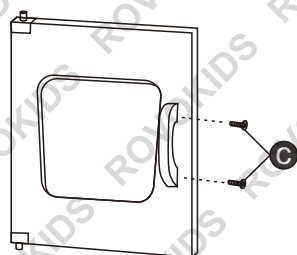


Step9

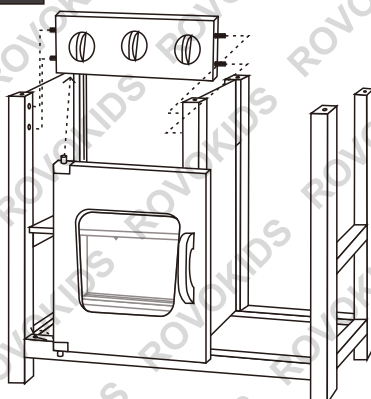


Step10

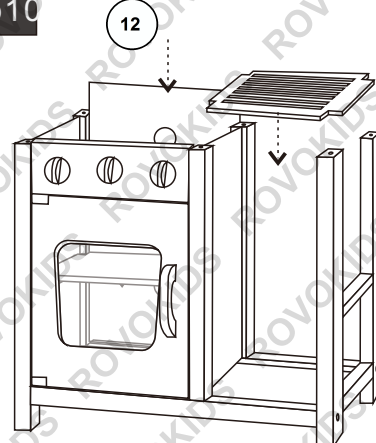


Step11

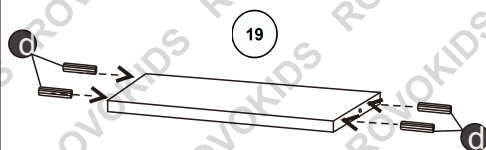


Step12

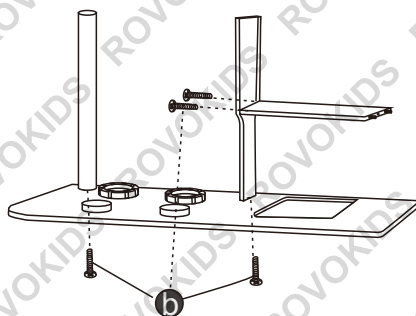


Step13

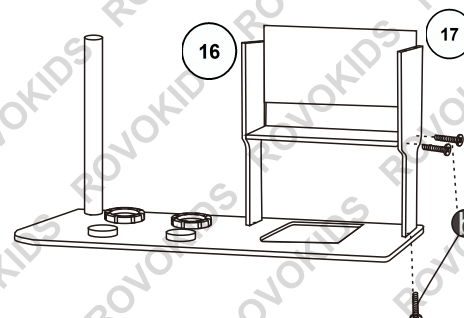


Step14

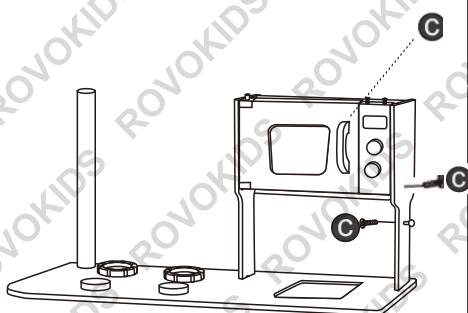


Step15

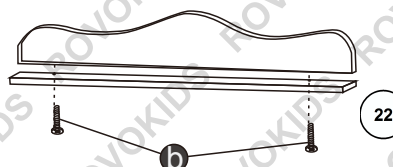


Step16

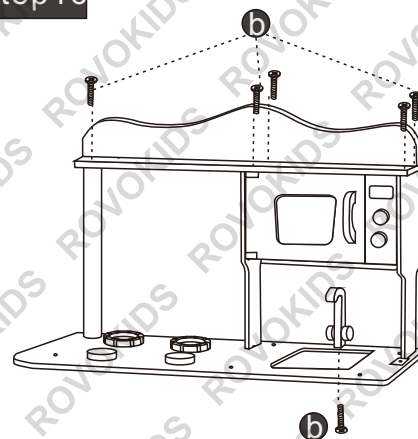

Step17

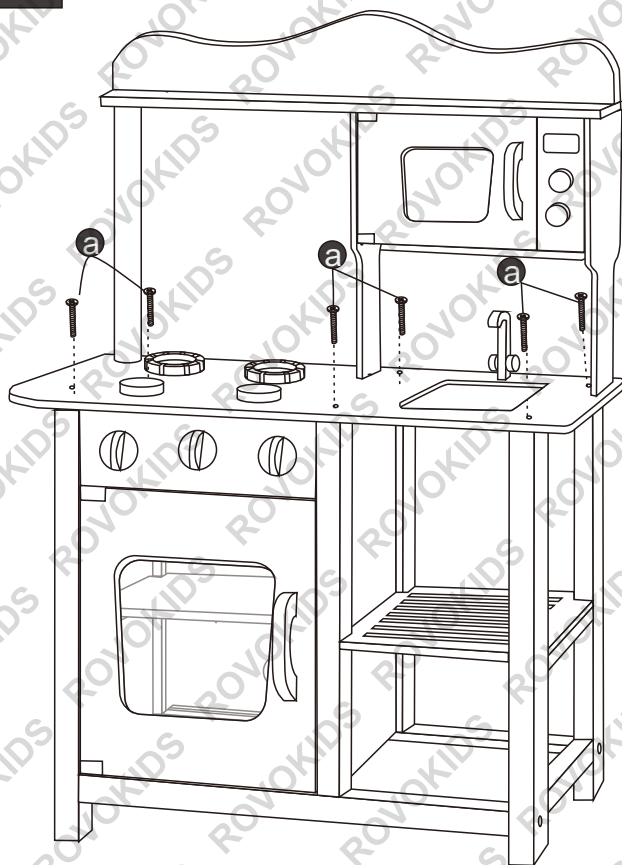

Step18

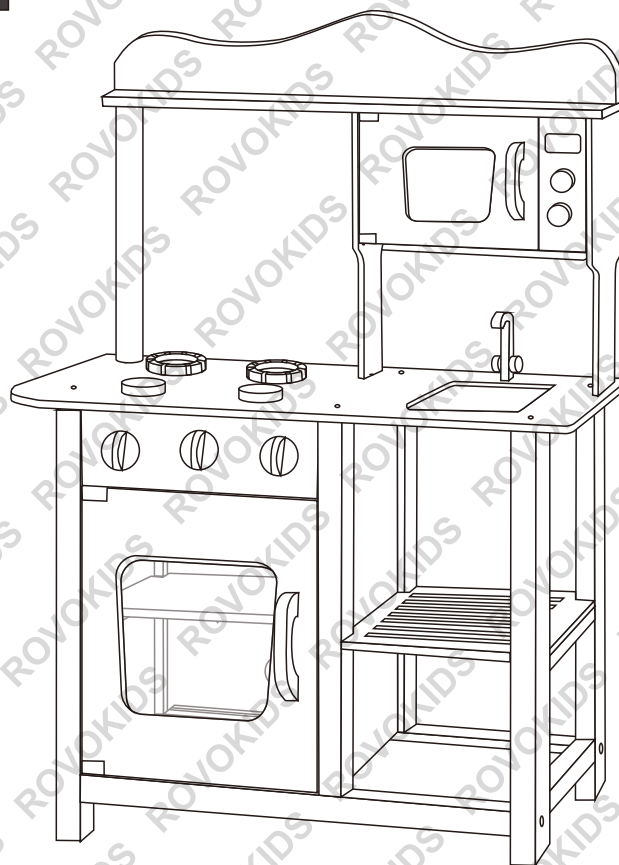**WARNING:**

ADULT ASSEMBLY REQUIRED.

Product includes small parts with potentially hazardous sharp points and sharp edges in the unassembled state. Keep unassembled parts away from children.



0-3