

Bäumr-AG®



SELF-PROPELLED LAWNMOWER

USER MANUAL

RETAIN THIS MANUAL FOR FUTURE REFERENCE

PLEASE READ THIS MANUAL CAREFULLY BEFORE USE

TABLE OF CONTENTS

SAFETY	1
General safety Instructions	1
Instructions for Use	1
LAWNMOWER PARTS	3
SET-UP	4
Preparation	4
Assembling the Handle	4
Installing the Handle Panel	5
Assembling the Grass Catcher	5
OPERATION	6
Before Starting the Lawnmower	6
Adding Oil	6
Adding Fuel	6
Controlling and Operating the Lawnmower	7
Starting the Lawnmower	7
Controlling Travel	8
Application Range for the Petrol Lawnmower	8
Mowing With the Grass Catcher	8
Mowing with Rear Discharge	8
Mowing with Side Discharge	8
Setting the Mowing Height	9
Replacing the Mowing Blades	9
Changing the Motor Oil	9
MAINTENANCE	10
Lawn Care	10
Lawnmower Maintenance	10
Service	11
Storage	11
TECHNICAL SPECIFICATIONS	11

SAFETY

GENERAL SAFETY INSTRUCTIONS

- Carefully unpack the product and take care not to throw away any part of the packaging before you find all the parts of the product.
- Store the machine in a dry place out of reach of children. Never allow children or persons who are not acquainted with the contents of this user's manual to work with the machine.
- Read all warnings and instructions. Not following warnings or instructions may lead to injury by electrical shock, a fire and/or serious injuries.
- The product is packed in a package that prevents damage during transport. This package is a resource and so can be handed over for recycling.
- Before you start working with the machine, read the following safety and usage instructions.
- Acquaint yourself with the operating elements and the correct use of the machine. Keep the user's manual in a safe place where it can be easily retrieved for future use. Save the original packaging, including the internal packing material, warranty card and proof of purchase receipt at least for the duration of the warranty. If you need to ship this machine, pack it in the original cardboard box to ensure maximum protection during shipping or transport (e.g. when moving or when you need to send this product for repair).

NOTE: If you hand over the machine to somebody else, do so together with the user's manual. Following the instructions in the included user's manual is a prerequisite for the proper use of the machine. The user's manual also contains operating, maintenance and repair instructions.


- The manufacturer takes no responsibility for accidents or damages resulting from not following the instructions in this manual.
- This product is used exclusively for mowing grass. Do not use it for any other purposes than those intended. Otherwise there is a risk of damaging it or an injury.
- The person operating the lawnmower is responsible for the safety of persons in the work area.
- Never operate the lawnmower in the near vicinity of other people, children or freely roaming animals.
- Before starting mowing, check the terrain where the lawnmower will be used and remove stones, wires, sticks, splinters, bones and other foreign objects, which could become caught in it or deflected or cause injuries.

INSTRUCTIONS FOR USE

- All nuts, pins and bolts must be properly tightened so that the machine is in a safe and operational condition.
- Never use the lawnmower without the grass catcher or protective cover.
- Never use the lawnmower with loose mowing blades. Always check in advance that all respective bolts are securely tightened. Blunt blades must be sharpened evenly.
- Damaged blades must be replaced.
- When working with the lawnmower, wear long pants and solid footwear.
- Never start the lawnmower in enclosed or poorly ventilated areas where fumes could accumulate. Emissions from the engine contain carbon monoxide, which is life threatening.
- Work only during sufficient light conditions (in daylight or sufficient artificial lighting).
- Do not use the lawnmower when it is raining or if the grass is wet.
- Proceed especially carefully when mowing in elevated terrain (on a slope). Always mow perpendicular to the slope, parallel to the contour, and not directly up/down.

- Under no condition leave the lawnmower running without supervision; if you leave the lawnmower, turn off the engine.
- Never lift the rear part of the lawnmower when starting it and always keep your limbs away from the cutting deck or the rear grass ejection chute while the engine is running.
- Never modify the engine's speed setting.
- On lawnmowers with travel, release the travel lever before starting the engine.
- Never transport the lawnmower while its engine is running.
- Stop the engine and disconnect the spark plug in the following cases:
 - When performing any task whatsoever under the mowing deck or in the rear grass ejection chute.
 - When performing maintenance, repairs or inspecting the machine.
 - Before carrying, lifting or transporting the lawnmower.
 - When you leave the lawnmower without supervision or you are getting ready to adjust the mowing height.
 - Before removing and emptying the grass catcher.
 - When an impact with a foreign object occurs, stop the engine and carefully inspect to ensure that there is no damage. In the event of damage, take the lawnmower to a specialised service centre for repairs.
- **ATTENTION!** The mowing blade continues to rotate for several seconds after the engine is turned off.
 - If the lawnmower is vibrating abnormally (immediately identify and remedy the cause of the vibration).
 - For the purpose of ensuring safe operation, regularly check that the pins, bolts and nuts on the lawnmower are securely tightened.
- **ATTENTION: FUEL IS A VERY FLAMMABLE LIQUID.**
 - Store fuel in a suitable container.
 - Only add fuel in an open and well ventilated location. When handling fuel, do not smoke or use a mobile phone.
 - Only add fuel when the engine is turned off. Never open the fuel tank or add fuel if the engine is hot or if it is running.
 - If fuel is spilled, do not start the engine. Take the lawnmower away from the location where the fuel was spilled and take care to avoid possible ignition. Continue with work only after the spilled fuel has evaporated and the fuel fumes have dissipated;
 - After adding fuel, securely tighten the fuel tank cap and the cap on the fuel canister.
- **ATTENTION:** Before carrying out maintenance or repairs, stop the engine and disconnect the spark plug.

LAWNMOWER PARTS

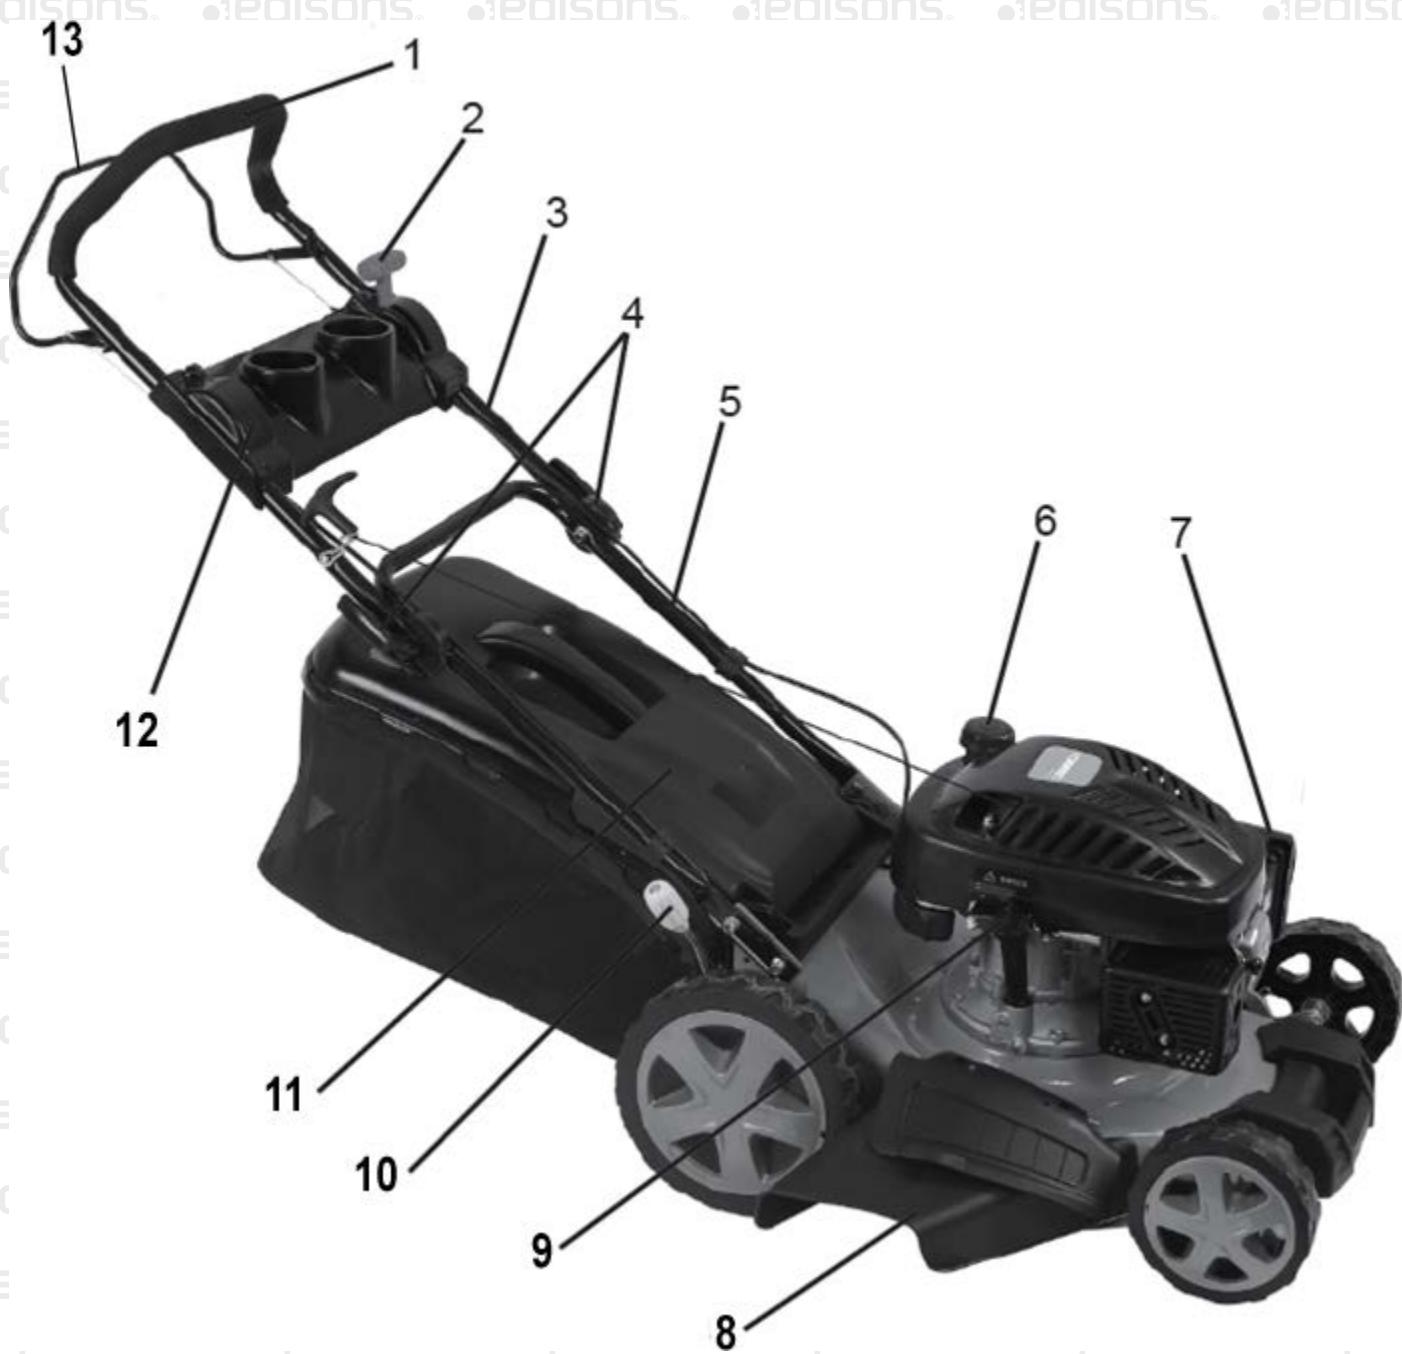

No.	Part	No.	Part
1	Travel lever	8	Side discharge deflector
2	Engine speed control lever	9	Cap with oil dipstick
3	Top part of the handle	10	Central mowing height adjustment lever
4	Screws with wing nuts	11	Grass catcher cover
5	Bottom part of the handle	12	Handle panel
6	Fuel tank cap	13	Start / brake switch
7	Air filter cover		

SET-UP

PREPARATION


- Before assembling and starting the petrol lawnmower, first carefully read the entire user's manual and the instructions contained in it.
- **IMPORTANT INFORMATION:** The lawnmower is supplied **WITHOUT FUEL AND OIL** in the engine.
- Your new lawnmower was tested at the production plant meaning that a small amount of residual oil may be in the engine.
- Take the lawnmower out of the cardboard packaging and check that no loose parts are left in the packaging.

ASSEMBLING THE HANDLE

IMPORTANT INFORMATION: Carefully unfold the lawnmower handle, being careful not to pinch or damage the lawnmower's control cables.


1. Insert the bottom part of the handle (point 1) into the respective hole on the lawnmower (see arrow) and secure in place with 4 screws – two screws on each side of the handle.
2. Attach the top part of the handle (point 2) to the bottom part of the handle using the included screws with the quick coupler and wing nuts (point 3).

IMPORTANT NOTICE: After loosening the quick coupler, it is possible to comfortably adjust the height of the handle and to select the most comfortable work position.

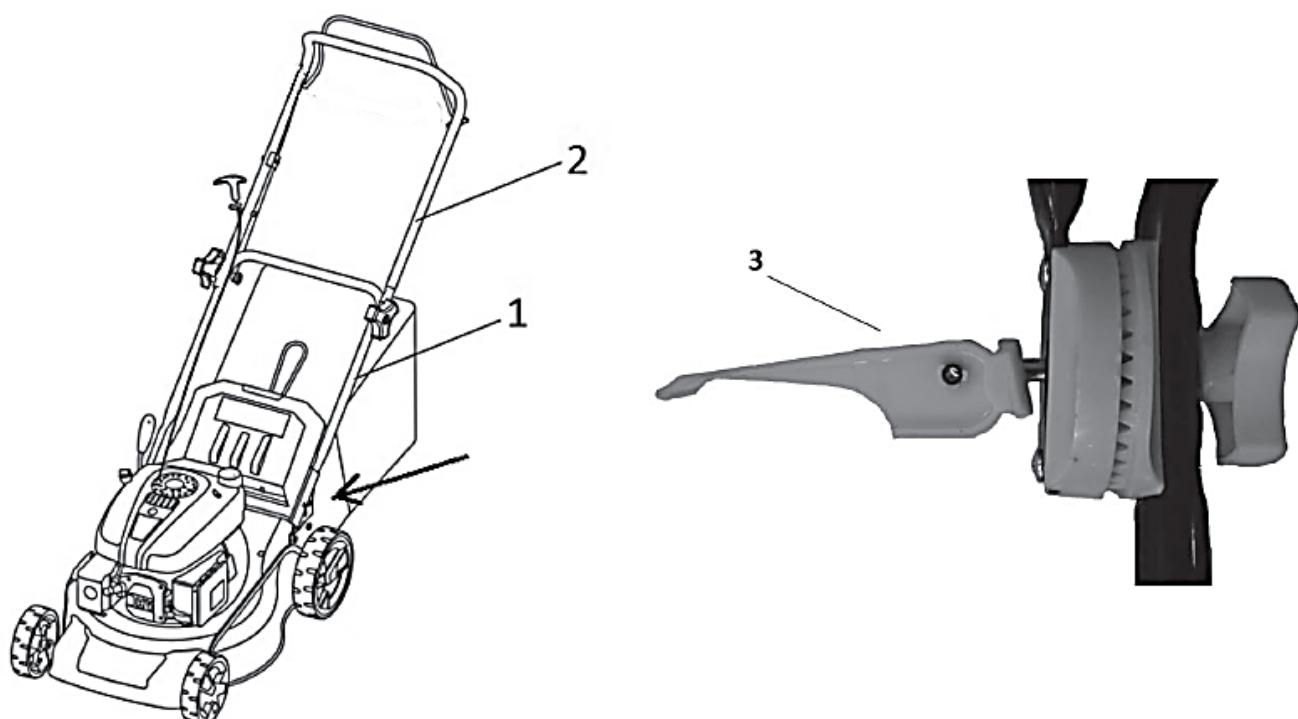

INSTALLING THE HANDLE PANEL

1. Attach the plastic handle panel using the included screws.

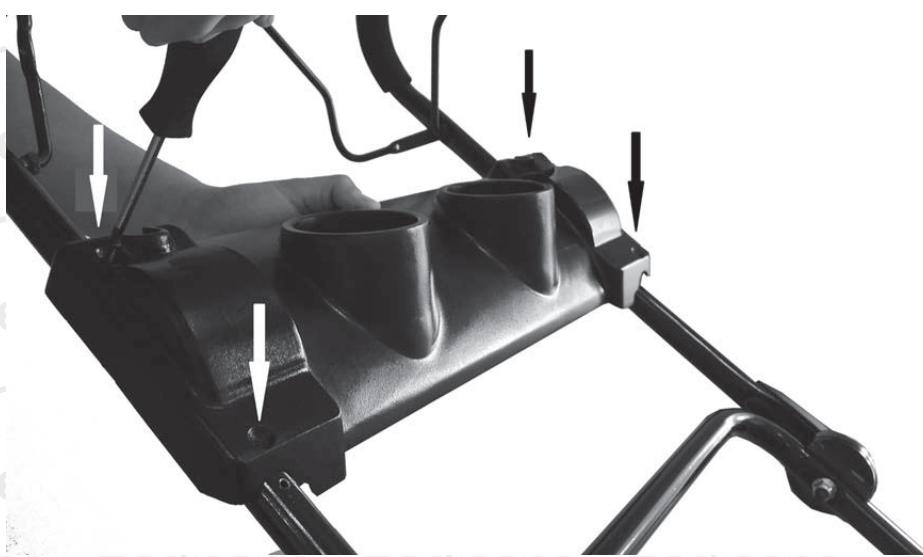

ASSEMBLING THE GRASS CATCHER

1. Secure the plastic hooks at the end of the textile part of the grass catcher into the steel frame.



IMPORTANT NOTICE: The grass catcher is equipped with a full indicator. It is a plastic flap at the rear of the grass catcher. When the grass catcher is not full, the flap is raised. When it closes, it is necessary to tip out the grass catcher.


OPERATION

BEFORE STARTING THE LAWNMOWER

ADDING OIL

The lawnmower is supplied without motor oil. Before first start up, add motor oil SAE30 or 15W-40 (approx. 600 ml) according to the following instructions.

1. When pouring in the oil, place the lawnmower on a level surface.
2. Pull the cap with the oil dipstick out of the oil refill hole.
3. After adding oil, put the dipstick back into the hole and tighten it.
4. The oil level must be between the upper (MAX) and lower (MIN) limit.

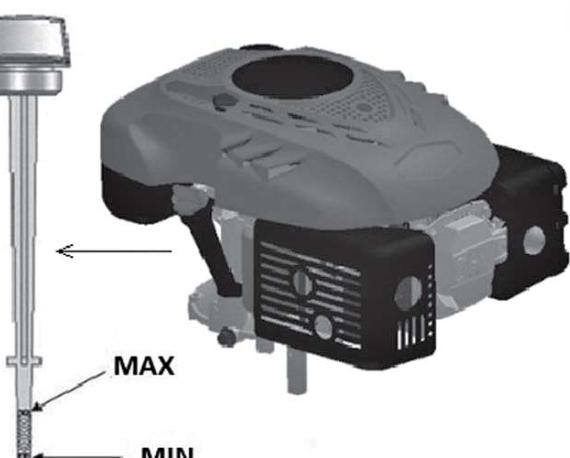

CAUTION! DO NOT OVERFILL the oil tank, otherwise a large amount of smoke will come out of the exhaust when the lawnmower is started up.

IMPORTANT INFORMATION:

- Check the oil level before every use of the lawnmower. Add oil if necessary. Add oil up to the MAX level mark on the oil dipstick.
- Replace the oil after the first 5 hours of operation and subsequently after every 25 hours of operation.

ADDING FUEL

- The suitable type of fuel for this engine is NATURAL 95.
- After unscrewing the fuel tank cap, add the fuel, pouring it in all the way up to the collar of the fuel tank but do not overfill it.
- Always add fresh, clean and approved lead-free petrol with an octane rating of at least 95.

CAUTION!

- In the event that you spill any oil or fuel on the lawnmower when refilling, wipe it away immediately. Do not store or add fuel or handle it in any way in the vicinity of an open fire.
- Fuels mixed with alcohol or fuels with ethanol or methane additives may bind moisture to themselves, which may result in separation during storage and the formation of acids. Subsequently during storage the acid vapours may damage the fuel system of the lawnmower engine. These fuels must not be used in the lawnmower.

IMPORTANT INFORMATION:

- When not using the lawnmower for longer than 30 days, drain the fuel tank, start the engine and let it run until the fuel lines and the carburettor are empty (the engine will stop on its own). This will prevent future engine problems.
- Before using it again, add fresh fuel into the fuel tank. For more information, see chapter Storage instructions.

CONTROLLING AND OPERATING THE LAWNMOWER

STARTING THE LAWNMOWER

1. Move throttle to COLD/START position.



2. Pull the STARTER CABLE. The cable must be given a short tug to engage the starter (approx. 3 – 5cm of cable). Once engaged pull the remaining cable in 1 continuous and firm motion. Repeat 3 – 4 times in succession or until engines starts.



3. When engine starts, move throttle to the RUN position. Keeping the throttle in the COLD/START position may cause engine to stop or run poorly.



CAUTION! A small amount of smoke may be emitted when the engine is started up for the first time as the protective layers in the engine are burnt off. This is completely normal and does not constitute a problem.

CONTROLLING TRAVEL

The travel is controlled using the travel lever. When the lever is pulled to the handle, the lawnmower will start moving. To stop, release the lever. This lawnmower has one constant speed.

**APPLICATION RANGE FOR THE PETROL LAWNMOWER**

- Mowing with collection of grass clippings in a grass catcher.
- Mowing with rear discharge of grass clippings.
- Mowing with side discharge.
- Mulching - mowing with loose placement of grass clippings on the lawn.

MOWING WITH THE GRASS CATCHER

When the grass catcher is installed, grass clippings are discharged into the grass catcher.

MOWING WITH REAR DISCHARGE

Without the grass catcher installed, the grass catcher cover serves as a deflector that directs the movement of the grass clippings towards the ground. A row of grass clippings is thereby formed behind the lawnmower.

MOWING WITH SIDE DISCHARGE

CAUTION! Attach and remove the side discharge deflector only with the engine turned off.

Use your hand to lift the side discharge cover and attach the side discharge deflector. In order to mow with side discharge, it is necessary to install a mulching plug into the discharge chute.



SETTING THE MOWING HEIGHT


The mowing height is set centrally using the central mowing height adjustment lever. You can select from 5 positions in the range of 25 to 70 mm. The middle mowing height is the most suitable for the majority of lawns.

Lawn damage may result when the lowest height is set.

REPLACING THE MOWING BLADES

CAUTION! For this task, we recommend that you contact an authorised service centre. Prior to removing the blade, drain the oil from the oil tank.

If you wish to replace the mowing blade, remove the bolt. Perform the installation according to the provided picture below. Tighten the screw. The tightening torque is 40 Nm. When replacing the blade, replace the fastening bolt also.

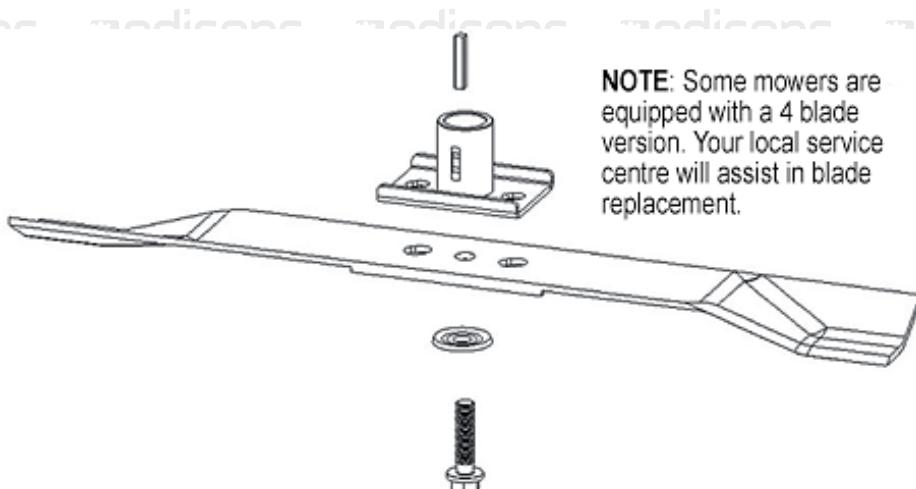


NOTE: Some mowers are equipped with a 4 blade version. Your local service centre will assist in blade replacement.

CHANGING THE MOTOR OIL

CAUTION! For this task, we recommend that you contact an authorised service centre.

1. The drain plug is located under the engine. Place a suitable container for catching the used oil under the engine and remove the plug. Tilt the lawnmower so that all the oil can drain from the oil tank.
2. After draining the oil, put the plug back into the hole, making sure that the plug is securely in its place and wipe away any drops of spilled oil.
3. Add type SAE30 or 15W-40 oil into the oil tank.
4. When the oil dipstick is inserted into the hole and screwed in, the oil level should be between the Min and Max marks. Do not overfill the oil tank.
5. Start the engine and allow it to run for a short time.
6. Stop the engine, wait 1 minute and re-measure the oil level in the oil tank. Add oil to the required level if necessary.

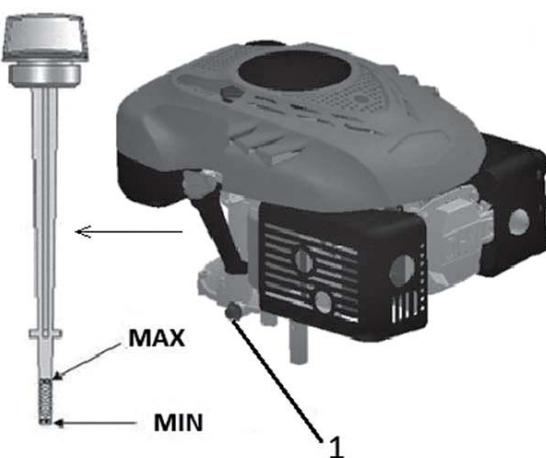

MAINTENANCE

LAWN CARE

- Various forms of care are required depending on the type of grass area.
- Therefore, always read the instructions included on seed packages with respect to the mowing height for the growing conditions in the given locality.
- It is necessary to always keep in mind that the larger part of grass consists of a stem and one or more leaves.
- When the leaves are cut off completely, the lawn is damaged and the renewal of growth will be much more difficult.
- The following instructions generally apply:
 - Excessively low mowing causes disruption to the roots and subsequently "spotty" appearance;
 - In summer, mowing must be higher to prevent the soil from drying out;
 - Mowing wet grass may result in a lower efficiency of the blade due to grass catching on the blade and grass being ripped out of the ground;
 - In the event of exceptionally tall grass it is appropriate to perform the first mow at the maximum permitted mowing height of the machine and then mow again only after two or three days.
- The lawn will have a better appearance when it is mowed regularly over its entire area at the same height with alternating mowing directions.

LAWNMOWER MAINTENANCE

- All nuts, pins and bolts must be properly tightened so that the machine is in a safe and operational condition. Regular maintenance is the basic prerequisite for ensuring safety of the user, maintain the lawnmower's operating condition and high performance.
- Never store a machine with petrol in the fuel tank inside a building where the fumes could come within range of an open fire, sparks or sources of high temperature.
- Before storing in any enclosed area, allow the engine to cool down.
- To reduce the risk of a fire, ensure that the lawnmower and in particular the engine, exhaust muffler, battery and also the location of spare fuel storage are free of grass, leaves or excessive amounts of lubricant.
- Regularly inspect the condition of the deflector and the grass catcher; replace if damaged.
- Drain the fuel in a well ventilated area when the engine has cooled down.
- When removing or installing the mowing blade, use thick work gloves.
- It is necessary to check the balance of the mowing blade every time that it is sharpened.
- **ATTENTION:** Before carrying out maintenance or repairs, stop the engine and disconnect the spark plug.
- Regularly inspect the lawnmower and ensure that all grass deposits are removed from the underside of the chassis.
- Regularly lubricate the axle of the chassis and the bearings using a suitable lubricant.
- Regularly inspect the condition of the blades because they have a significant effect on the performance of the lawnmower. Blades should always be sharp and balanced.
- In regular intervals, check that all nuts and bolts are tightened. Nuts and bolts that are worn out or incorrectly tightened may cause serious damage to the engine or the frame.

- If the blade strongly impacts an obstacle, stop the lawnmower and take it to an authorised service centre.
- **BLADE:** the blade is made from pressed steel. To achieve the best possible mowing results, regularly sharpen the blades, approximately after every 25 hours of operation. Check that the blade is always correctly balanced. To do this, insert a steel axle (with a diameter of 2-3 mm) into the middle hole. If it is correctly levelled, the axis will remain in the horizontal position.
- If the blade does not remain in the horizontal position, replace it.
- When removing the blade, screw out the bolt, check the load bearing part of the blade. If the parts are worn out or damaged, replace them.
- **ATTENTION:** Always use only original spare parts. Poor quality spare parts may cause serious damage to the lawnmower and create a safety hazard.

SERVICE

- In the event that after purchasing the product you find any kind of defect, contact the manufacturer.
- When using the product, follow the instructions contained in the included user's manual.
- A complaint will not be accepted if you modified the product or if you did not follow the instructions in this user's manual.

STORAGE

If you will not be using the machine for an extended period of time, store it according to the following instructions. This will extend the lifetime of the machine.

- Fully drain fuel from the fuel tank and the carburettor.
- Screw out the spark plug and pour a small amount of motor oil into the socket. Gently pull the pull cord 2 to 3 times.
- Use a clean cloth to clean the exterior surfaces. Store the machine in a clean dry location.

TECHNICAL SPECIFICATIONS

ENGINE	OHV, air-cooled, 4 stroke
TORQUE/SPEED	2.5 kW/3000rpm
DISPLACEMENT	165cc
STEEL DECK	18"
STARTING SYSTEM	Recoil/Pull Start; Self-propelled
FUEL TANK CAPACITY	1.2L
FUEL TYPE	Unleaded 95+ RON
OIL TANK CAPACITY	0.6L
RECOMMENDED OIL	SAE30, 15W-40
CUTTING HEIGHT	25-70mm
WHEELS	7" front, 10" rear
GRASS CATCHER CAPACITY	55L



Some experts believe the incorrect or prolonged use of almost any product could cause serious injury or death. For information that may reduce your risk of serious injury or death consult the points below and additionally, the information available at www.datastreamserver.com/safety

- Consult all documentation, packaging and product labelling before use. Note that some products feature online documentation which should be printed and kept with the product.
- Check product for loose / broken / damaged / missing parts, wear or leaks (if applicable) before each use. Never use a product with loose / broken / damaged / missing parts, wear or leaks (if applicable).
- Products must be inspected and serviced (if applicable) by a qualified specialist every 6 months assuming average residential use by a person of average weight and strength, above average technical aptitude, on a property matching average metropolitan specification. Intended use outside these guidelines could indicate the product is not suitable for intended use or may require more regular inspection or servicing.
- Ensure all possible users of the product have completed an industry recognised training course before being given access to the product.

- The product has been supplied by a general merchandise retailer that may not be familiar with your specific application or your description of the application. Be sure to attain third party approval for your application from a qualified specialist before use regardless of prior assurances by the retailer or its representatives.
- This product is not intended for use where fail-safe operation is required. As with any product (take an automobile, aircraft, computer or ball point pen for example) there is always a small chance of a technical issue that needs to be repaired or may require replacement of the product or a part. If the possibility of such failure and the associated time it takes to rectify could in any situation inconvenience the user, business or employee or could financially affect the user, business or employee then the product is not suitable for your requirements. This product is not for use where incorrect operation or a failure of any kind, including but not limited to a condition requiring product return, replacement, service by a technician or replacement of parts could cause a financial loss, loss of employee time or an inconvenience requiring compensation.
- If this item has been purchased in error considering the points above simply contact the retailer directly for details of their returns policies if required.

Bäumr-AG®
.com.au