



Rectangular Fire Pit/BBQ

Assembly Instructions

[Revision 2.0 October 2015]

SKU: OTDFPTTHMAR94

Table of Contents

INCLUDED ITEMS..... 1

WARNING AND PRECAUTIONS 2

OPERATION INSTRUCTIONS 3

CARE AND MAINTENANCE 3

 
ASSEMBLY INSTRUCTIONS 4

FURTHER WARNINGS AND PRECAUTIONS 6

CARE AND MAINTENANCE 7

Included Items

Please check the carton and packing materials before disposing to make sure that you have all the parts for this product.

Part List	Description	Qty.	Drawings
A	Top Frame	1	
B1	Long – Frame Support	2	
B2	Short – Frame Support	2	
C	Corner Post/Leg	4	
D1	Long – Ceramic Tile Slat	4	
D2	Short – Ceramic Tile Slat	4	
E	Corner – Ceramic Tile Square	4	
F	Fire Bowl	1	
G	Log Grate	1	
H	Mesh Lid	1	
I	Lid Ring	1	
J	Screws	20	
K	Iron Poker	1	

Part List	Description	Qty.	Drawings
L	Allen Key	1	
M	BBQ Grill	1	
N	Protective Cover	1	

Warning and Precautions



- Check local councils before using the fire pit.
- This fire pit is intended for Outdoor Use Only! DO NOT use on wooden decks.
- This fire pit is intended to Burn Wood Logs Only! DO NOT burn coal, leaves or other combustible materials in the fire pit.
- NOT for use by children. Keep children and pets away from the fire pit.
- Fire pit is hot, use with caution. NEVER touch hot fire pit with bare hands.
- NEVER leave burning fire pit unattended and always extinguish fire completely before leaving the fire pit.
- Maintain a minimum of 5 FT from any structure!
- DO NOT use near flammable or combustible objects or materials.
- Only CHROME PLATED BBQ GRILL is intended for cooking.
- LOG GRATE is NOT intended for cooking and SHOULD NOT be used for this purpose.

Operation Instructions


- Place wood logs on grate and light with match. DO NOT overload logs.
- Please use Poker (provided) when handling burning and hot log.
- We do not recommend pouring water over the fire unless necessary as this will increase chances of metal oxidation.
- The fire should be allowed to expire on its own or by suffocating with sand.
- Tile is fragile so handle with care.

Care and Maintenance

- The frame structure of this unit is made of powder-coated steel extrusion and should resist rusting under normal use.
- Should rusting occur, we suggest using a steel brush on the affected area followed by a spray coating of high temperature anti-rust paint.
- For additional rust proofing of the bowl, grate or mesh lid we recommend that a coat of high temperature primer is applied before use.
- You may cover the fire pit with a Protective Cover when the fire pit is not in use. Ensure the fire pit has completely cooled down before using the Protective Cover.


Assembly Instructions

Please check all packing material carefully before discarding, as some parts may be encased in the packing material.

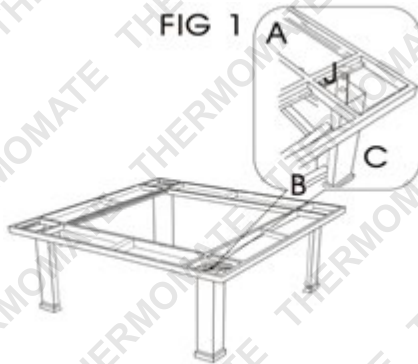

Step 1

Attach the top frame (A) to the 4pcs of corner posts/legs (C) by using screws (J) and tighten by hand and do not fully tighten all bolts yet.

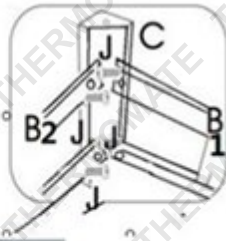

Step 2

Attach the long/short frame supports (B1 & B2) to the corner posts/legs (C) by using screws (J). Tighten by hand and do not fully tighten all bolts.





Step 3

Fully tighten all screws with provided allen key.

Place the tile slats (D1 & D2) and corner squares (E) in their correctly fitted spaces.



Step 4

Place fire bowl (F) on the base as shown, and put Log Grate (G) and BBQ Grill (M) in the Square Bowl (F).

Step 5

Screw Lid Ring (I) in to the Mesh Lid (H).

Place the mesh lid on the square bowl and use as cover.





Step 6:

Cover the fire pit with a Protective Cover (N) when the fire pit is not in use. Ensure the fire pit has completely cooled down before using the Protective Cover

Further Warnings and Precautions

- FOR OUTDOOR USE ONLY.
- KEEP THE OUTDOOR FIRE PIT AT LEAST 20 FEET AWAY FROM ANY FLAMMABLE SURFACE OR DWELLING.
- KEEP AWAY FROM CHILDREN AND PETS.
- CHECK WITH LOCAL COUNCIL FOR ORDINANCES REGARDING THE USE OF OUTDOOR FIRE PIT.
- NEVER USE GASOLINE, KEROSENE, LIGHTER FLUID, ALCOHOL OR ANY OTHER FLAMMABLE MATERIAL TO LIGHT YOUR FIRE.
- ALWAYS USE GLOVES AND PROTECTIVE GLASSES WHEN LOADING THE FIRE PIT OR EXTINGUISHING THE FIRE.
- NEVER LEAVE THE FIREPIT UNATTENDED WHEN NOT IN USE.
- DO NOT MOVE THE FIRE PIT WHEN HOT OR LIT.
- ALWAYS SET THE OUTDOOR FIREPIT ON A LEVEL NON-FLAMMABLE SURFACE.
- NEVER OVER LOAD THE OUTDOOR FIREPIT.
- ALWAYS MAKE SURE THE FIRE AND ASHES ARE COMPLETELY EXTINGUISHED WHEN NOT IN USE OR UNATTENDED.
- HAVE A FIRE EXTINGUISHER AVAILABLE NEAR THE FIRE PIT IN CASE OF EMERGENCY.

- THE LOG GRATE IS NOT INTENDED FOR COOKING, AND SHOULD NOT BE USED FOR THIS PURPOSE.
- DO NOT BURN COAL, LEAVES OR OTHER COMBUSTIBLE MATERIALS IN THE FIRE PIT.

Care and Maintenance

This fire pit is made of powder coated steel and under normal use and conditions, is rust resistant. However if scratched, or under certain atmospheric conditions rust may occur. Should rust occur, we suggest using a steel brush or steel wool to remove the rust on the affected area. When the area is clean, apply a coat of primer and when dry spray a high heat anti rust metal paint onto the frame.

We also recommend that after each use, the fire pit be cleaned, and when not in use the fire pit be covered.



Some experts believe that the incorrect or prolonged use of almost any product may cause serious injury or death. To help reduce your risk of serious injury or death, refer to the information below. For more information, see www.datastreamserver.com/safety

- Consult all documentation, packaging and product labelling before use. Note that some products feature documentation available online. It is recommended to print and retain the documentation.
- Before each use, check the product for loose/broken/damaged/missing parts, wear or leaks (if applicable). Never use a product with loose/broken/damaged / missing parts, wear or leaks.
- Products must be inspected and serviced (if applicable) by a qualified technician every 6 months. This is based on average residential use by persons of average size and strength, and on a property of average metropolitan size. Use beyond these recommendations may require more frequent inspections / servicing.
- Ensure that all users of the product have completed a suitable industry recognised training course before being allowed access to the product.
- The product has been supplied by a general merchandise retailer that may not be familiar with your specific application or description of application. Be sure to attain third-party approval from a qualified specialist for your application before use, regardless of any assurances from the retailer or its representatives.
- This product is not intended for use where fail-safe operation is required. As with any product (for example, automobile, computer, toaster), there is the possibility of technical issues that may require the repair or replacement of parts, or the product itself. If the possibility of such failure and the associated time it may take to rectify could in any way inconvenience the user, business or employee, or financially affect the user, business or employee, then the product is not suitable for your requirements. This product is not intended for use where incorrect operation or a failure of any kind, including but not limited to, a condition requiring product return, replacement, parts replacement or service by a technician may cause financial loss, loss of employee time or an inconvenience requiring compensation.
- If this product has been purchased in error when considering the information presented here, contact the retailer directly for details of their returns policy, if required.



©2018 Thermomate. All rights reserved. No part of this document, including descriptive content, concepts, ideas, diagrams or images may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying, scanning or recording, or any information storage and retrieval system, without express permission or consent from the publisher.