



READ  
THIS  
FIRST!

***This product must be installed as described. Failure to assemble the product according to the instructions may void any warranties provided or implied.***

## Safety and General Warnings

- This product must be installed by two people [   ]. Attempting to install the product on your own may present personal risk and/or damage the product.
- This product is not designed to be used as a fixed or permanent shelter.
- Once assembled, always secure the product properly, regardless of weather conditions.
- Once assembled, never leave the product unattended.
- Do not assemble, install or use the product on uneven or unsafe surfaces.
- Do not assemble, install or use the product in the event of heavy rain or windy conditions.

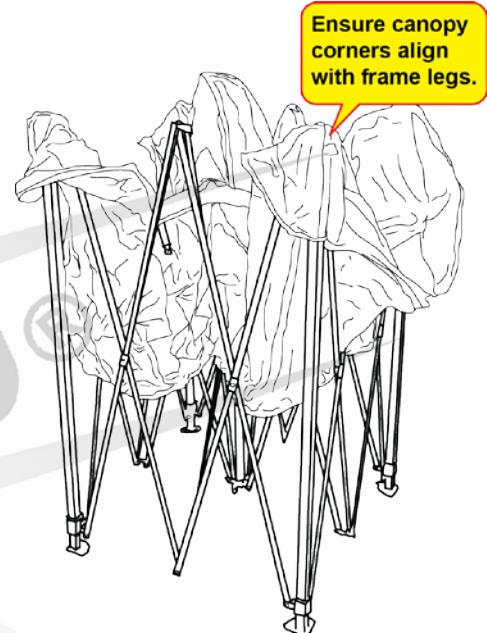


Figure 1 – Unassembled Gazebo

## Included Items

- Gazebo frame.
- Gazebo canopy.
- Securing pegs and guy-ropes.

## Assembly

1. Stand the gazebo frame upright in the centre of the location where it is to be erected.
2. Carefully place the gazebo canopy over the frame so that the centre and corners are lined up with the frame as shown in Figure 1.
3.  At each corner of the gazebo frame, gently slip the canopy over the frame leg and be sure to firmly attach the canopy to the leg with the Velcro sections. See Figure 2.



Figure 2 – Canopy to Leg Velcro Attachment

Please Turn Over

4. **⚠ This step requires two persons.** On opposite sides of the gazebo, grab the middle section of the gazebo frame in both hands as shown in Figure 3. Simultaneously lift the sections of frame up and slowly move backwards, allowing the frame to expand to its full size as shown in Figure 4.

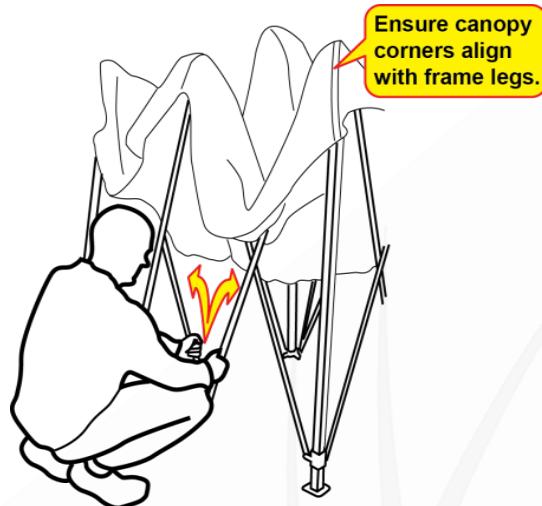


Figure 3 - Hold Frame to Expand

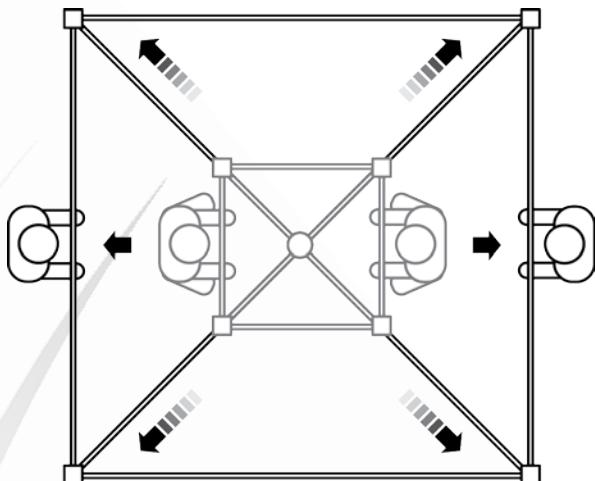


Figure 4 - Expanding the Frame

5. At each leg, secure the top part of the frame to the leg – raise the top part of the frame until the location pin in the tube lock pops into its hole as shown in Figure 5.
6. Secure the canopy sides to the frame using the elastic and clips.
7. Raise the gazebo roof to the required height by holding the bottom part of the leg to the ground and raising the telescopic section up until the tube lock location pin pops into the next hole. Perform this operation on all legs before raising the roof to the next hole.
8. Once the gazebo is assembled and the roof extended to the required height, secure the legs to the ground using the supplied pegs.
9. Tie the guy-ropes to the eyelets on the canopy (usually at each frame leg) and secure the other end to the ground using the supplied pegs.

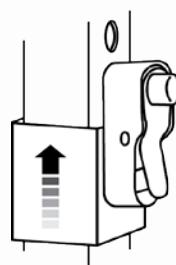
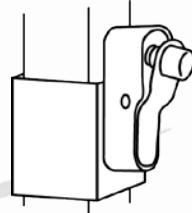


Figure 5 - Tube Lock

**⚠ Do not leave the gazebo unattended. Disassemble the gazebo immediately if weather conditions begin to affect it.**

## Disassembly

Disassembly is a reverse of the assembly procedure. Note that to release the frame tube location pin, press the button at the top of the tube lock then slide the smaller tube inside the larger one as required.

## Care and Maintenance

The gazebo should be carefully disassembled and stored in a dry location. If the canopy or gazebo frame is wet, allow it to dry before storing it. It is also recommended to clean any parts of the gazebo that may be excessively dirty before storing it.



**Some experts believe the incorrect or prolonged use of almost any product could cause serious injury or death. For information that may reduce your risk of serious injury or death consult the points below and additionally, the information available at [www.datastreamserver.com/safety](http://www.datastreamserver.com/safety)**

- Consult all documentation, packaging and product labelling before use. Note that some products feature online documentation which should be printed and kept with the product.
- Check product for loose / broken / damaged / missing parts, wear or leaks (if applicable) before each use. Never use a product with loose / broken / damaged / missing parts, wear or leaks (if applicable).
- Products must be inspected and serviced (if applicable) by a qualified specialist every 6 months assuming average residential use by a person of average weight and strength, above average technical aptitude, on a property matching average metropolitan specification. Intended use outside these guidelines could indicate the product is not suitable for intended use or may require more regular inspection or servicing.
- Ensure all possible users of the product have completed an industry recognised training course before being given access to the product.

- The product has been supplied by a general merchandise retailer that may not be familiar with your specific application or your description of the application. Be sure to attain third party approval for your application from a qualified specialist before use regardless of prior assurances by the retailer or its representatives.
- This product is not intended for use where fail-safe operation is required. As with any product (take an automobile, aircraft, computer or ball point pen for example) there is always a small chance of a technical issue that needs to be repaired or may require replacement of the product or a part. If the possibility of such failure and the associated time it takes to rectify could in any situation inconvenience the user, business or employee or could financially affect the user, business or employee then the product is not suitable for your requirements. This product is not for use where incorrect operation or a failure of any kind, including but not limited to a condition requiring product return, replacement, service by a technician or replacement of parts could cause a financial loss, loss of employee time or an inconvenience requiring compensation.
- If this item has been purchased in error considering the points above simply contact the retailer directly for details of their returns policies if required.

