

Bäumr-AG®



CORDLESS POLE HEDGE TRIMMER

USER MANUAL

[Revision 1.0 July 2016]

RETAIN THIS MANUAL FOR FUTURE REFERENCE

PLEASE READ THIS MANUAL CAREFULLY BEFORE USE

TABLE OF CONTENTS

SAFETY	1
Know your Tool	1
General Safety Rules	1
Safety Instructions for Battery	2
Safety Instructions for Charger	3
Safety Instructions for Hedge Trimmers	3
Electrical Safety	4
COMPONENTS.....	5
SET-UP.....	6
Fitting the Battery Pack	6
Removing the Battery Pack	6
The Head Assembly	6
OPERATION.....	7
Intended Use	7
Operating the Hedge Trimmer	7
Switching On	8
Switching off	8
Charging the Battery	9
Charging Procedure	9
Important Battery Charging Reminders	10
MAINTENANCE	10
TECHNICAL SPECIFICATIONS	11

SAFETY

KNOW YOUR TOOL

- **WARNING!** Carefully observe the instructions in this manual to reduce the risk of personal injury or material damage.
- Read all of this manual carefully before operating the tool.
- Before operating the tool, make sure that you know how to switch the tool off in an emergency.
- Retain this manual for future reference.

GENERAL SAFETY RULES

- **WARNING!** Read all instructions. Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury. The term "power tool" in all of the warnings listed below refers to your battery operated (cordless) power tool.
- Save these instructions.
- **Work area**
 - Keep work area clean and well lit. Cluttered and dark areas invite injuries.
 - Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust. Power tools create sparks which may ignite the dust or fumes.
 - Keep children and bystanders away while operating a power tool. Distractions can cause you to lose control.
- **Electrical safety**
 - Avoid body contact with earthed or grounded surfaces such as pipes, radiators, ranges and refrigerators. There is an increased risk of electric shock if your body is earthed or grounded.
 - Do not expose power tools to rainy or wet conditions. Water entering a power tool will increase the risk of electric shock.
- **Personal safety**
 - Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you're tired or under the influence of drugs, alcohol or medication. A moment of inattention while operating power tools may result in serious personal injury.
 - Use safety equipment. Always wear eye protection. Safety equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.
 - Avoid accidental starting. Ensure the switch is in the off position before plugging in. carrying power tools with your finger on the switch or plugging in power tools that have the switch on invites accidents.
 - Remove any adjusting key or wrench before turning the power tool on. A wrench or a key left attached to a rotating part of the power tool may result in personal injury.
 - Do not overreach. Keep proper footing and balance at all times. This enables better control of the power tool in unexpected situations.
 - Dress properly. Do not wear loose clothing or jewellery. Keep your hair, clothing and gloves away from moving parts. Loose clothes, jewellery or long hair can be caught in moving parts.
 - If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used. Use of these devices can reduce dust related hazards.

- **Power tools use and care**
 - Do not force the power tool. Use the correct power tool for your application. The correct power tool will do the job better and safer at the rate for which it was designed.
 - Do not use the power tool if the switch does not turn it on and off. Any power tool that cannot be controlled with the switch is dangerous and must be repaired.
 - Disconnect the plug from the power source before making any adjustments, changing accessories, or storing power tools. Such preventive safety measures reduce the risk of starting the power tool accidentally.
 - Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool. Power tools are dangerous in the hands of untrained users.
 - Maintain power tools. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tools operation. If damaged, have the power tool repaired before use. Many accidents are caused by poorly maintained power tools.
 - Keep cutting tools sharp and clean. Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.
 - Use the power tool, accessories and tool bits etc., in accordance with these instructions and in the manner intended for the particular type of power tool, taking into account the working conditions and the work to be performed. Use of the power tool for operations different from intended could result in a hazardous situation.
- **Battery tool use and care**
 - Ensure the switch is in the off position before inserting battery pack. Inserting the battery pack into power tools that have the switch on invites accidents.
 - Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
 - Use power tools only with specifically designated battery packs. Use of any other battery packs may create a risk of injury and fire.
 - When battery pack is not in use, keep it away from other metal objects like paper clips, coins, keys, nails, screws, or other small metal objects that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.
 - Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.
- **Service**
 - Have your power tool serviced by a qualified repair person using only identical replacement parts. This will ensure that the safety of the power tool is maintained.

SAFETY INSTRUCTIONS FOR BATTERY

- Never attempt to open the battery for any reason.
- Do not expose to water.
- Do not incinerate the battery pack even if it is severely damaged or is completely worn out. The battery pack can explode in a fire.
- Do not store in locations where the temperature may exceed 40°C
- Do not leave the battery pack in the charger when the charging is finished, otherwise battery leakage may occur.
- Charge only at room temperature.

- Charge only by using the charger provided with the tool.
- Before charging, make sure that the battery is dry and clean.
- Use only the correct type of battery for the tool.
- When disposing the batteries, follow local environmental laws and regulations.
- Under extreme conditions, battery leakage may occur. When you notice liquid oozing out of the battery, proceed as follows:
 - Carefully wipe the liquid off using a cloth. Avoid skin contact.
 - In case of skin or eye contact, follow the instructions below:
 - The battery fluid, a 25-30% solution of potassium hydroxide, can be harmful. In case of skin contact, immediately rinse with water. Neutralize with a mild acid such as lemon juice or vinegar. In case of eye contact, rinse abundantly with clean water for at least 10 minutes. Consult a physician.

NOTE: The batteries in your battery pack are the Lithium-Ion type. Do not dispose of battery packs/batteries into household waste, fire or water. Battery packs/batteries should be collected, recycled or disposed of in an environmental-friendly manner.

SAFETY INSTRUCTIONS FOR CHARGER

- Charger's plug must match the outlet. Never modify the plug in any way. Unmodified plugs and matching outlets will reduce risk of electric shock.
- Use your charger only to charge batteries of the type supplied with your tool. Other batteries could burst, causing personal injury and damage.
- Only 2 battery packs is allowed to be charged continuously in order to prevent overheating of charger, necessary rest time is required to let the charger cool down before further charging.
- When charging is finished, unplug the charger from mains socket outlet and take away the battery pack from the charger, do not leave the battery pack in the charger.
- Never carry the charger by its cord or pull it to disconnect from the socket. Keep the cord away from heat, oil and sharp edges.
- Never attempt to charge non-rechargeable batteries.
- The cord of charger is not changeable, do not continue to use if the cord is damaged.
- Do not expose to water or rain, do not use in wet condition.
- Do not open the charger.
- Do not probe the charger.
- Intended for indoor use only.

SAFETY INSTRUCTIONS FOR HEDGE TRIMMERS


- Wear safety goggles when operating this tool.
- Wear gloves when operating this tool.
- Do not expose the tool to rain or high humidity.
- **THIS TOOL CAN CAUSE SERIOUS INJURIES.** Read instructions carefully for the correct handling, preparation, maintenance, starting and stopping of the tool. Be familiar with all controls and proper use of the tool.
- Only use the tool in daylight or good artificial light.

- Never allow children to use the tool.
- Beware of overhead power lines.
- Avoid operating while people, especially children are nearby.
- Dress properly! Do not wear loose clothing or jewellery which can be caught in moving parts. Use of sturdy gloves, non-skid footwear, and safety glasses is recommended.
- If the tool stalls, immediately switch it off. Remove the battery before attempting to remove any obstructions.
- Remove the battery before checking, maintenance or working on the tool.
- While operating the tool be always sure of a safe and secure operating position especially when using steps or a ladder.
- Do not attempt to repair the tool.
- Do not operate the tool with a damaged or excessively worn cutting device.
- Always wear ear protection, goggle and helmet during operating.
- Always ensure that all guards are fitted when using the tool. Never attempt to use an incomplete tool or a tool with unauthorized modifications.
- Always use two hands to operate the tool.
- When transporting or storing the tool always fit the blade sheath.
- Always be aware of your surroundings and stay alert for possible hazards that you may not hear due to the noise of the tool.
- Do not carry the tool with your hands on the switch unless the battery has been removed.
- If you have not used a hedge trimmer before, preferably seek practical instruction by an experienced user in addition to studying this manual.
- Never touch the blades while the tool is running.
- Never attempt to force the blades to come to a standstill.
- Do not put the tool down until the blade have come to a complete standstill.
- Regularly check the blades for damage and wear. Do not use the machine when the blades are damaged.
- Take care to avoid hard objects (e.g. metal wire, railings) when trimming. Should you accidentally hit any such object immediately switch the tool off and check for any damage.
- Should the tool start to vibrate abnormally, immediately switch it off and check for any damage.
- Always be aware of falling debris when cutting the higher sides of a hedge.
- Be aware of the cutting blade, always wear gloves to protect your hands from cut.
- When the machine is working, the hand must not exceed the guard or come into contact with the blade. See the Components section.
- When the machine is working, do not adjust the angle of the head

ELECTRICAL SAFETY

- Your charger has designed for a specific mains voltage. Always check that the mains voltage corresponds to the voltage on the rating plate.

COMPONENTS

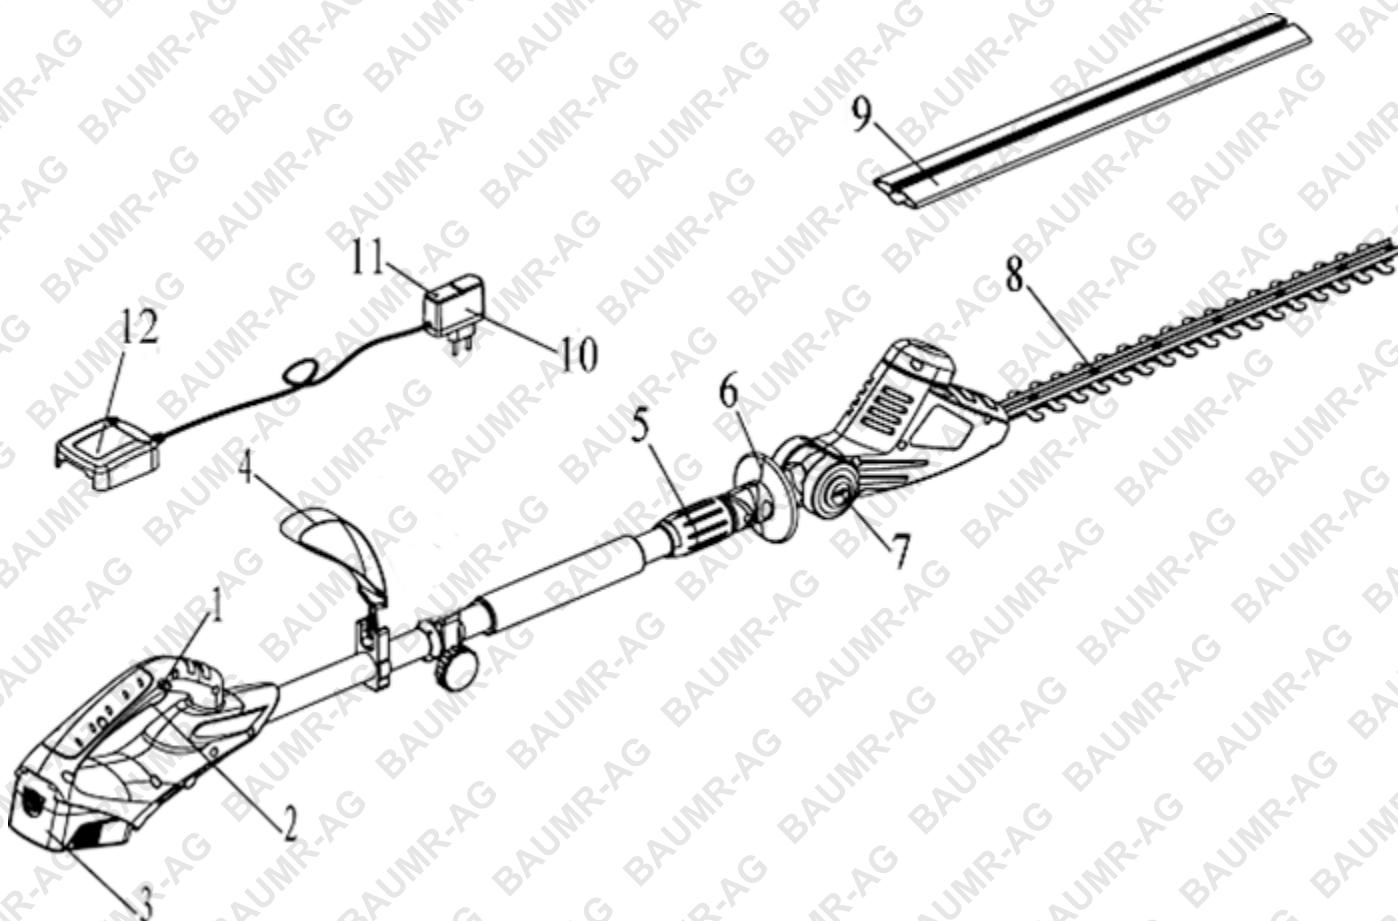


No.	Part
1.	Lock-off button
2.	Main switch handle
3.	Battery pack
4.	Strap guard
5.	Grip area
6.	Guard

No.	Part
7.	Lock button
8.	Blade
9.	Blade sheath
10.	Charger
11.	Charging indicator
12.	Charger station

SET-UP

WARNING! Before assembly, remove the battery pack from the tool.

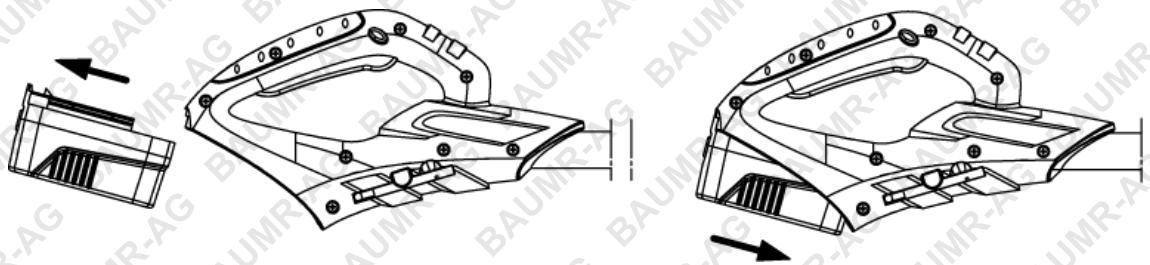

FITTING AND REMOVING THE BATTERY

Your hedge trimmer is equipped with a battery pack, which powers the unit.

FITTING THE BATTERY PACK


1. Place battery pack in your hedge trimmer. Align raised rib on battery pack with groove inside hedge trimmer. See image above.
2. Make sure the latches on each side of your battery pack snap in place and battery pack secured in hedge trimmer before beginning operation.

REMOVING THE BATTERY PACK

1. Locate latches on end of battery pack and depress to release battery pack from your hedge trimmer.
2. Remove battery pack from your hedge trimmer. See image above.

THE HEAD ASSEMBLY

1. When inserted, the arrow 1 would have to target the arrow 2, and must be inserted fully, as shown in the image below.

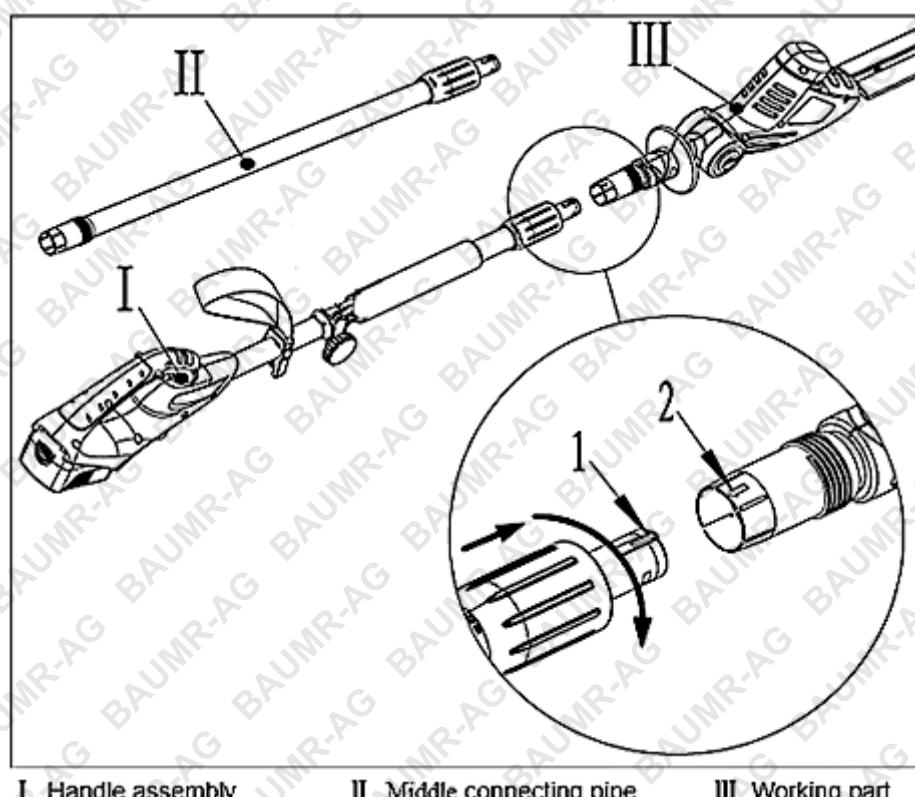

2. Turn the locking knob in the “LOCK” direction. (**IMPORTANT:** Must turn the locking knob tightly). See image below.



3. Buckle in the strap. (See [Components](#) section).

You can either use the buckle strap or not.

OPERATION

INTENDED USE

Your hedge trimmer has been designed for trimming hedges, shrubs and brambles. Do not use it for any other purposes. This tool is intended for consumer use only. Do not overload.

Your charger has been designed for charging batteries of the type supplied with this tool, **DO NOT CHARGE OTHER BATTERY TYPES.**

OPERATING THE HEDGE TRIMMER



It is important you read and understand the instruction manual before first use and keep the manual in a safe place for future reference.



Safety precautions must be observed to reduce the risk of personal injury when operating this machine.



DANGER! Keep clear of power lines, contact can cause death.



It is strongly recommended that a comprehensive training course on machine use, fuel handling safety and engine operation be completed before attempting to use this machine.



Never allow children to access the machine.



Always wear ear protection. Loud noises for an extended period of time may damage your hearing.



Total face and head protection must be worn to reduce injury from falling branches.




Wear no-slip heavy duty work gloves to improve your grip on the saw handle. Gloves also reduce the transmission of machine vibration to your hands.




The dust produced during operation may be dangerous to health. If the work area is very dusty or smoky, wear a respirator.

1. Turn the swivel handle to a suitable position. Push the lock button and then turn the swivel handle to the desired position. Release the lock button again and check whether the button is locked in place.

NOTE: The swivel handle can be locked in five positions (-60°, -30°, 0°, 30° and 60°). See image below.

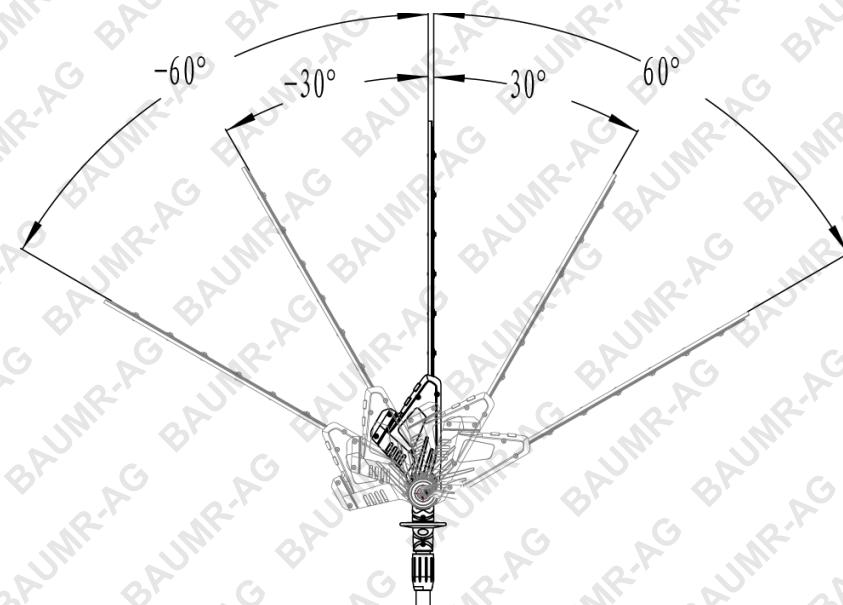

2. Remove the blade sheath.
3. Switch ON and OFF. See image below.

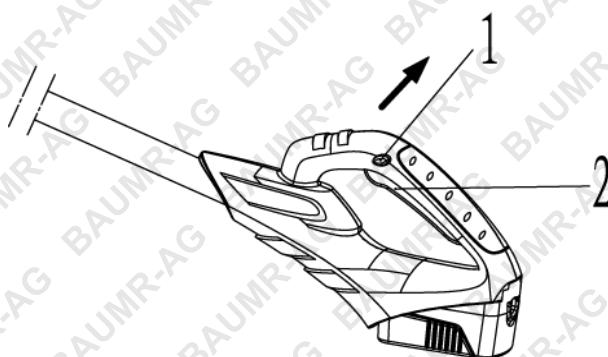

For your safety, this tool is equipped with a double-switch system. This system prevents starting the tool inadvertently. You must push the Lock-off button (1), and then press the Main switch handle (2).

SWITCHING ON

1. Push the Lock-off button (1).
2. Press the Main switch handle (2) and release the Lock-off button (1).

SWITCHING OFF

1. Release the Main switch handle (2).

NOTE: Never attempt to lock the switch in the "ON" position.

CHARGING THE BATTERY

The battery needs to be charged before first use and whenever it fails to produce sufficient power on jobs that were easily done before. After several charge and discharge cycles, the battery will attain full capacity. The battery may become warm while charging; this is normal and does not indicate a problem.


Remove it from the tool and insert it into the charge station (13). The battery pack will only fit into the charge in one way. Do not force .Be sure that battery is fully seated in the charger.

Your battery can be charged in the 4 hours charger supplied. Be sure to read all safety instructions before using your charger. This product is not user serviceable. There are no user serviceable parts inside the charger. Servicing at an authorised service centre is required to avoid damage to static sensitive internal components.

Read all of the instructions in the battery charger section of this manual before attempting to charge the battery pack for your tool. Always use correct battery pack (pack supplied with tool or replacement pack exactly like it). Never install any other battery pack, it will ruin your tool and may create a hazard.

CHARGING PROCEDURE

These chargers require no adjustment and are designed to be as easy as possible to operate. Simply place your battery pack into the receptacle of a plugged in charger and it will automatically charge the pack.

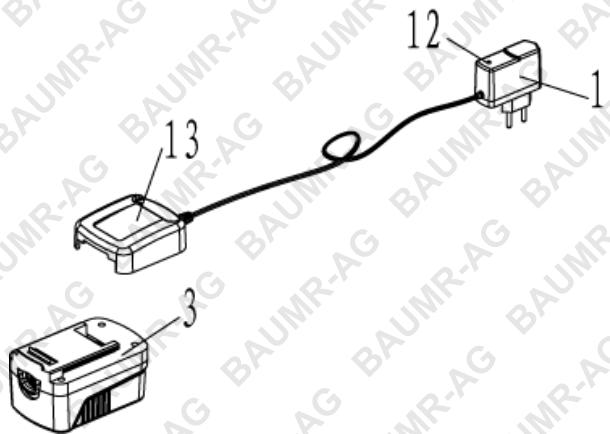

1. Connect the charger (11) to the charger station (13).
2. Plug the charger into an appropriate AC power outlet. The LED (12) lights green to tell you that the charger is ready for use.
3. Insert the battery pack 3 into the charger station (13), as shown in the image above, making sure the pack is fully seated in the charger station. The LED (12) lights red to tell you that the battery pack is on charge.

NOTE: Battery cannot be charged immediately after using the tool. The battery pack should be sufficiently cooled for a period of time. The LED (12) lights changing from green to red means it can now be charged.

4. The battery pack will be fully-charged in about 4 hours. The LED (12) lights will then change to green again to tell you that the battery pack is fully-charged.

IMPORTANT BATTERY CHARGING REMINDERS

Longest life and best performance can be obtained if the battery pack is charged when the air temperature is between 18 – 24°C. Do not charge the battery pack in very low or very high air temperatures. This is important and will prevent serious damage to the battery pack.

- **When using your tool continuously, the batteries in your battery pack will become hot. You should let a hot battery pack cool down for approximately 30 minutes before attempting to recharge.**
- The charger and battery pack may become warm to touch while charging. This is a normal condition, and does not indicate a problem.
- Use the charger in normal room temperatures whenever possible. To prevent overheating, do not cover the charger and do not charge battery packs in direct sunlight or near heat sources.
- If the battery pack does not charge properly:
 - a. Check current at receptacle by plugging in a lamp or other appliance.
 - b. Move charger and battery pack to a location where the surrounding air temperature is approximately 18 - 24°C.
 - c. If charging problems persist, take or send the tool, battery pack and charger to an authorised local service centre.
- The battery pack should be recharged when it fails to produce sufficient power on jobs which were easily done previously. DO NOT CONTINUE to use under these conditions. Follow the charging procedure. You may also charge a partially used pack whenever you desire with no adverse effect on the battery pack.
- Under certain conditions, with the charger plugged in to the power supply, the exposed charging contacts inside the charger can be shorted by foreign material. Foreign materials of a conductive nature such as, but no limited to, steel wool, aluminium foil, or any build-up of metallic particles should be kept away from charger cavities. Always unplug the charger from the power supply when there is no battery pack in the cavity. Unplug charger before attempting to clean.
- Do not immerse charger in water or any other liquid.
- **WARNING!** Don't allow any liquid to get inside charger. Electric shock may result. To facilitate the cooling of the battery pack after use, avoid placing the charger or battery pack in a warm environment such as in a metal shed, or an uninsulated trailer.
- **CAUTION!** Never attempt to open the battery pack for any reason. If the plastic housing of the battery pack breaks or cracks, return to an authorised service centre for recycling; do not put it into further use.

MAINTENANCE

Your tool has been designed to operate over a long period of time with a minimum of maintenance. Continuous satisfactory operation depends upon proper tool care and regular cleaning. Your charger does require any maintenance apart from regular cleaning.

1. Before performing any maintenance on the tool, remove the battery from the tool. Unplug the charger before cleaning it.
2. After use, carefully clean the blades.
3. After cleaning, apply a film of light machine oil to prevent the blades from rusting.
4. Regularly clean the ventilation slots in your tool and charger using a soft brush or dry cloth.
5. Regularly clean the motor housing using a damp cloth .Do not use any abrasive or solvent-based cleaner.

TECHNICAL SPECIFICATIONS

MODEL	MT2
BATTERY	20V 1300mAh Lithium
CUTTING BLADE	21 Inch Double-Action Two-Sided
NO-LOAD SPEED	1400rpm
CUTTING LENGTH	460mm
THROTTLE CONTROL HANDLE	Rubber Over Moulded
SHAFT	Aluminium
EXTENSION POLE	0.9m
CHARGER	240V
CHARGING TIME	4 Hours
RUNNING TIME	30 Minutes
LENGTH	1.8-2.7m

Note: Minimal Assembly required



Some experts believe the incorrect or prolonged use of almost any product could cause serious injury or death. For information that may reduce your risk of serious injury or death consult the points below and additionally, the information available at www.datastreamserver.com/safety

- Consult all documentation, packaging and product labelling before use. Note that some products feature online documentation which should be printed and kept with the product.
- Check product for loose / broken / damaged / missing parts, wear or leaks (if applicable) before each use. Never use a product with loose / broken / damaged / missing parts, wear or leaks (if applicable).
- Products must be inspected and serviced (if applicable) by a qualified specialist every 6 months assuming average residential use by a person of average weight and strength, above average technical aptitude, on a property matching average metropolitan specification. Intended use outside these guidelines could indicate the product is not suitable for intended use or may require more regular inspection or servicing.
- Ensure all possible users of the product have completed an industry recognised training course before being given access to the product.

- The product has been supplied by a general merchandise retailer that may not be familiar with your specific application or your description of the application. Be sure to attain third party approval for your application from a qualified specialist before use regardless of prior assurances by the retailer or its representatives.
- This product is not intended for use where fail-safe operation is required. As with any product (take an automobile, aircraft, computer or ball point pen for example) there is always a small chance of a technical issue that needs to be repaired or may require replacement of the product or a part. If the possibility of such failure and the associated time it takes to rectify could in any situation inconvenience the user, business or employee or could financially affect the user, business or employee then the product is not suitable for your requirements. This product is not for use where incorrect operation or a failure of any kind, including but not limited to a condition requiring product return, replacement, service by a technician or replacement of parts could cause a financial loss, loss of employee time or an inconvenience requiring compensation.
- If this item has been purchased in error considering the points above simply contact the retailer directly for details of their returns policies if required.

Bäumr-AG®
.com.au

©2016 Baumr-AG. All rights reserved. No part of this document, including descriptive content, concepts, ideas, diagrams or images may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying, scanning or recording, or any information storage and retrieval system, without express permission or consent from the publisher.