

电机遥控器


Electromotor Remote Controller

使用说明书

(使用前请仔细阅读本说明书)

INSTRUCTION

(Please read this instruction before you use the remote control)

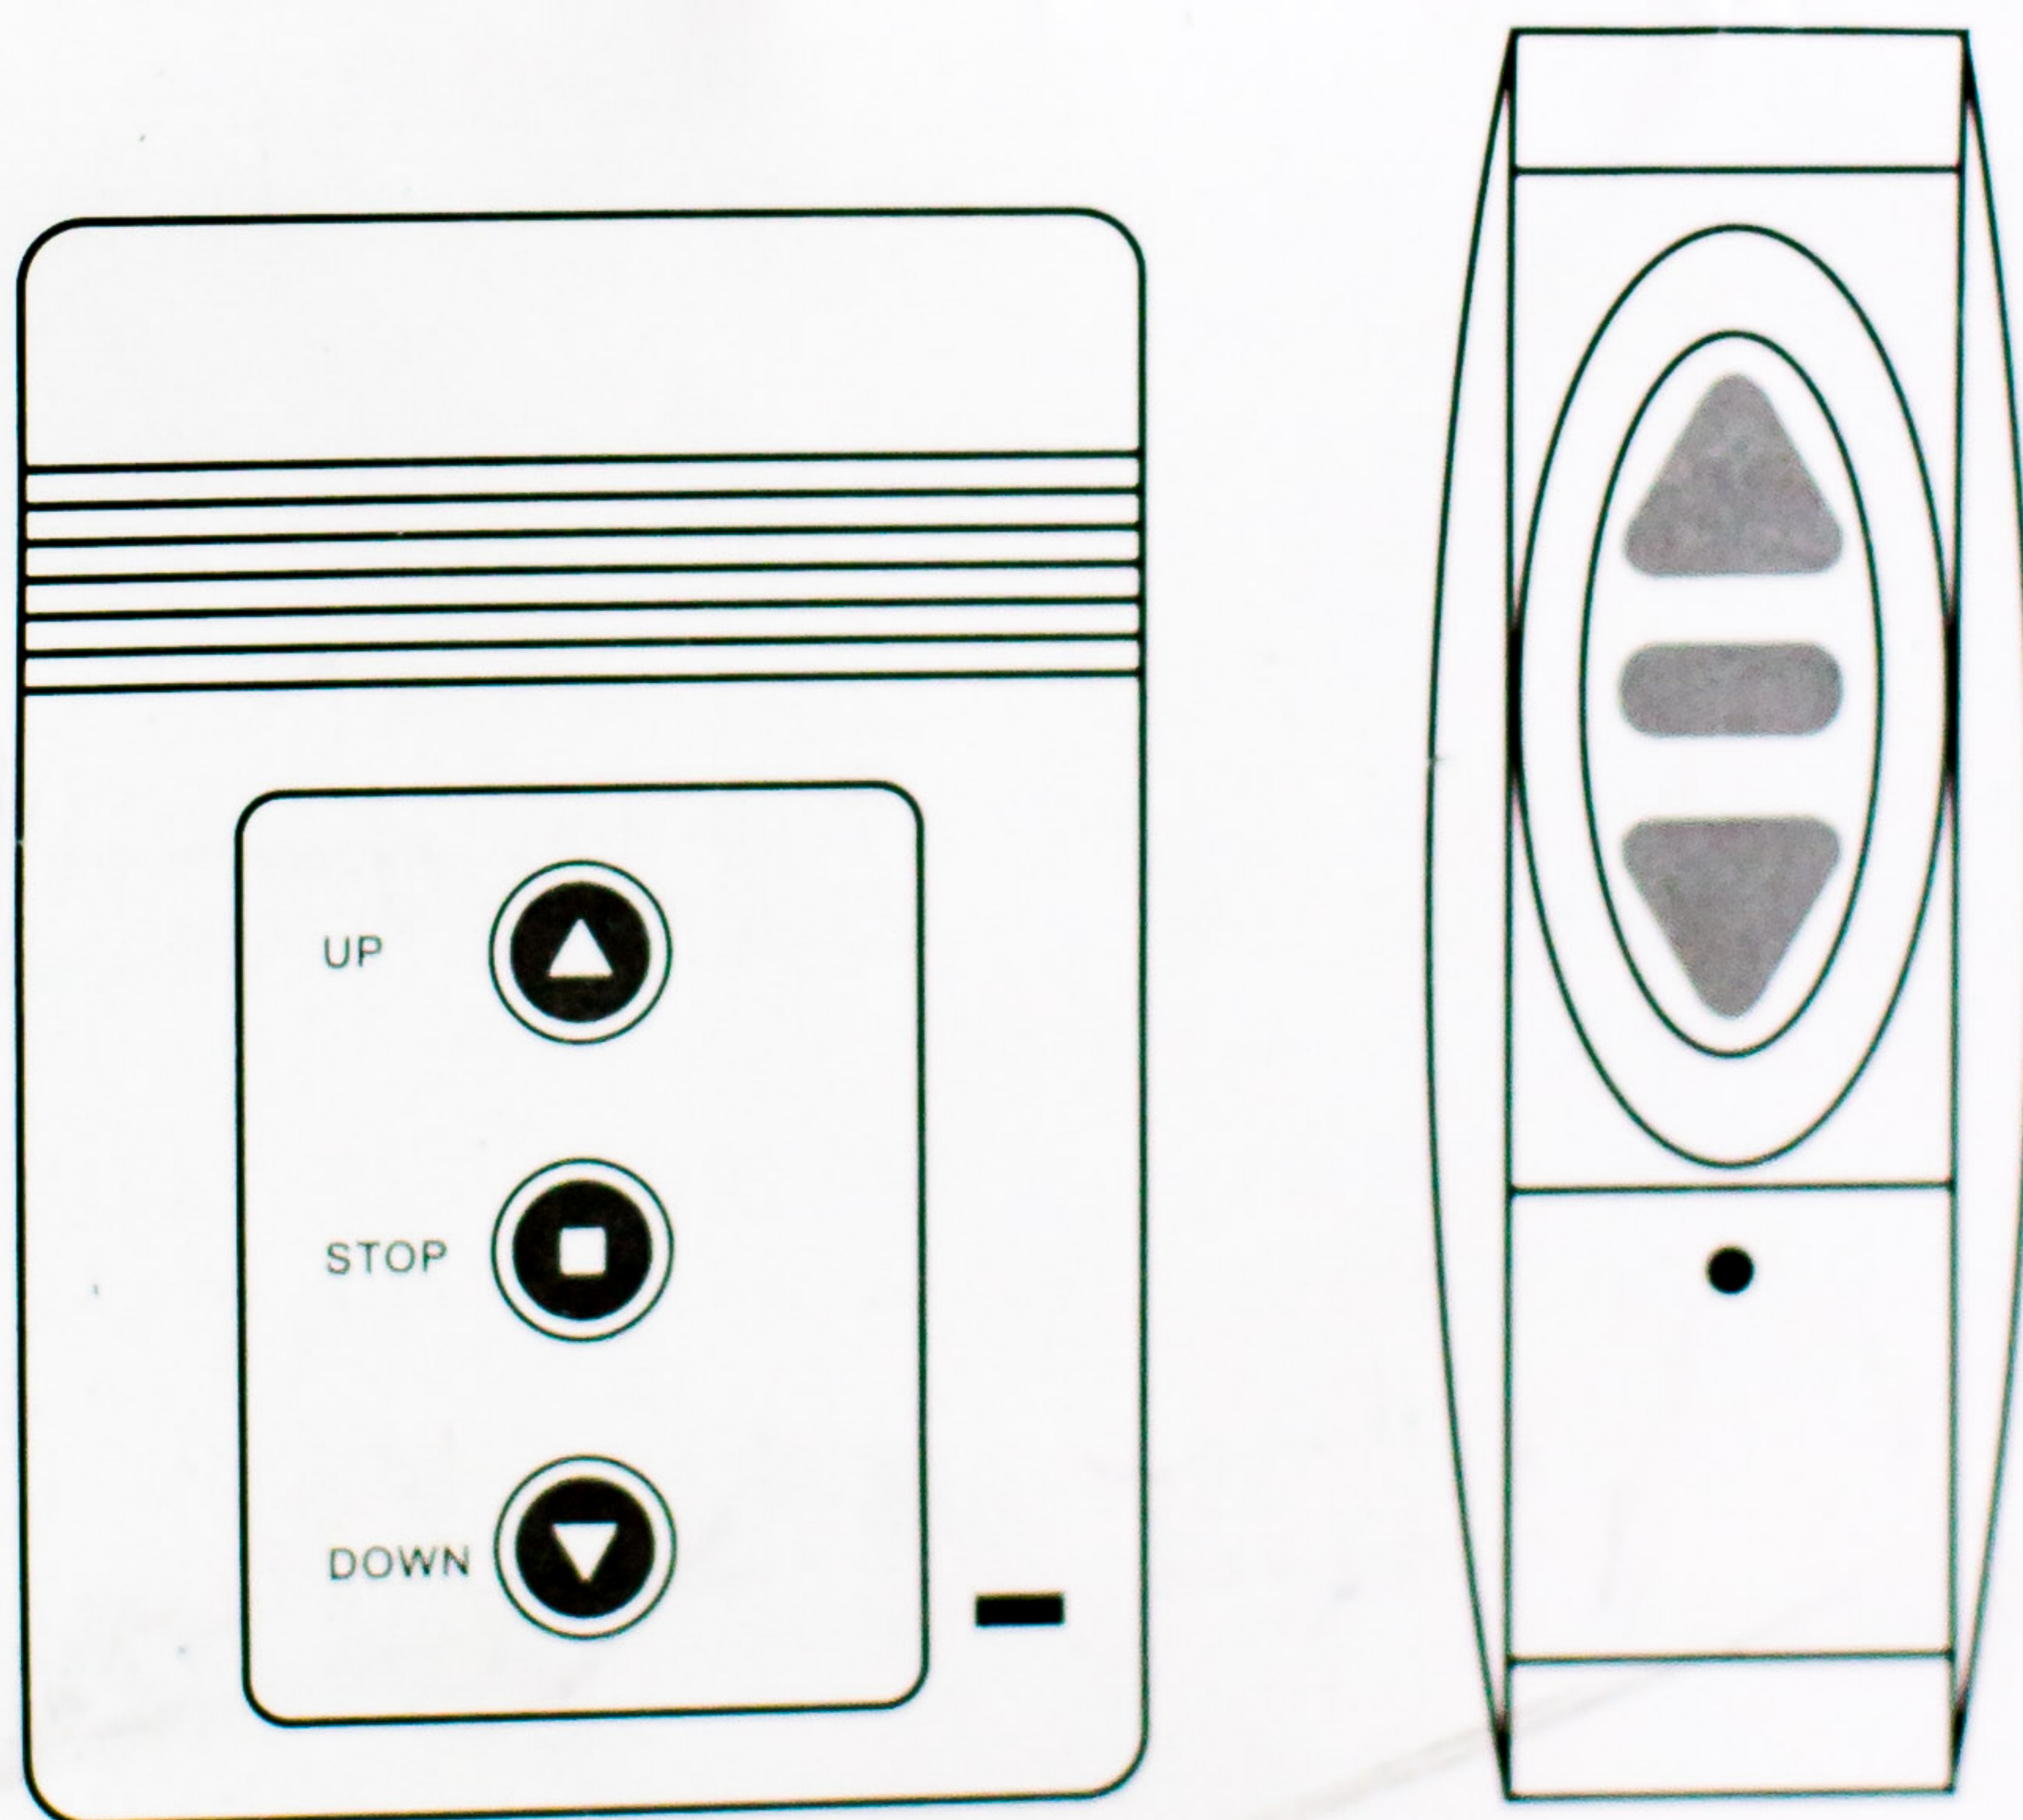

I.Product Particular

- 1.Perfect design and nice appearance with imported collect circuit and advanced technology
- 2.Low rate of repeated code, safe and reliable as adopt the circuit of high digital coding
- 3.Combined remote with hand control and easy installation
- 4.The receiver is a learning-type and it can learn 40 handles

II.Applicability

Apply to the control of the direction and power off for alternator of pressure AC220V/110V/50-60Hz, (It can be customized for other description), such as electric screen, curtain, lifting rack, etc.

III.Technical Parameter

- 1.Pressure: AC220V/110V \pm 10%
- 2.Load Power: < 500W
- 3.Remote Frequency: RF: 315/433MHZ IR:38KHZ
- 4.Remote Controlling Distance: RF: \leq 50M(open field) IR: \leq 8M \pm 15°

IV.Installation & Operation

1.Installation: Install every part and connect the wires according to the wiring diagram.(need installed by professional)

2.Operating: Connected with the power, and 3 short discontinuous rings will burst out. That means there is no acquired content in this remote controller. Then press any key in the handle within 8 seconds, a long consecutive ring will be heard. That means this remote controller has acquired the related content and it will start regular work in 8 seconds.(Configured when leaving the factory. No need to operate again.)

Transfer the controlling handles into exercised ones, to keep pressing "STOP" key for 5 seconds. When hearing 2 short discontinuous rings, press any key in the handles, then a long consecutive ring will brush out that means it has acquired the related content. In this way, the receiver could be controlled by more than one remote control handles.

Normally, you need only to press the keys in the receiver or remote control handles according to the using method. When transferring UP or Down status to DOWN or UP one, to press the related key twice (PAUSE for the first time). If there is no action for 5 minutes or longer, the receiver will stop working and cut off the switch automatically.

Keep pressing STOP key for more than 15 seconds, 3 short discontinuous rings will burst out and the learned content in the controller is deleted at the same time. This is to prevent this remote controller embezzled or handles are lost.

V.Fall time setting and cancel (this function can be selected):


Please must use the remote control handles when performing the memorizing function. Press Down button, electromotor will go down. When reaching your required position, press STOP and DOWN button at the same time. Press UP and Down button at the same time to clear the memory.

VI.Warnings

- 1.If the alternator does not work after installation, try to exchange the direction of the wire or turn to the supplier to get professional advice.
- 2.Please change the battery(23A 12V) if the controlling distance is shorten or not working



安装示意图

Installs the schematic drawing

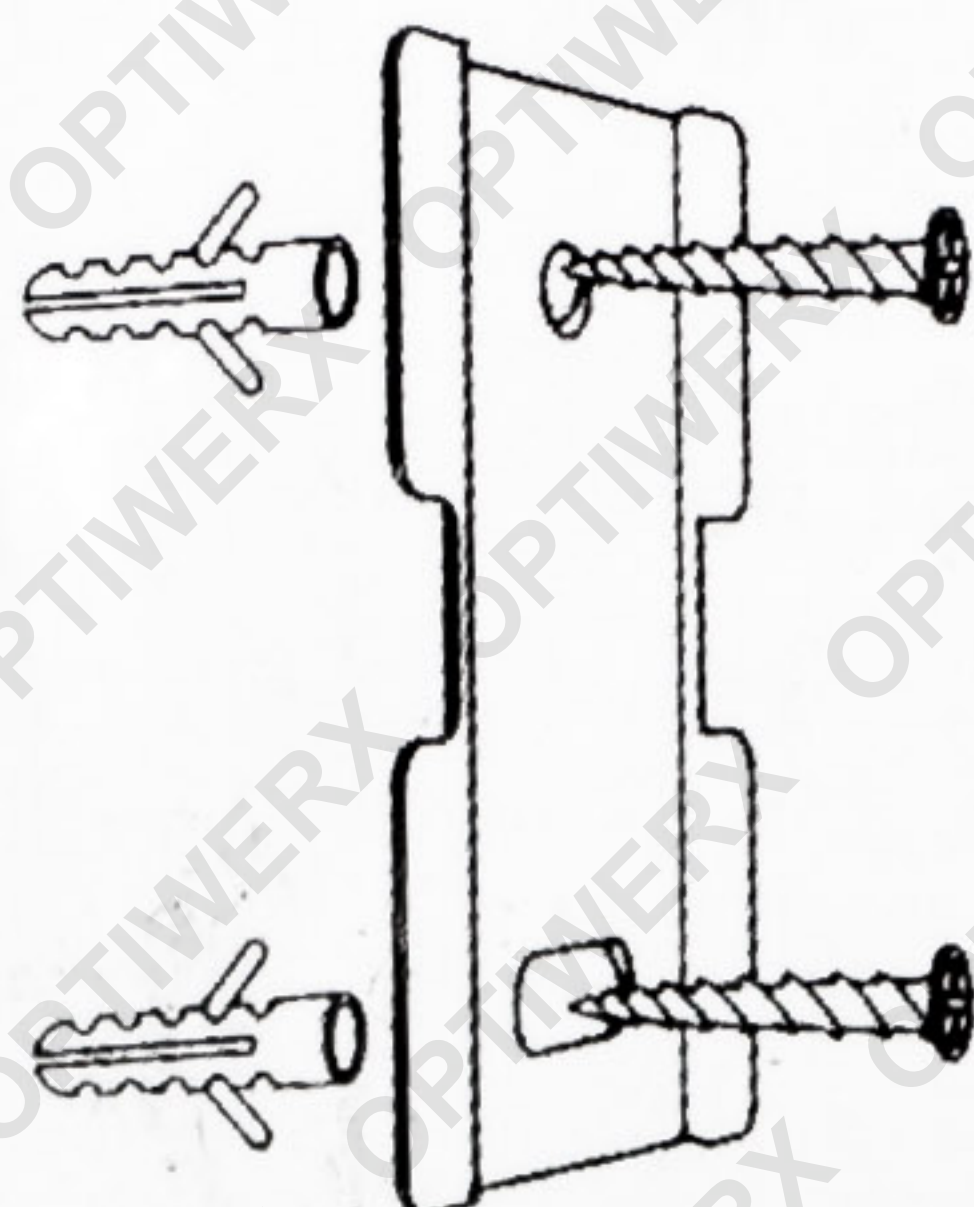


接线示意图

Wiring schematic drawing

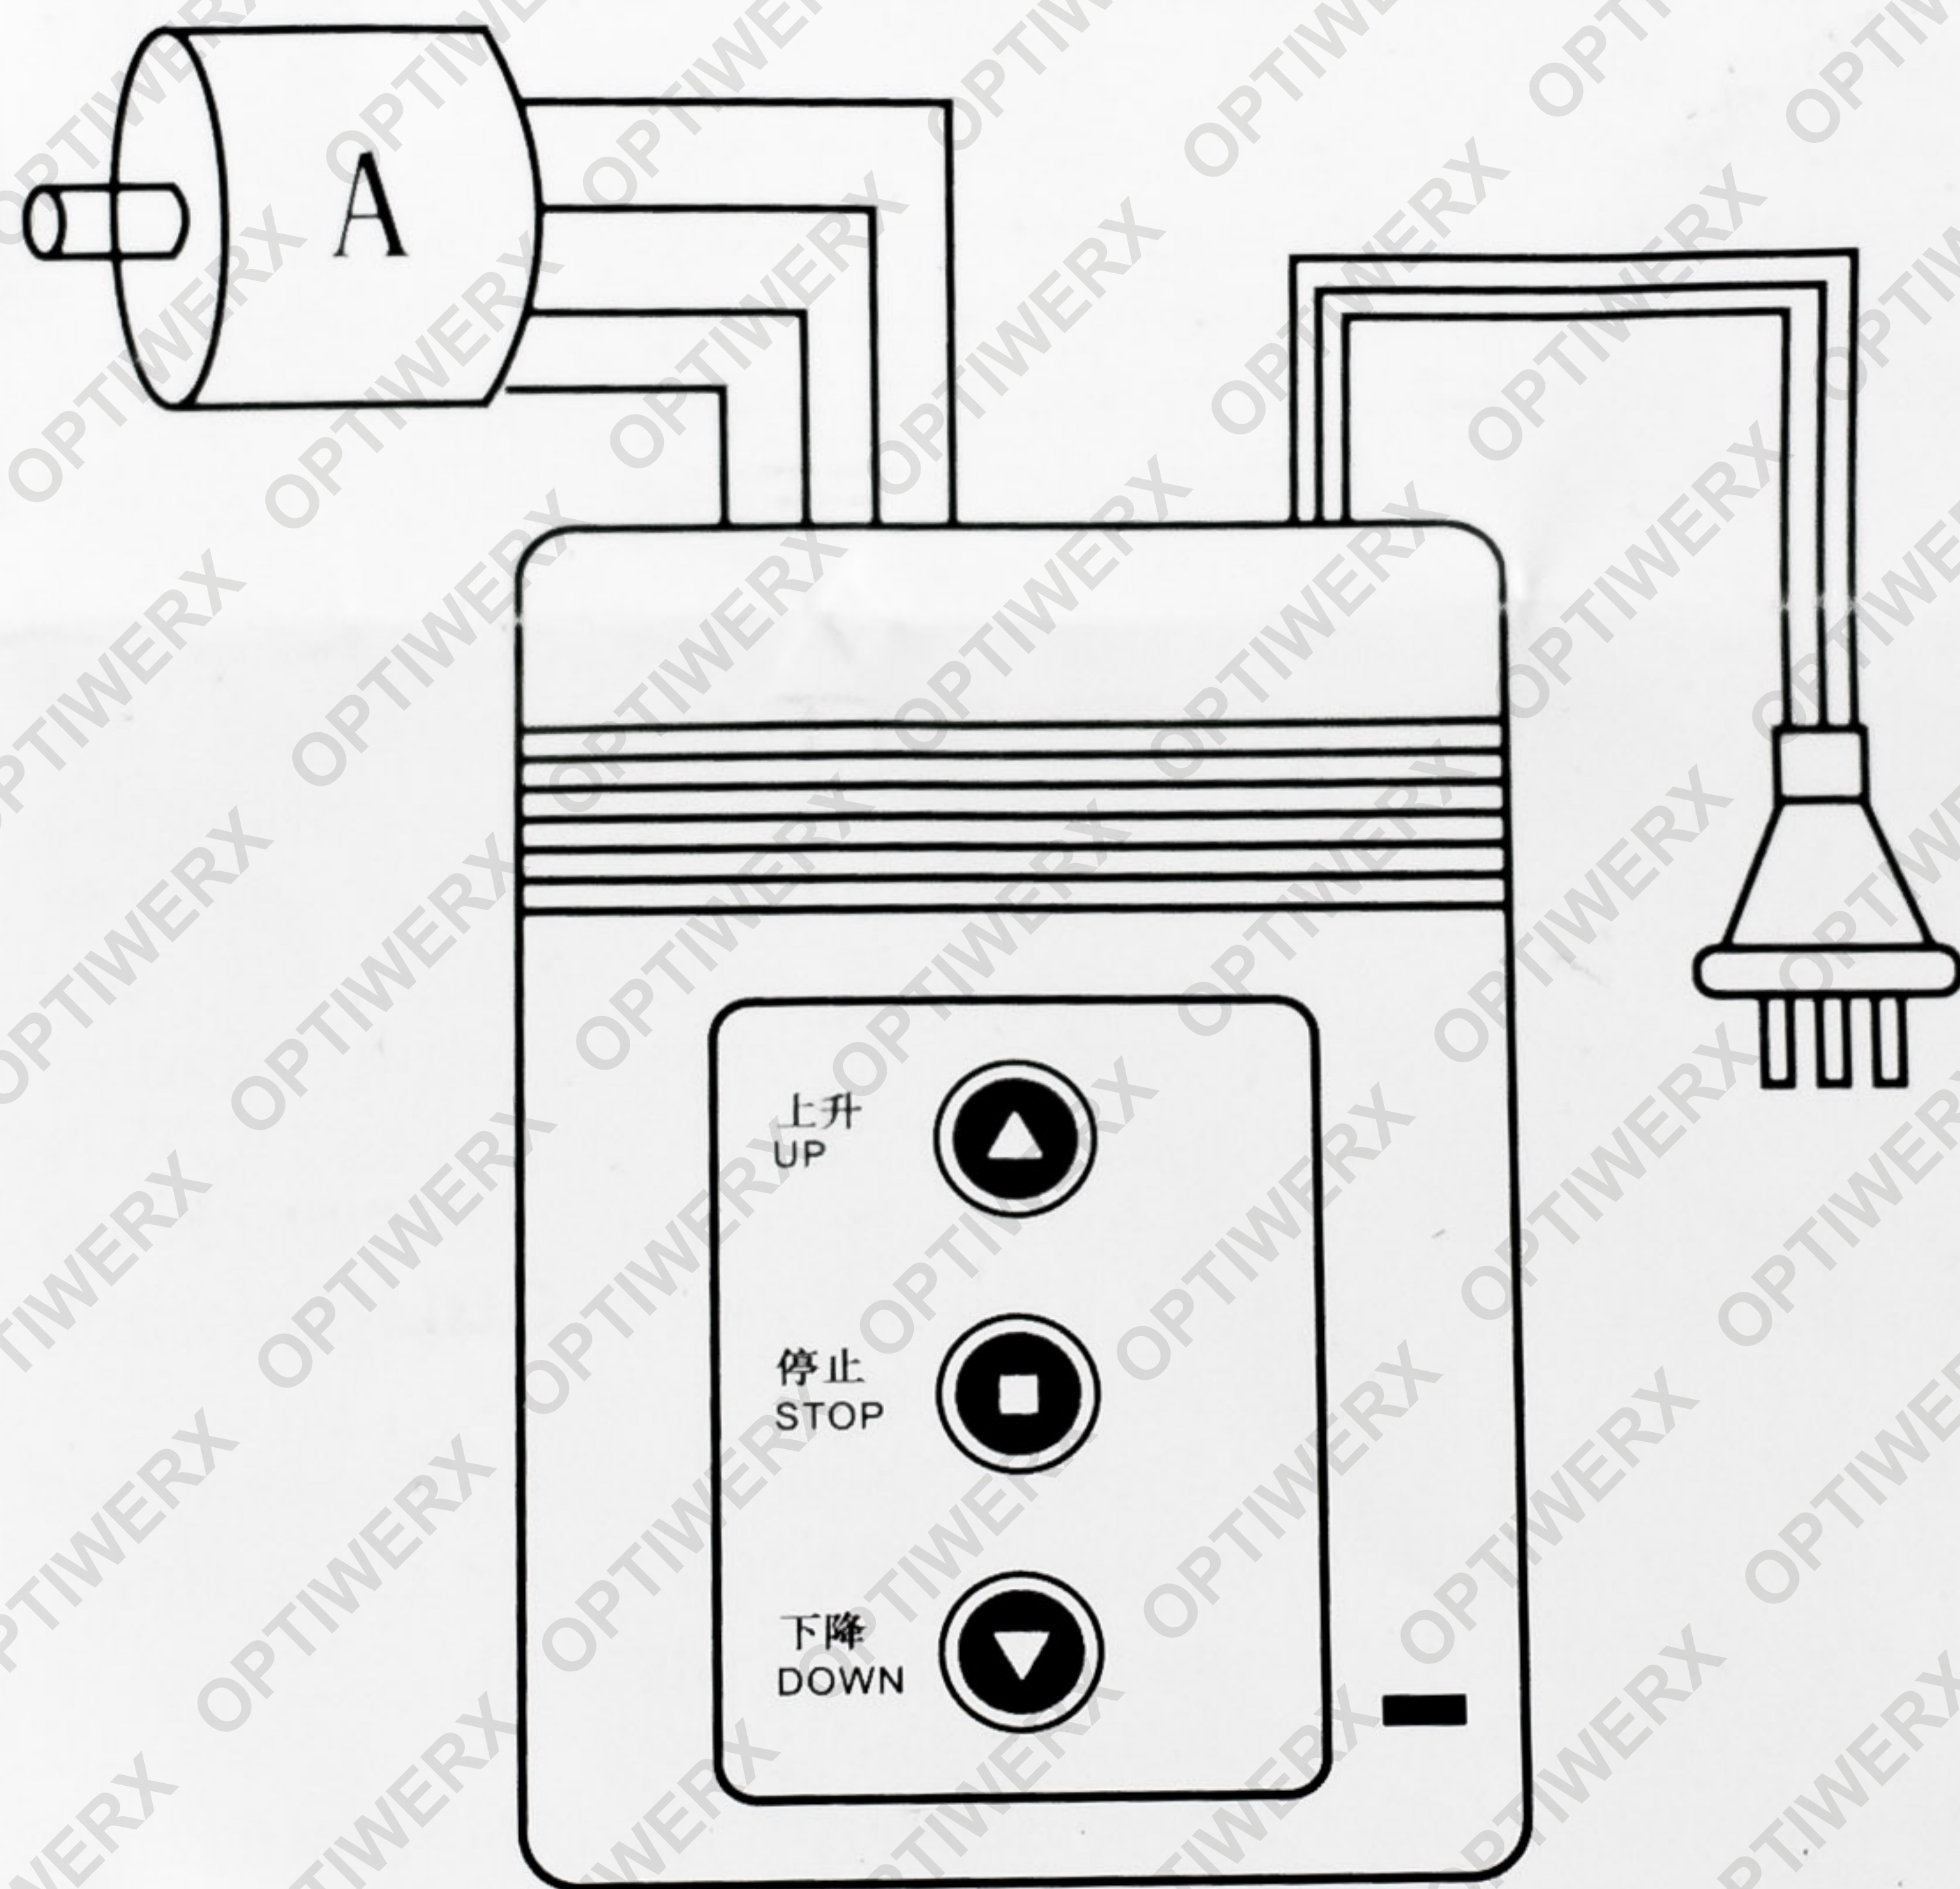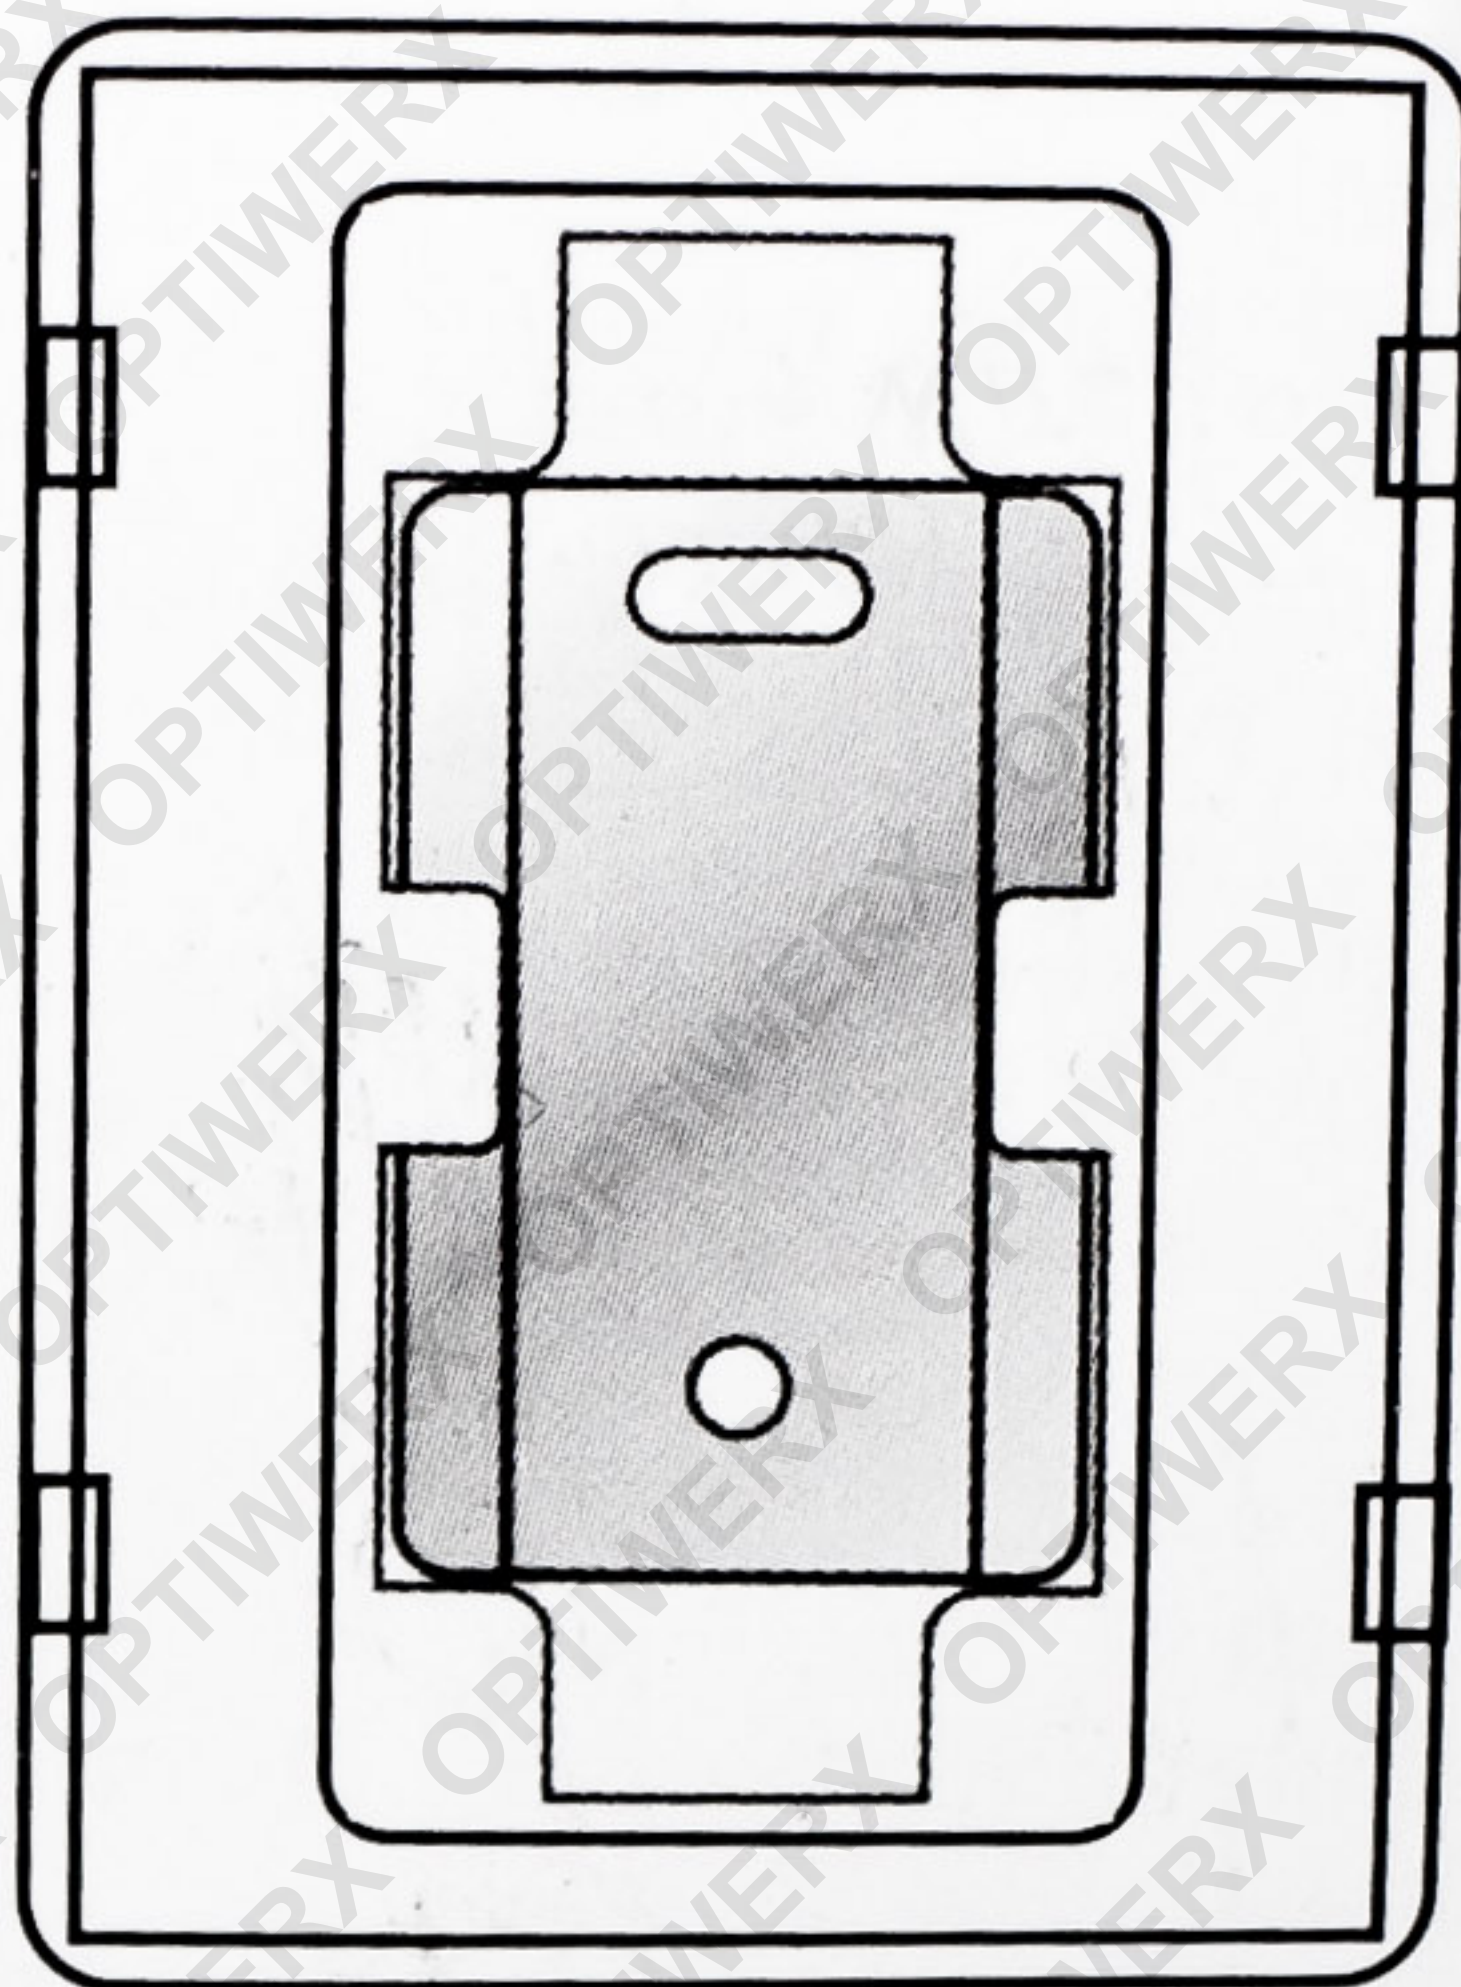

接收器
(Receiver)

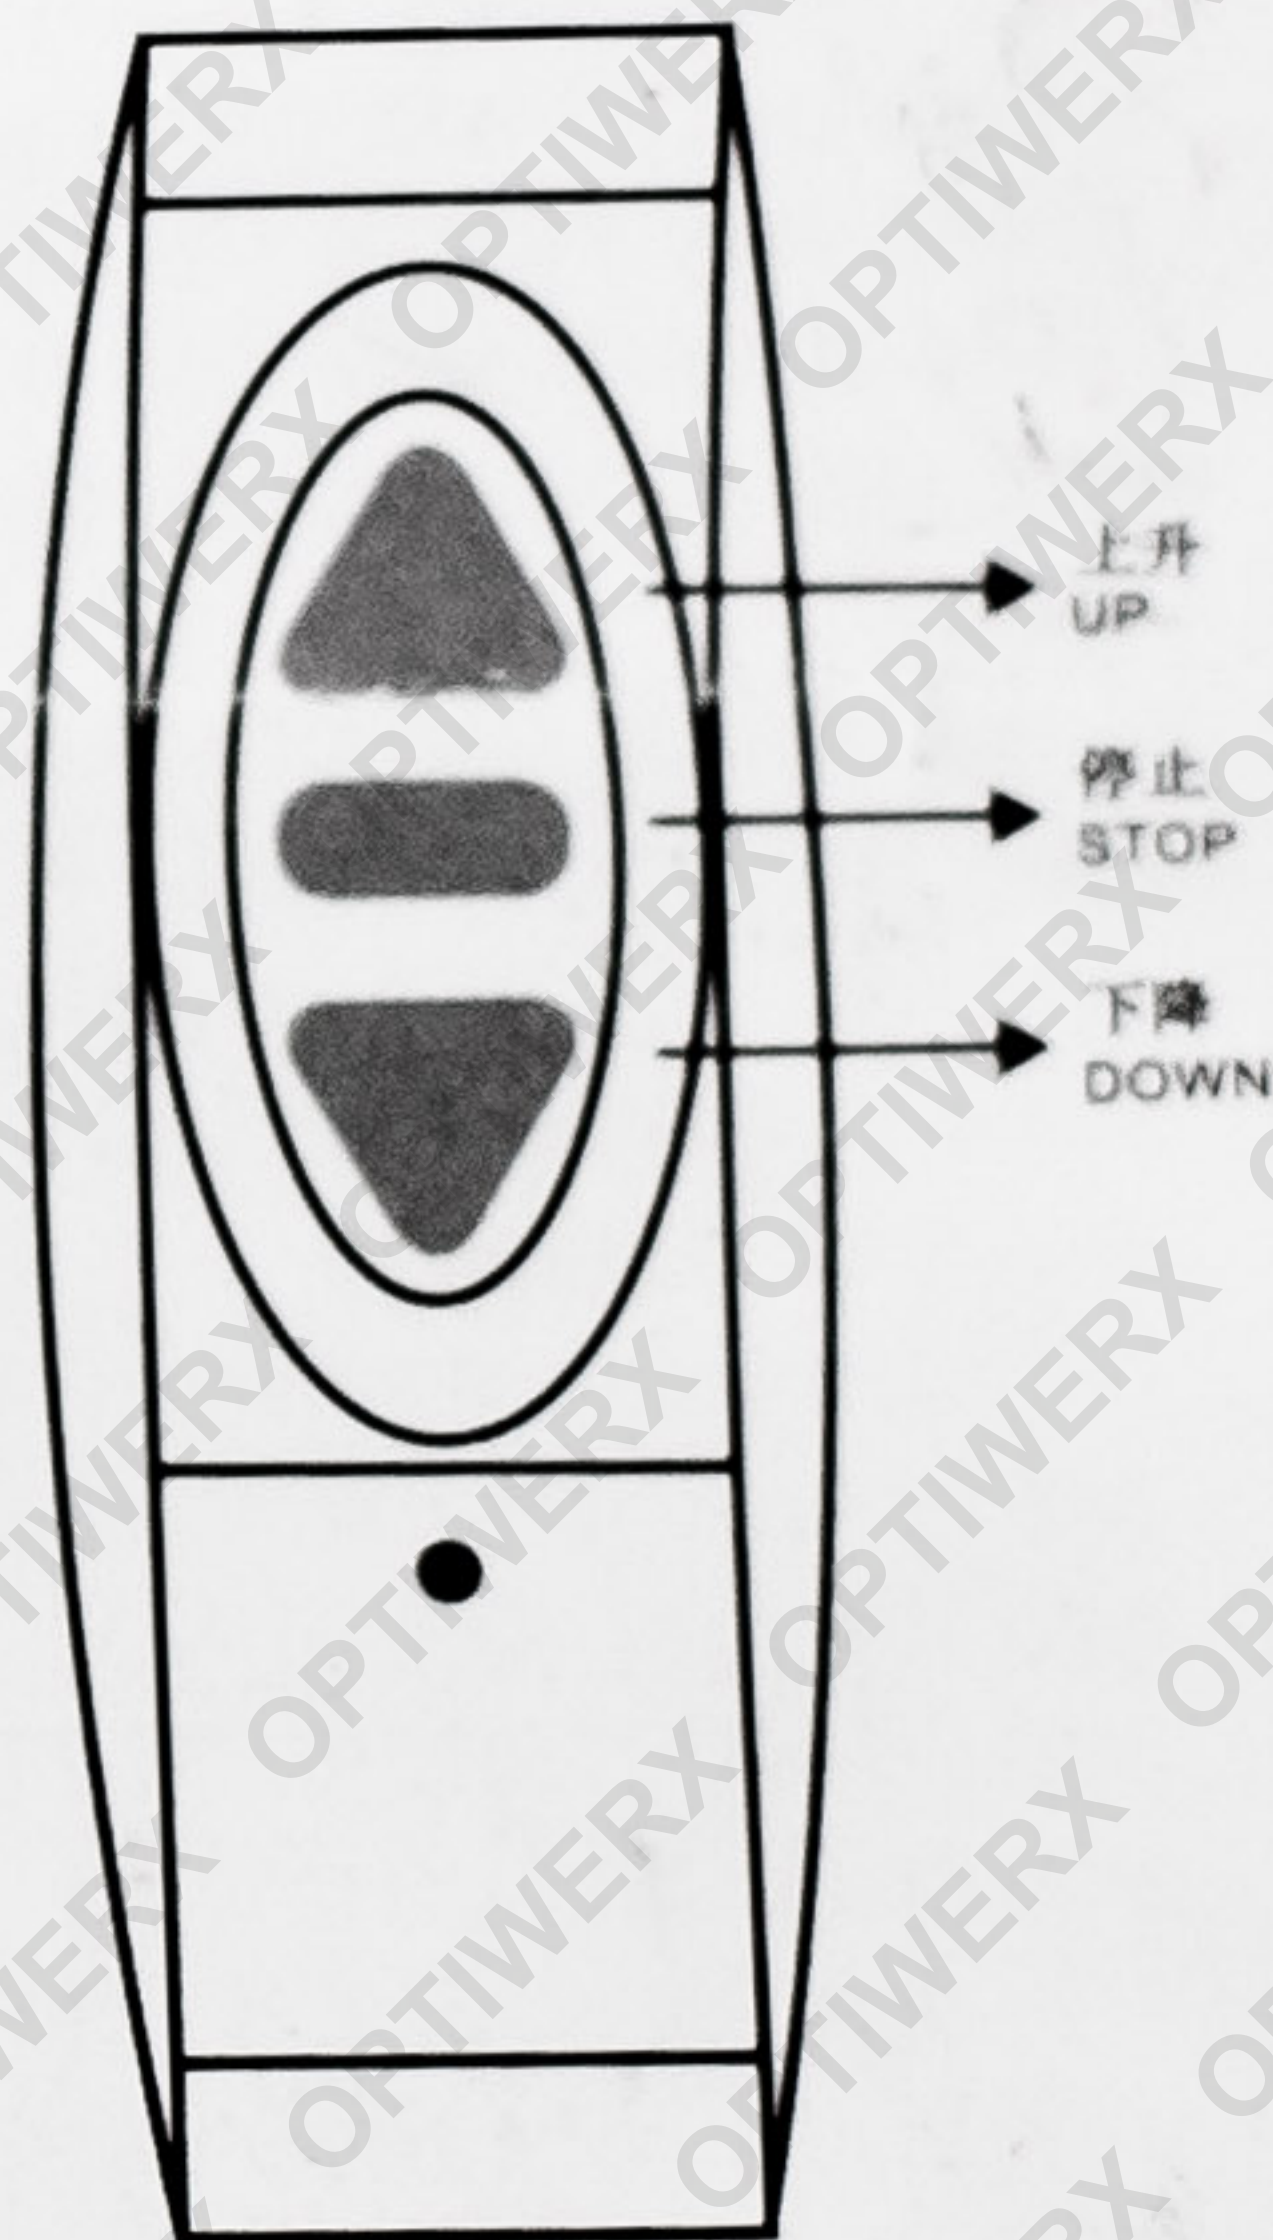

遥控手柄
(Handle)

A. 交流电机
Alternator

电机下降线颜色 ()
Down wire colour ()

电机上升线颜色 ()
Up wire colour ()

地线颜色 ()
Earth wire colour ()

中心线颜色 ()
Middle Wire colour ()



Some experts believe the incorrect or prolonged use of almost any product could cause serious injury or death. For information that may reduce your risk of serious injury or death consult the points below and additionally, the information available at www.datastreamserver.com/safety

- Consult all documentation, packaging and product labelling before use. Note that some products feature online documentation which should be printed and kept with the product.
- Check product for loose / broken / damaged / missing parts, wear or leaks (if applicable) before each use. Never use a product with loose / broken / damaged / missing parts, wear or leaks (if applicable).
- Products must be inspected and serviced (if applicable) by a qualified specialist every 6 months assuming average residential use by a person of average weight and strength, above average technical aptitude, on a property matching average metropolitan specification. Intended use outside these guidelines could indicate the product is not suitable for intended use or may require more regular inspection or servicing.
- Ensure all possible users of the product have completed an industry recognised training course before being given access to the product.

- The product has been supplied by a general merchandise retailer that may not be familiar with your specific application or your description of the application. Be sure to attain third party approval for your application from a qualified specialist before use regardless of prior assurances by the retailer or its representatives.
- This product is not intended for use where fail-safe operation is required. As with any product (take an automobile, aircraft, computer or ball point pen for example) there is always a small chance of a technical issue that needs to be repaired or may require replacement of the product or a part. If the possibility of such failure and the associated time it takes to rectify could in any situation inconvenience the user, business or employee or could financially affect the user, business or employee then the product is not suitable for your requirements. This product is not for use where incorrect operation or a failure of any kind, including but not limited to a condition requiring product return, replacement, service by a technician or replacement of parts could cause a financial loss, loss of employee time or an inconvenience requiring compensation.
- If this item has been purchased in error considering the points above simply contact the retailer directly for details of their returns policies if required.

