

EURO~~X~~CHEF



Meat Slicer

User Manual

[Revision 3.0 March 2019]

READ THIS MANUAL CAREFULLY BEFORE USE – FAILURE TO DO SO MAY RESULT IN INJURY, PROPERTY DAMAGE AND MAY VOID WARRANTY. • KEEP THIS MANUAL FOR FUTURE REFERENCE. • Products covered by this manual may vary in appearance, assembly, inclusions, specifications, description and packaging.

Table of Contents

Introduction and Safety Reminders.....	1
Parts List.....	3
Setting-Up the Slicer	4
Slicing.....	4
Operating the Slicer.....	4
Selecting the Slicing Thickness	4
Cleaning.....	5
Removing the Cutting Blade.....	5
Technical Specifications.....	5
Correct Disposal of Product.....	6

Introduction and Safety Reminders

Basic safety precautions should always be followed when using electrical products, especially when children are present.

WARNING: TO AVOID THE RISK OF ELECTRICAL SHOCK, ALWAYS MAKE SURE THAT THE PRODUCT IS UNPLUGGED FROM THE ELECTRICAL OUTLET BEFORE ASSEMBLING, DISASSEMBLING, RELOCATING, SERVICING, OR CLEANING IT.

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions.
- To protect against risk of electrical shock, do not immerse cord, plug, or any non-removable parts of this oven in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquid.
- Do not place on or near a hot gas or electrical burner, or in a heated oven.
- Turn all controls to "OFF" before inserting or removing plug from wall outlet.
- Do not place any of the following materials in the oven: paper, cardboard, plastic wrap, and the like.
- To disconnect, grasp plug and remove from outlet. Do not pull by the cord.
- Do not use oven for other than intended use.
- Oversize foods or metal utensils must not be inserted in this appliance, as they may create a fire or risk of electric shock.
- A fire may occur if the meat slicer is covered or touching flammable material including curtains, draperies, walls and the like, when in operation. Do not store any item on top of unit when in operation.
- Do not store any material, other than manufacturer's recommended accessories, in this oven when not in use.
- Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts resulting in a risk of electric shock.
- Extreme caution should be used when using containers constructed of other than metal or glass.
- To reduce the risk of fire, do not place any heating or cooking appliance beneath the appliance. - To reduce the risk of fire, do not mount unit over or near any portion of a heating or cooking appliance. - To reduce the risk of electric shock, do not mount over a sink. - To reduce the risk of fire, do not store anything directly on top of the appliance surface when the appliance is in operation.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- This appliance must be used with sliding feed table and the piece holder in position unless this is possible due to the size or the shape of the food.

Meat Slicer

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with appliance.
- The appliance is not intended to be operated by means of external timer or separate remote control system.

CAUTION: This product is equipped with a polarised plug (one blade is wider than the other blade) as a safety feature to reduce the risk of electrical shock. This plug will fit into a polarised outlet only one way. This is a safety feature. If you are unable to insert the plug into the electrical outlet, try reversing the plug. If the plug still does not fit, contact a qualified electrician. Never use the plug with an extension cord unless the plug can be fully inserted into the extension cord. Do not alter the plug of the product or any extension cord being used with this product. Do not attempt to defeat the safety purpose of the polarised plug.

NOTE: A short power cord is provided to reduce the risk of personal injury resulting from becoming entangled in or tripping over a longer cord.

Longer power-supply cords or extension cords are available and may be used if care is exercised in their use.


If a longer cord is required, extension cords are available from local hardware stores. If an extension cord is used:

- The marked electrical rating of the extension cord should be at least as great as the electrical rating of the product.
- The extension cord should be arranged so that it will not drape over the countertop or table top where it can unintentionally be pulled on or tripped over by children or pets.


Before using the slicer for the first time, please make sure to read carefully and thoroughly through these operating instructions and the safety advice and familiarize yourself completely with the functions of the device. This device is intended exclusively for slicing normal household foods. The food to be sliced must be completely thawed, unpacked and free from bones before it can be sliced in the device. Any other use or modification to the equipment shall be considered as improper use and could give rise to considerable damage and dangers.

Take the slicer carefully out of its packaging. Remove all the packaging materials and keep it together with the packaging. Clean the slicer before it comes into contact with any food.

Parts List

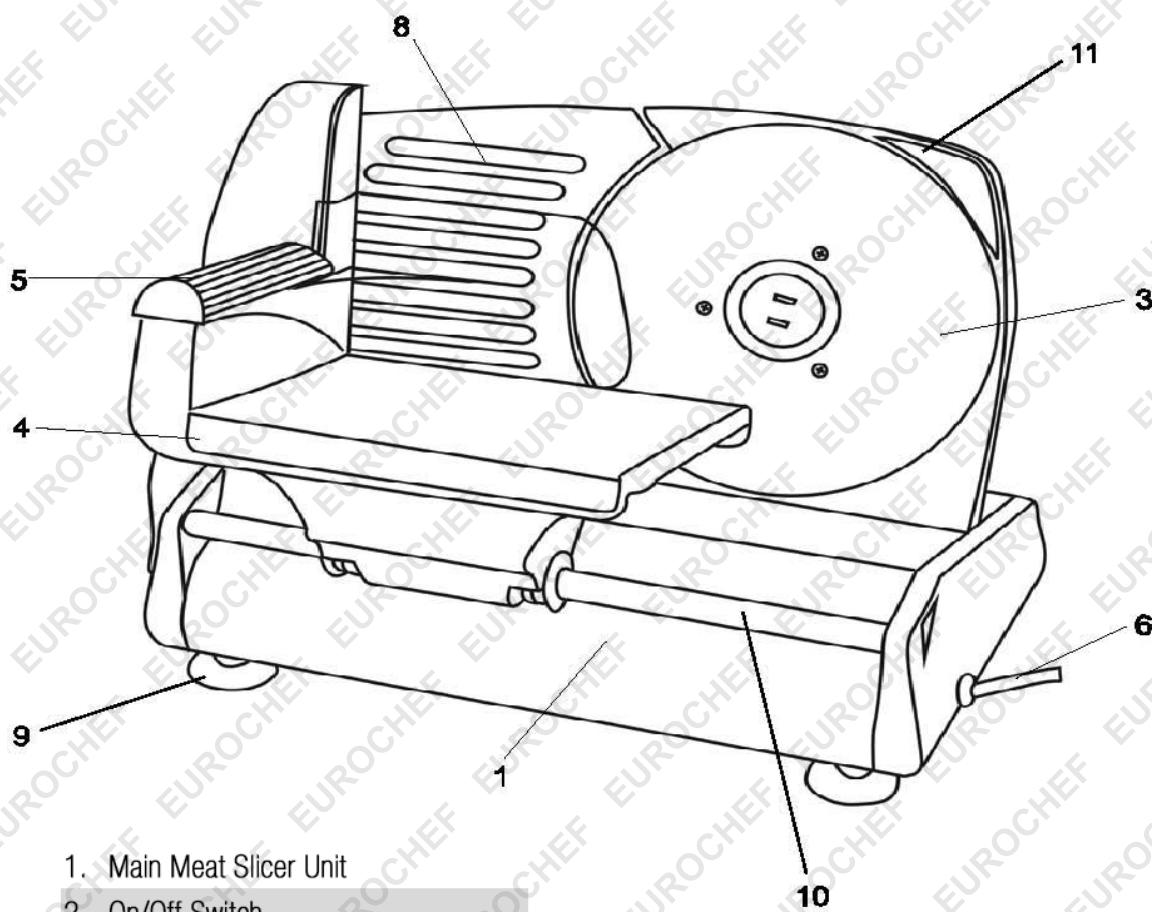

1. Main Meat Slicer Unit
2. On/Off Switch
3. Cutting Blade
4. Feed Slider Table
5. Meat & Food Holder
6. Power Cord
7. Thickness Adjusting Knob
8. Meat & Food Support Guiding Plate
9. Stabilising Suction Feet
10. Sliding Bar
11. Blade Guard

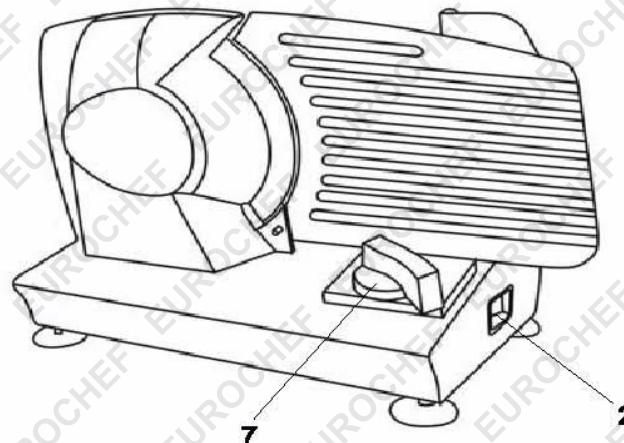

Setting-Up the Slicer

Specific safety advice on the location of the slicer:

- Never set the slicer up on a hot surface or near an open flame.
- Make sure that the power cord does not pass over any hot or sharp-edged objects.
- Do not allow the power cord to become tangled or trapped. Never coil the power cord around the slicer during storage.
- Set up the slicer on a flat, non-slip surface close to an electrical socket.
- Unwind the required length of power cord, insert the plug into a power outlet.
- Push the Meat & Food Holder (5) onto the Feed Slider Table (4).

Slicing

Specific safety advice for slicing and for handling the slicer:

- Never touch the blade when the slicer is operating! Danger of injury!
- Always use the Meat & Food Holder (except perhaps when slicing very large pieces of food). Press the piece of meat or food to be sliced forward using the Holder.
- Use the slicer only for slicing normal household foods and not for other purposes. Do not use the slicer for slicing deep-frozen foods, bones, foods with kernels or for slicing packaged foods.
- Never use the slicer for more than 10 minutes continuously.

WARNING: The cutting blade continues to rotate after the slicer has been switched off for a few seconds.

- For safety reasons, the slice thickness must be returned to "0" setting after each use.

Operating the Slicer

Pushing the switch to "ON", the cutting blades will immediately begin to run. To stop the continuous operation, move the switch quickly to the "OFF" position and wait until the cutting blades come to a complete stop.

Selecting the Slicing Thickness

The slicing thickness can be set to at 0 | 0.2" | 0.4" | 0.5". Set the required slicing thickness using the knob. For safety reason, the blade is covered in setting "0".

Place the food to be sliced onto the feed sliding table (4). Press the food to be sliced with the meat and food holder (5) slightly against the food support guiding plate (8). Switch the device on and while slightly pressing the food to be sliced forward, guide it along the cutting blade (3). After using the slicer, always set the food support guiding plate to the "0" setting so that the sharp blade is covered. The cutting blade is ideally suitable for cutting wafer-thin slices of cold cuts of meat.

To safeguard your fingers, always use the feed sliding table (4) and the meat and food holder (5), except perhaps when slicing large pieces of food.

Cleaning

Important safety advice for cleaning the slicer:

- Before starting to clean the slicer, switch it off, pull the plug out of the power outlet and set the Meat and Food Support Guiding Plate (8) to the "0" setting.
- NEVER immerse the slicer in water.
- Danger of injury, the cutting blade is very sharp!

It is necessary to clean the slicer at regular intervals as perishable food scraps could accumulate on the slicer or behind the cutting blade. Remove the Meat and Food Holder (5) and clean it in warm soapy water. Do not wash in the dishwasher! Wipe the main Slicer Unit (1) and Feed Slider Table (4) using a slightly damp cloth. Do not use any abrasive cleansers, scouring pads or hard brushes.

Removing the Cutting Blade

Pull off the blade mount and the blade lock by hand. Then turn it until it comes off.

When taking out the blade, make sure that you handle it by the centre and be careful of the sharp edge. Wash the blade by hand in warm soapy water. Dry thoroughly. Do not wash in the dishwasher! Cleaning the area behind the blade with a dry cloth or a soft brush.

The three screws securing the blade to the mount is very rarely removed unless in serious cleaning or jamming cases.

Technical Specifications

Voltage	240V
Rated power	150W
Housing	Die Cast Aluminium
Blade Material	Stainless Steel
Blade Diameter	19cm
Thickness Adjustment	0 – 15mm
Feet	Rubber Suction
Gross Weight	5kg

Correct Disposal of Product



This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources. Household users should contact either the retailer where they purchased this product or their local authority office, for details of where and how they can take this item for environmentally safe recycling.



Some experts believe that the incorrect or prolonged use of almost any product may cause serious injury or death. To help reduce your risk of serious injury or death, refer to the information below. For more information, see www.datastreamserver.com/safety

- Consult all documentation, packaging and product labelling before use. Note that some products feature documentation available online. It is recommended to print and retain the documentation.
- Before each use, check the product for loose/broken/damaged/missing parts, wear or leaks (if applicable). Never use a product with loose/broken/damaged/missing parts, wear or leaks.
- Products must be inspected and serviced (if applicable) by a qualified technician every 6 months. This is based on average residential use by persons of average size and strength, and on a property of average metropolitan size. Use beyond these recommendations may require more frequent inspections/servicing.
- Ensure that all users of the product have completed a suitable industry recognised training course before being allowed access to the product.
- The product has been supplied by a general merchandise retailer that may not be familiar with your specific application or description of application. Be sure to attain third-party approval from a qualified specialist for your application before use, regardless of any assurances from the retailer or its representatives.
- This product is not intended for use where fail-safe operation is required. As with any product (for example, automobile, computer, toaster), there is the possibility of technical issues that may require the repair or replacement of parts, or the product itself. If the possibility of such failure and the associated time it may take to rectify could in any way inconvenience the user, business or employee, or financially affect the user, business or employee, then the product is not suitable for your requirements. This product is not intended for use where incorrect operation or a failure of any kind, including but not limited to, a condition requiring product return, replacement, parts replacement or service by a technician may cause financial loss, loss of employee time or an inconvenience requiring compensation.
- If this product has been purchased in error when considering the information presented here, contact the retailer directly for details of their returns policy, if required.



©2019 Eurochef. All rights reserved. No part of this document, including descriptive content, concepts, ideas, diagrams or images may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying, scanning or recording, or any information storage and retrieval system, without express permission or consent from the publisher.