

THOMSON®



Electric Golf Buggy

User Manual

RETAIN THIS MANUAL FOR FUTURE REFERENCE

PLEASE READ THIS MANUAL CAREFULLY BEFORE USE

IMPORTANT!

WEIGHT LIMIT WHILE BUGGY IS IN MOTION IS 50KG MAXIMUM.

IF FRONT WHEEL IS LOCKED, DO NOT ATTEMPT TO TURN THE BUGGY.

BEFORE TURNING THE BUGGY, BRING TO A STOP, UNLOCK FRONT WHEEL, THEN START THE BUGGY AGAIN. NOT FOLLOWING MAY RESULT IN BUGGY DAMAGE.

Table of Contents

Attaching the Wheels	1
Unfolding your Trolley.....	1
Folding your Trolley	1
Integrate Accessories Base	2
Seat and Sand Bucket Holder.....	2
Turn On/Turn Off Your Trolley.....	2
Battery Level Indicator	2
Starting and Stopping the Trolley and Changing the Speed	3
Using the Adjustable Distance Control.....	3
Care of your Lead-Acid Battery	3
Charging Your Lead-Acid Battery	3
Caring For Your Lithium Battery	4
Charging your Lithium Battery	4

Attaching the Wheels

There is a left and a right wheel and it is important that you don't put them on the wrong way round, otherwise the trolley will not move. You will find there is an "L" and "R" on the inside of the wheel on the central hub. Left and Right sides are determined when stood behind the trolley at the handle.

To attach the wheels follow these simple steps:

- Push the quick release in towards the centre of the wheel.
- Slide the wheel on to the axle as far as it will go.
- Release the button and pull the wheel outwards slightly to lock.
- A small click will confirm they are in the correct position.

Unfolding your Trolley

- Press and pull the red locking button.
- Lift the handle and unfold the upper frame section fully.
- Push the red locking button and then put the lock clicks into the central hinge.
- Unfold the upper bag support.

Folding your Trolley

- Make sure your battery is unplugged and if you have a Lead-acid battery you will need to remove this from the battery tray.
- Take off the GPS holder.
- Ensure that the upper bag support has been folded up.
- Hold the frame and simultaneously press and pull the red locking button.
- Fold the handle towards the front wheel.
- Pull the plastic lock on the frame. The folded trolley should now be locked into position.

Integrate Accessories Base

- Put the scorecard holder on right side and umbrella holder on left side of integrate accessories base by screw knob.
- Push the cup holder into the hole on left side.
- Push the GPS holder into the slot on the middle.
- The balls and tees holder at the back of scorecard holder.

Seat and Sand Bucket Holder

- Put the aluminium bar into the plastic square tube under the battery tray, it can be tighten by a screw knob beneath it.
- Assemble the seat and the leg.
- Hold the seat by one hand and pull the spring bracket, then put it into the slot.
- Put the sand bucket holder on the other side of the bar, tighten it by the plastic screw.

Turn On/Turn Off Your Trolley

Hold the right button for a second to power on the trolley, Hold it for a second to turn off the trolley.

Battery Level Indicator

There is an indicating LED upon the speed display. The LED displays the battery capacity (green, amber & red) and will illuminate when the power is on.

The trolley is designed to protect your battery from being fully discharged, should your battery capacity drop too low the trolley will cut the power to the motor.

Starting and Stopping the Trolley and Changing the Speed

After turn on the trolley, you will need turn the speed knob anticlockwise back to zero, then turn it clockwise to start the trolley.

The speed can be adjusted while the trolley is stationary or in motion, rotate the central button clockwise to increase the speed setting and anti-clockwise to decrease. You will see the number in the blue circle changing accordingly.

The settings run from 1 (slowest) to 9 (fastest). To stop the trolley, simply press the right button. To restart it, press the right button again.

Using the Adjustable Distance Control

Whilst stationary, push the left button to select the distance that you wish to set:

The speed LED will flash show: 1 for 10 meters, 2 for 20 meters, 3 for 30 meters and 4 for 40 meters. Then the trolley will start go 10/20/30/40 meters and then stop itself.

Care of your Lead-Acid Battery

- Always recharge the battery as soon as possible after use, no matter how short the period of use. Your battery will charge best, lying flat, in a warm and air flowing location.
- During play, minimise the drain on the battery by avoiding taking your trolley into the rough whenever possible.
- Avoid as much as possible using the trolley to pull you up the hills.
- Your charger is fully automatic. Won't over charge the battery but it is advised that you disconnect your battery to its charger between use.
- Be very careful not to drop your battery. The battery casing is easily cracked and the battery's subsequent life will be severely compromised.
- If for any reason you do not play golf for a long period, you may disconnect the battery from the charger, but only after you have fully charged the battery.

Charging Your Lead-Acid Battery

- Disconnect and remove the battery from the trolley.
- Plug the charger into your mains supply.
- Attach the battery cable to the charger matching the red and black connections.
- Follow the charger LED indicator stages shown below:

- GREEN – Powered (before connect to the battery).
- RED – Charging.
- GREEN – Battery fully charged and ready to be disconnected.

Caring For Your Lithium Battery

- Always charge the battery after each use.
- Charge and store the battery in a warm and dry environment.
- The Lithium Charger can only be used to charge Lithium batteries.
- Do not open either the Li battery or Li charger. Doing so is dangerous and will void warranty.
- Your charger is fully automatic. Won't over charge the battery but it is advised that you disconnect your battery to its charger between use.
- Be very careful not to drop your battery. The battery casing is easily cracked and the battery's subsequent life will be severely compromised.
- If for any reason you do not play golf for a long period, you may disconnect the battery from the charger, but only after you have fully charged the battery.

Charging your Lithium Battery

- Unplug your lithium battery from your trolley. This should always be done before folding the trolley to avoid damage to the battery and/or trolley.
- Plug the charger into your mains supply.
- Attach the battery cable to the charger.
- When the charging led indicator has turned green, the battery is fully charged and ready to be used.
 - GREEN – Powered (before connect to the battery).
 - RED – Battery Charging.
 - GREEN – Battery fully charged and ready to be disconnected.



Some experts believe that the incorrect or prolonged use of almost any product may cause serious injury or death. To help reduce your risk of serious injury or death, refer to the information below. For more information, see www.datastreamserver.com/safety

- Consult all documentation, packaging and product labelling before use. Note that some products feature documentation available online. It is recommended to print and retain the documentation.
- Before each use, check the product for loose/broken/damaged/missing parts, wear or leaks (if applicable). Never use a product with loose/broken/damaged / missing parts, wear or leaks.
- Products must be inspected and serviced (if applicable) by a qualified technician every 6 months. This is based on average residential use by persons of average size and strength, and on a property of average metropolitan size. Use beyond these recommendations may require more frequent inspections / servicing.
- Ensure that all users of the product have completed a suitable industry recognised training course before being allowed access to the product.
- The product has been supplied by a general merchandise retailer that may not be familiar with your specific application or description of application. Be sure to attain third-party approval from a qualified specialist for your application before use, regardless of any assurances from the retailer or its representatives.
- This product is not intended for use where fail-safe operation is required. As with any product (for example, automobile, computer, toaster), there is the possibility of technical issues that may require the repair or replacement of parts, or the product itself. If the possibility of such failure and the associated time it may take to rectify could in any way inconvenience the user, business or employee, or financially affect the user, business or employee, then the product is not suitable for your requirements. This product is not intended for use where incorrect operation or a failure of any kind, including but not limited to, a condition requiring product return, replacement, parts replacement or service by a technician may cause financial loss, loss of employee time or an inconvenience requiring compensation.
- If this product has been purchased in error when considering the information presented here, contact the retailer directly for details of their returns policy, if required.



©2018 Thomson. All rights reserved. No part of this document, including descriptive content, concepts, ideas, diagrams or images may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying, scanning or recording, or any information storage and retrieval system, without express permission or consent from the publisher.