



Electric Scooter

User Manual

[Revision 4.0 January 2020]

READ THIS MANUAL CAREFULLY BEFORE USE – FAILURE TO DO SO MAY RESULT IN INJURY, PROPERTY DAMAGE AND MAY VOID WARRANTY. • KEEP THIS MANUAL FOR FUTURE REFERENCE. • Products covered by this manual may vary in appearance, assembly, inclusions, specifications, description and packaging.

THE BATTERY MAY HAVE SOME CHARGE ON ARRIVAL, IT IS IMPORTANT HOWEVER THAT THE BATTERY IS CHARGED PRIOR TO USE.

Safety

Safety messages are designed to alert you to possible dangers or hazards that could cause death, injury or equipment or property damage if not understood or followed. Safety messages have the following symbols:



You **WILL** be KILLED or SERIOUSLY INJURED if you do not follow instructions.



You **CAN** be KILLED or SERIOUSLY INJURED if you do not follow instructions.



You **CAN** be INJURED if you do not follow instructions or equipment damage may occur.

It is vital that you read and understand this user manual before using the product, including safety warnings, and any assembly and operating instructions. Keep the manual for future reference.

Safety precautions and recommendations detailed here must be fully understood and followed to reduce the risk of injury, fire, explosion, electrical hazard, and/or property damage.

Safety information presented here is generic in nature – some advice may not be applicable to every product. The term "equipment" refers to the product, be it electrical mains powered, battery powered or combustion engine powered.

- **Before Use** - If you are not familiar with the safe operation/handling of the equipment, or are in any way unsure of any aspect of suitability or correct use for your application, you should complete training conducted by a person or organization qualified in safe use and operation of this equipment, including fuel/electrical handling and safety.
- Do NOT operate the equipment in flammable or explosive environments, such as in the presence of flammable liquids, gases or dust. The equipment may create sparks or heat that may ignite flammable substances.
- Keep clear of moving parts.
- Equipment may be a potential source of electric shock or injury if misused.
- Do NOT operate the equipment if it is damaged, malfunctioning or is in an excessively worn state.
- Do NOT allow others to use the equipment unless they have read this manual and are adequately trained.
- Keep packaging away from children - risk of suffocation! Operators must use the equipment correctly. When using the equipment, consider conditions and pay due care to persons and property.

General Work Area Safety

- Work areas should be clean and well lit.
- Do not operate the equipment if bystanders, animals etc are within operating range of the equipment or the general work area.
- If devices are provided for connecting dust extraction / collection facilities, ensure these are connected and used properly. Dust collection can reduce dust-related hazards.

General Personal Safety

- Wear appropriate protective equipment when operating, servicing, or when in the operating area of the equipment to help protect from eye and ear injury, poisoning, burns, cutting and crush injuries. Protective equipment such as safety goggles, respirators, non-slip safety footwear, hard hat, hearing protection etc should be used for appropriate equipment / conditions. Other people nearby should also wear appropriate personal protective equipment. Do not wear loose clothing or jewellery, which can be caught in moving parts. Keep hair and clothing away from the equipment.
- Stay alert and use common sense when operating the equipment. Do not over-reach. Always maintain secure footing and balance.
- Do not use the equipment if tired or under the influence of drugs, alcohol or medication.
- This equipment is not intended for use by persons with reduced physical, sensory or mental capabilities.

General Fuel Safety

- Petrol/fuel/gasoline is extremely flammable – keep clear of naked flames or other ignition sources.
- Do not spill fuel. If you spill fuel, wipe it off the equipment immediately – if fuel gets on your clothing, change clothing.
- Do NOT smoke near fuel or when refuelling.
- Always shut off the engine before refuelling.
- Do NOT refuel a hot engine.
- Open the fuel cap carefully to allow any pressure build-up in the tank to release slowly.
- Always refuel in well ventilated areas.
- Always check for fuel leakage. If fuel leakage is found, do not start or run the engine until all leaks are fixed.

General Carbon-Monoxide Safety

- Using a combustion engine indoors **CAN KILL IN MINUTES**. Engine exhaust contains carbon-monoxide – a poison you cannot smell or see.
- Use combustion engines OUTSIDE only, and far away from windows, doors and vents.

General Equipment Use and Care

- The equipment is designed for domestic use only.
- Handle the equipment safely and carefully.
- Before use, inspect the equipment for misalignment or binding of moving parts, loose components, damage or any other condition that may affect its operation. If damaged, have the equipment repaired by an authorised service centre or technician before use.
- Prevent unintentional starting of the equipment - ensure equipment and power switches are in the OFF position before connecting or moving equipment. Do not carry equipment with hands or fingers touching any controls. Remove any tools or other items that are not a part of the equipment from it before starting or switching on.
- Do not force the equipment. Use the correct equipment for your application. Equipment will perform better and be safer when used within its design and usage parameters.
- Use the equipment and accessories etc. in accordance with these instructions, considering working conditions and the work to be performed. Using the equipment for operations different from those intended could result in hazardous situations.
- Always keep equipment components (engines, hoses, handles, controls, frames, housings, guards etc) and accessories (cutting tools, nozzles, bits etc) properly maintained. Keep the equipment clean and, where applicable, properly lubricated.
- Store the equipment out of reach of children or untrained persons. To avoid burns or fire hazards, let the equipment cool completely before transporting or storing. Never place or store the equipment near flammable materials, combustible gases or liquids etc.
- The equipment is not weather-proof, and should not be stored in direct sunlight, at high ambient temperatures or locations that are damp or humid.
- Do not clean equipment with solvents, flammable liquids or harsh abrasives.
- For specific equipment safety use and care, see Equipment Safety.























General Electrical Safety	General Electrical Safety	General Service Information
<ul style="list-style-type: none"> Inspect electrical equipment, extension cords, power bars, and electrical fittings for damage or wear before each use. Repair or replace damaged equipment immediately. Ensure all power sources conform to equipment voltage requirements and are disconnected before connecting or disconnecting equipment. When wiring electrically powered equipment, follow all electrical and safety codes. Wherever possible, use a residual current device (RCD). High voltage / high current power lines may be present. Use extreme caution to avoid contact or interference with power lines. Electrical shock can be fatal. 	<ul style="list-style-type: none"> Electrically grounded equipment must have an approved cord and plug and be connected to a grounded electrical outlet. Do NOT bypass the ON/OFF switch and operate equipment by connecting and disconnecting the electrical cord. Do NOT use equipment that has exposed wiring, damaged switches, covers or guards. Do NOT use electrical equipment in wet conditions or in damp locations. Do NOT use electrical cords to lift, move or carry equipment. Do NOT coil or knot electrical cords, and ensure electrical cords are not trip hazards. 	<ul style="list-style-type: none"> The equipment must be serviced or repaired at authorised service centres by qualified personnel only. Replacement parts must be original equipment manufacturer (OEM) to ensure equipment safety is maintained. Do NOT attempt any maintenance or repair work not described in this manual. After use, the equipment and components may still be hot – allow the equipment to cool and disconnect spark plugs and/or electrical power sources and/or batteries from it before making adjustments, changing accessories or performing repair or maintenance. Do NOT make adjustments while the equipment is running. Perform service related activities in suitable conditions, such as a workshop. Replace worn, damaged or missing warning/safety labels immediately.

Electric Scooter Safety

- Please stay safe when riding. ALWAYS WEAR A HELMET AND OBEY ALL LAWS!**
- This product is not intended for extreme or off-road use. Please take care of your electric scooter.
- Do not jump or abuse this product.
- Do not ride in wet/icy conditions.
- This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Persons without excellent vision, balance, coordination, reflex, muscle and bone strength and good decision-making capabilities should not use this product.
- Minors without adult supervision should not use this product.
- Persons unwilling or unable to take responsibility for their own actions should not use this product.
- The user of this product assumes ALL risks associated with its use. To minimise these RISKS, the user must wear safety helmet, goggles, gloves, elbow and kneepads and appropriate footwear.
- This product is ELECTRIC! DO NOT ride this product in wet conditions, puddles or rainy weather.
- Install the fuse before riding.

Safety Symbols

The product may have safety warning labels attached to it, explained below. Understand the symbols on your product and their meanings. If any stickers become unreadable, unattached etc, replace them.

 <p>Flammable Material Hazard Flammable liquids, gases or substances etc may present. Avoid ignition sources and open flames. Danger of fire.</p>	 <p>Read User Manual Read and fully understand product safety warnings, operation, procedures etc before using the product.</p>	 <p>Use Hand Protection Wear appropriate hand protection and take due care as the product or use of the product may present hand hazards.</p>	 <p>Carbon-Monoxide Hazard Do not use the product in confined areas or without adequate ventilation. Carbon-monoxide poisoning can be fatal.</p>
 <p>Electrocution / Electrical Shock Hazard High voltage or high current electricity may be present or required by the product. Take due care when handling electrical products, cables, plugs and leads. Electrical shock can be fatal.</p>	 <p>Toxic Fumes / Dust Hazard Using the product or by-products from use may produce fumes, smoke or particles that could be harmful if inhaled. Wear appropriate breathing protection and have adequate ventilation.</p>	 <p>Explosive Material Hazard Combustible liquids, gases or substances etc may be present. Avoid ignition sources and open flames. Danger of explosion.</p>	 <p>Cutting / Amputation Hazard The product may have blades, edges or mechanical devices that can cause severe cut injury to fingers, limbs etc. Take due care when handling and using the product.</p>
 <p>Crush Hazard The product may have blades, edges or mechanical devices that can cause severe crush injury to fingers, limbs etc. Take due care when handling and using the product.</p>	 <p>Single Operator Only The product must be operated by a single person only. More than one person operating the product may introduce additional hazards.</p>	 <p>Use Face Protection Wear appropriate full-face protection and take due care as the product or use of the product may present face and eye hazards.</p>	 <p>Use Foot Protection Wear appropriate foot protection and take due care as the product or use of the product may present foot hazards.</p>
 <p>Use Eye / Ear / Head Protection Wear appropriate eye and / or ear and / or head protection and take due care as the product or use of the product may present eye, hearing and head hazards.</p>	 <p>Running Hazard Do not run on or near the product as doing so may present a fall hazard.</p>	 <p>Diving Hazard Do not dive into the product as doing so may present a neck / head injury hazard.</p>	 <p>Adult Supervision Required Always supervise children and other users of a product to prevent drowning or injury.</p>
 <p>Skin Penetration / Puncture Hazard The product may produce pressure, emit liquids or objects that can cause severe injury to fingers, limbs, blood etc. Take due care when handling and using the product.</p>	 <p>Hot Surface Hazard Be aware that the product may produce high temperatures and hot surfaces that can cause burn injuries.</p>	 <p>Flying Debris Hazard Be aware that the product or use of the product may present hazards produced by flying debris. Wear appropriate clothing and protective devices.</p>	 <p>Moving Parts Hazard Be aware that the product contains or uses mechanical devices that move or rotate. Always wait for moving parts to stop fully before handling the product, adjusting, maintenance etc.</p>

 <p>Carbon-Monoxide Hazard Do not use the product in confined areas or without adequate ventilation. Carbon-monoxide poisoning can be fatal.</p>	 <p>Pull Hazard Be aware that the product contains or uses mechanical devices that can pull in objects and can cause severe injury to fingers, limbs etc. Take due care when handling and using the product.</p>	 <p>Slope / Fall Injury Hazard Be aware that using the product on sloping surfaces or in slippery conditions may present additional dangers from falls and contact with blades, moving parts, hot surfaces etc.</p>	 <p>"Slam Dunk" Warning Do NOT attempt "slam dunk" manoeuvres as this may result in severe injury due to falling, product breakage or collapse etc.</p>
 <p>Electrocution / Electrical Shock Hazard - Outdoor High voltage or high current electricity may be present or required by the product. Do NOT use in rain, damp or wet conditions. Electrical shock can be fatal.</p>	 <p>Electrocution / Electrical Shock Hazard - Disconnect High voltage or high current electricity may be present or required by the product. Always disconnect the product from the electrical supply before handling the product, adjusting, maintenance etc.</p>	 <p>Power Line Electrocution Hazard High voltage / high current power lines may be present. Use extreme caution to avoid contact or interference with power lines. Electrical shock can be fatal.</p>	 <p>"Kick-Back" Hazard High level of "kick-back" hazard that can cause the machine to suddenly rotate towards operator. Kick-back injury can be fatal.</p>
 <p>Winch Operator Position Hazard Do NOT stand between winch and load. Do NOT use winch to move people.</p>	 <p>Winch Lift Hazard Do NOT LIFT load vertically. Use machine to PULL only.</p>	 <p>Cable Hazard Ensure that load bearing cable is not kinked or knotted.</p>	 <p>Winch Cable Hazard Ensure that there is a minimum number of cable coils on winching mechanism.</p>
 <p>Winch Hook Hazard Carry hook to load – do NOT throw or run.</p>	 <p>Flash / Blinding Hazard Wear appropriate eye protection for welding. Direct exposure to weld arcs may cause permanent eye injury.</p>	 <p>Laser Hazard Laser may be in use – do NOT look directly at laser, or allow others to.</p>	



Table of Contents

Safety	2
Safety Symbols	4
Assembly	7
Operation	8
Charging the Battery	8
3 Shifts Switch with Power-Off Protection.....	8
Circuit Breaker	8
Riding the Electric Scooter.....	9
Stopping/Braking.....	9
Braking System	9
Adjusting the Brakes	9
Folding Your Scooter	10
Lithium Battery Care and Maintenance	11
Top 3 Battery Care Requirements	11
Maintenance	12
Recommended Tools	12
Maintenance Schedule.....	12
Daily Maintenance	12
Specifications.....	13

Assembly



Please read and understand these instructions and the Operation section prior to starting or riding your electric scooter.

1. Carefully remove your scooter from the box.
2. Install the front wheel.
3. To unfold the scooter, begin by pressing down on the FOLDING HANDLE with one hand, while gently pulling up on the handlebars with the other. The handlebar will snap into place and will not move when secured properly.
4. Loosen the handlebar clamp, and raise the handlebar to the desired height, being sure the pole snaps into place. Then tighten clamp securely.
5. To attach the handlebars to each side of the T-bar, first loosen the top handlebar clamp then slide each handlebar into the T-bar being sure they snap into place and are in the correct orientation for riding. Finish by clamping down the clamp lever securely.

IMPORTANT! Before using the scooter, you must check the tension of the drive belt, Failure to do so may cause the drive belt to strip. Adjust the nuts on either side of the rear wheel until there is enough tension on the drive belt. The adjustment screws on either side need to be perfectly symmetrical. It should be the same length of thread exposed from the nut on each side.



Operation



ATTENTION: Monitor battery usage when in use, the scooter may suddenly slow down as the battery charge reduces.

Charging the Battery



WARNING: Do not allow your scooter to go into deep discharge, as this will damage the batteries.

1. Make sure unit is turned off.
2. Charging socket is located on side (see picture to the left).
3. Locate your Battery Charger. Find the charger socket end that has a single-prong socket and plug it into the scooter.
4. Next, plug the AC plug into a wall outlet.



When first plugged in, the charger will have one red light that will illuminate as long as the power switch is in the charge position, if the power switch is in the on or off position the charger will have a red and green light illuminating which means no charge is taking place. Make sure you have the switch in the correct charge position. After 4-6 hours the green light on the charger is illuminated indicating the unit is now charged.

3 Shifts Switch with Power-Off Protection

1. Turn on: press "ON" shift (When press "ON" shift, the circuit of batteries, controller and other parts are connected, then you can operate the scooter).
2. Power off: press "OFF" shift (When press "OFF" shift, the circuit between batteries and controller are completely disconnected, this will protect the batteries' lifetime and performance).
3. Charging: press "CHA" shift (When press "CHA" shift, the circuit between battery and charging system are connected, but disconnected from the controller system, the scooter can only be charged in this status).

Circuit Breaker

When the current is too high, the fuse will pop up, you only need to press it down, the scooter can work again, no need to change fuse.





Riding the Electric Scooter

1. Make sure that all exposed bolts and screws are tightened.
2. Raise the kickstand to its upright position.
3. Push the on/off switch (located on the left side of the scooter frame under the footplate) to the ON position.
4. Put one foot on the deck of the electric scooter while pushing off with the other foot, gently rotate the throttle grip, on the right side of the handlebars. The electric scooter will begin to move on its own power.

Your scooter has a variable speed hand throttle. You can control the speed of your scooter by the amount of pressure you use when rotating the hand throttle. The more you rotate, the faster you will go.

Stopping/Braking

To brake, release the THROTTLE grip and depress the brake lever (on the left side of the handlebars). Depressing The brake will disengage power to the motor. When the unit feels like it is losing power or not accelerating to full speed, the scooter is ready to be re-charged.

Braking System

The electric scooter uses a hub brake system on the rear wheel. A hand brake lever on the left side of the handlebar activates the brakes. Squeezing the hand brake lever with your left hand will activate the rear brake. Make sure to release the hand throttle grip when engaging the brakes.

Practice braking on a smooth, dry surface to get used to the feel of the braking system. Braking distance is affected by wet conditions and loose and uneven riding surfaces.

Adjusting the Brakes

The Brakes on the electric scooter should come fully adjusted from the factory. However, it may be necessary to adjust the brakes from time to time.

To adjust the rear brakes:

For brakes that are adjusted too tight

- Loosen the tension screw on the left-hand brake lever by rotating it anti-clockwise until the wheel spins freely.

For brakes that are adjusted too loose

- Tighten the tension screw on the left-hand brake lever by rotating it clockwise until the wheel has a slight drag.

For further adjustment, locate the adjustment screw on the rear brake hub located on the rear wheel.



Squeaky Brakes

The brakes may squeak before they are broken in. This is normal and will not affect the function or performance of the brakes. With continued use the squeak should go away.

Folding Your Scooter

Please ensure that when folding your scooter, the arrow on the wheel fork is pointing upward as shown in the image below:



If the arrow is pointing downward, the wheel will rest on the folding mechanism as shown in the image below:





Lithium Battery Care and Maintenance

Top 3 Battery Care Requirements

1. **Charge battery before first use.** The battery may arrive with some charge, regardless of this the battery must be charged for 8 hours on the initial charge and 6 – 8 hours for each subsequent charge. ✓
 2. **Charge battery immediately when it is depleted.** Do not store a depleted battery. This will permanently impact the life of the battery. If the battery is going to be stored for a period of time, fully charge the battery before storing. ✓
 3. **Disconnect battery when not in use.** To prolong the life of a battery, disconnect it from the unit when not in use. Disconnect chargers from the battery once charged. ✓
-

To ensure the battery maintains optimum performance, follow the guidelines outlined below.

- For best results, charge batteries in temperatures between 10°C and 30°C
- When battery is charged, disconnect the charger from the power supply and remove the battery from the charger.
- If a battery is stored or otherwise unused for an extended period, and the battery has no charge remaining when you check it, consider it to be damaged. Do not attempt to recharge it or to use it. Replace it with a new battery.
- Use only with the battery charger specified by the manufacturer.
- Ensure that the battery charger electrical cord is not subjected to damage or stress. Do not operate the battery charger if it has a damaged electrical cord or plug.
- Do not use the charger in wet areas or expose it to rain or water.
- The typical estimated life of a Lithium-Ion battery is about two to three years or 300 to 500 charge cycles, whichever occurs first. One charge cycle is a period of use from fully charged, to fully discharged, and fully recharged again
- Explosion hazard – protect the battery against heat; for example, direct sunlight and fire. Do not store batteries in vehicles or locations subject to heat.
- Batteries can explode in the presence of an ignition source, such as a pilot light. To reduce the risk of serious personal injury, never use any cordless product in the presence of open flame. Exploding batteries can propel debris and chemicals.
- Do not open the battery – danger of short-circuiting and/or explosion.
- Do not attempt to destroy or disassemble the battery pack or remove any of its components.
- Do not touch the battery terminals with metal objects and/or body parts as short-circuit and/or personal injury may result.
- Explosion hazard – do not open and/or short-circuit the battery.
- Poison hazard – battery leakage (liquid ejection). Under extreme conditions, liquid may be ejected from the battery – avoid contact. If contact accidentally occurs, immediately seek medical attention, and flush with water. If liquid contacts eyes, immediately seek medical attention, flush with clean water for at least 10 minutes. Liquid ejected from the battery may cause irritation or burns.
- Dispose of non-serviceable batteries in an environmentally responsible manner and according to local regulations.

Failure to adhere to the requirements above may result in the battery becoming inoperative or battery life being reduced. In extreme cases or abuse, battery overheating or fire may result.



Maintenance

Recommended Tools

To adjust and service the electric scooter you will need the following tools:

- Allen Wrenches: 3/4/5/6 mm 3/4/5/6mm
- Wrenches: 8/10/13 mm Open end wrench 8/10/13mm
- Large Adjustable Crescent Wrench
- Philips Head Screwdrivers
- Oil, Grease or Lubricant

Maintenance Schedule

Proper care of your electric scooter will insure optimal performance and longer life span. The following are a few maintenance suggestions that will keep your electric scooter running in top condition:

Daily Maintenance

Perform each time you ride your electric scooter:

- Clean the exterior of the unit with a soft, damp rag.
- Check that all nuts and bolts are securely tightened.
- Check battery charger for any frayed/cut wires.



Specifications

Motor	140W
Maximum Rider Weight	80kg
Recommended Age Range	5-7 Years, 8-11 Years, 17 Years and Up
Tyres (front/rear)	6 inch / 5.5 inch
Start Mode	Button switch
Brake	Rear
Charging period	6-8 hours
Input voltage of battery	240v
Max Range	15km
Max Speed	15Km/h
Adjustable Handlebar Height (Min/Mid/Max)	82cm/87cm/94cm
Power Plug	Australian Standard

Note: Electric Scooters are not designed for use in public spaces. This product is to be used only on safe, dry smoothly paved or hard surfaces. We strongly recommend the use of safety equipment such as helmet and knee pads.



Some experts believe that the incorrect or prolonged use of almost any product may cause serious injury or death. To help reduce your risk of serious injury or death, refer to the information below. For more information, see www.datastreamserver.com/safety

- Consult all documentation, packaging and product labelling before use. Note that some products feature documentation available online. It is recommended to print and retain the documentation.
- Before each use, check the product for loose/broken/damaged/missing parts, wear or leaks (if applicable). Never use a product with loose/broken/damaged/missing parts, wear or leaks.
- Products must be inspected and serviced (if applicable) by a qualified technician every 6 months. This is based on average residential use by persons of average size and strength, and on a property of average metropolitan size. Use beyond these recommendations may require more frequent inspections/servicing.
- Ensure that all users of the product have completed a suitable industry recognised training course before being allowed access to the product.
- The product has been supplied by a general merchandise retailer that may not be familiar with your specific application or description of application. Be sure to attain third-party approval from a qualified specialist for your application before use, regardless of any assurances from the retailer or its representatives.
- This product is not intended for use where fail-safe operation is required. As with any product (for example, automobile, computer, toaster), there is the possibility of technical issues that may require the repair or replacement of parts, or the product itself. If the possibility of such failure and the associated time it may take to rectify could in any way inconvenience the user, business or employee, or financially affect the user, business or employee, then the product is not suitable for your requirements. This product is not intended for use where incorrect operation or a failure of any kind, including but not limited to, a condition requiring product return, replacement, parts replacement or service by a technician may cause financial loss, loss of employee time or an inconvenience requiring compensation.
- If this product has been purchased in error when considering the information presented here, contact the retailer directly for details of their returns policy, if required.

