

**READ  
THIS  
FIRST!**

**This product must be installed as described. Failure to assemble the product according to the instructions may void any warranties provided or implied.**

## Safety

- This product must be installed by a minimum of 2 people [  ]. Larger gazebos may require 4 people [  ]. Attempting to install the product on your own may present personal risk and/ product or damage.
- This product is not designed to be used as a fixed or permanent shelter.
- Once assembled, always secure the product properly, regardless of weather conditions.
- Once assembled, never leave the product unattended.
- Do not assemble, install or use the product on uneven or unsafe surfaces.
- Do not assemble, install or use the product in the event of heavy rain or windy conditions.

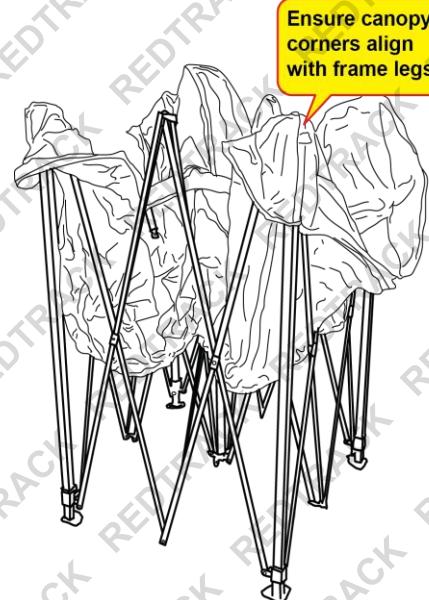


Fig 1 – Unassembled Gazebo with Canopy on Frame

## Included Items

- Gazebo frame.
- Gazebo canopy.
- Gazebo walls (applicable models).
- Securing pegs and guy-ropes (applicable models).

## Assembly

1. Stand the gazebo frame upright in the centre of the location where it is to be erected. Do not attempt to move the gazebo when it is erected.
2. Carefully place the gazebo canopy over the frame so that the centre and corners are lined up with the frame (Fig 1). For larger model gazebos, spread the gazebo frame (see step 4) close to full size before placing the canopy over it.

**⚠ Never use excessive force when positioning the canopy or you risk tearing it. Ensure that the canopy is not caught in any part of the frame and that it is correctly oriented – long side of the canopy to the long side of the gazebo frame (if applicable) and canopy corners to frame corners.**



Fig 2 – Canopy to Leg Velcro Attachment

3. At each corner of the gazebo frame, carefully slip the canopy over the frame leg and be sure to firmly attach the canopy to the leg with the Velcro straps (Fig 2).

**⚠ Expanding the gazebo frame requires a minimum of 2 [  ] people for smaller models, and 4 people [  ] for larger models.**

4. On opposite sides of the gazebo, grab the middle section of the frame with both hands (Fig 3). Simultaneously lift the sections of frame up and slowly move backwards, allowing the frame to expand to its full size (Fig 4). For larger model gazebos it is recommended to have 2 people on each long side of the frame (shaded figures in the image) and to lift together to expand the frame.

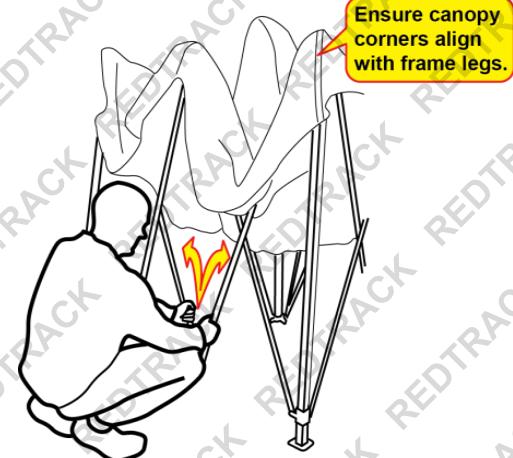


Fig 3 – Preparing to Expand the Frame

**Please Turn Over**

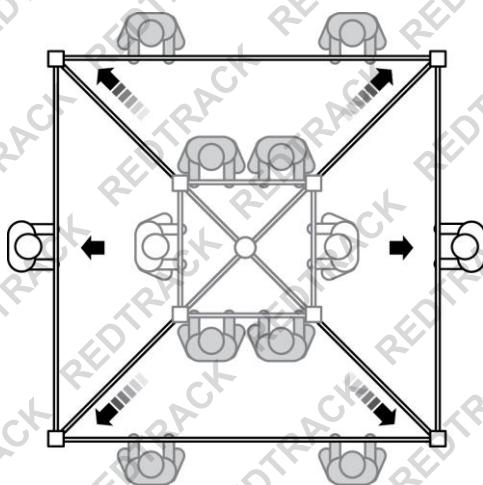


Fig 4 - Hold Frame, Lift and Expand

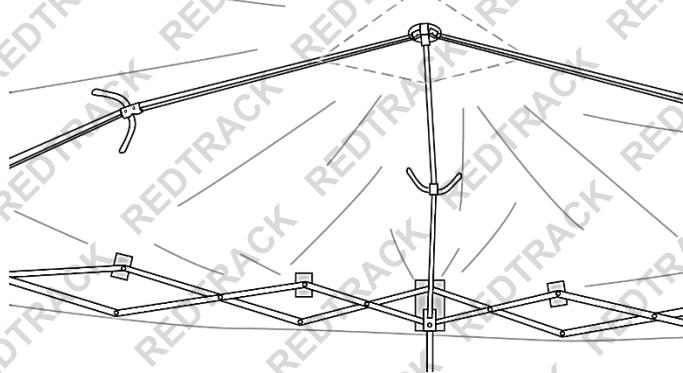


Fig 5 - Roof Frame when Expanded (Partial View from Inside)

5. At each leg, secure the top part of the frame to the leg tube – hold the upper section of the leg firmly and slide the roof frame up the leg until the tube lock location pin (shown in red) locks into the tube lock (Fig 5 and Fig 6). When properly assembled, the location pin will be pushing the back of the release button (shown in red)
6. Secure the canopy sides to the frame using the Velcro straps. For gazebos with spring-loaded canopy supports, ensure that the canopy is positioned so the reinforced sections of the canopy are resting on the supports.



**Raise the entire gazebo roof in stages, one hole at a time. If you do not, you risk toppling or collapsing the gazebo and damaging the frame or legs.**

7. Raise the gazebo roof to the required height by holding the bottom part of the leg to the ground (stand on it) and lifting the telescopic section until the locking pin pops into its location hole. To raise further, push the pin in with your thumb and hold it then gently lift the telescopic section until the pin pops into the next available hole.
8. Once the gazebo is assembled and the roof extended to the required height, secure the legs to the ground using the supplied pegs (if applicable). For gazebos with walls, attach them to the frame using the Velcro straps.
9. Tie the supplied guy-ropes (if applicable) to the eyelets on the canopy (usually at each corner) and secure the other end to the ground using the supplied pegs.



**Do not leave the gazebo unattended. Disassemble the gazebo immediately if weather conditions begin to affect it.**

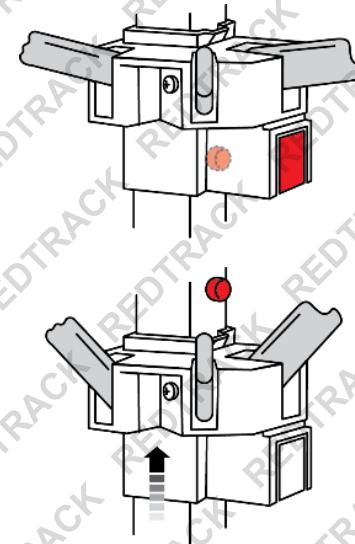


Fig 6 - Tube Lock, Location Pin and Release Button

## Disassembly

Disassembly is a reverse of the assembly procedure. Always take care during disassembly to ensure that the canopy does not get caught in the frame or is otherwise damaged. Note that to release the canopy frame from the top of each leg, press the tube lock release button (Fig 6, shown in red) then gently lower the frame over the leg.

## Care and Maintenance

The gazebo should be stored in a dry location. If the gazebo is wet, allow it to dry before storing it. It is also recommended to clean any parts of the gazebo that may be excessively dirty before storing it.



**Some experts believe that the incorrect or prolonged use of almost any product may cause serious injury or death. To help reduce your risk of serious injury or death, refer to the information below. For more information, see [www.datastreamserver.com/safety](http://www.datastreamserver.com/safety)**

- Consult all documentation, packaging and product labelling before use. Note that some products feature documentation available online. It is recommended to print and retain the documentation.
- Before each use, check the product for loose/broken/damaged/missing parts, wear or leaks (if applicable). Never use a product with loose/broken/damaged/missing parts, wear or leaks.
- Products must be inspected and serviced (if applicable) by a qualified technician every 6 months. This is based on average residential use by persons of average size and strength, and on a property of average metropolitan size. Use beyond these recommendations may require more frequent inspections/servicing.
- Ensure that all users of the product have completed a suitable industry recognised training course before being allowed access to the product.
- If this product has been purchased in error when considering the information presented here, contact the retailer directly for details of their returns policy, if required.
- The product has been supplied by a general merchandise retailer that may not be familiar with your specific application or description of application. Be sure to attain third-party approval from a qualified specialist for your application before use, regardless of any assurances from the retailer or its representatives.
- This product is not intended for use where fail-safe operation is required. As with any product (for example, automobile, computer, toaster), there is the possibility of technical issues that may require the repair or replacement of parts, or the product itself. If the possibility of such failure and the associated time it may take to rectify could in any way inconvenience the user, business or employee, or financially affect the user, business or employee, then the product is not suitable for your requirements. This product is not intended for use where incorrect operation or a failure of any kind, including but not limited to, a condition requiring product return, replacement, parts replacement or service by a technician may cause financial loss, loss of employee time or an inconvenience requiring compensation.



©2018 Red Track. All rights reserved. No part of this document, including descriptive content, concepts, ideas, diagrams or images may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying, scanning or recording, or any information storage and retrieval system, without express permission or consent from the publisher.