



Self-Propelled Cultivator Tiller

User Manual



RETAIN THIS MANUAL FOR FUTURE REFERENCE

PLEASE READ THIS MANUAL CAREFULLY BEFORE USE

Table of Contents

IMPORTANT	1
SAFETY	2
Owner's Responsibility	2
Special Message	2
Important Safety Precautions	2
PREPARATION	4
OPERATION	5
GUIDELINES	7
SAFETY DECALS	8
ASSEMBLY INSTRUCTIONS	10
Step 1: Install the Depth Regulator	10
Step 2: Attach the Ex-Arm-Rest Stems to the Tiller	11
Step 3: Attach the Handle Bar to the Tiller	12
Step 4: Fill the Engine Crankcase	13
OPERATION	14
Pre-Start Inspection	14
Start-Up	15
Cold Starts	15
Restarting a Warm Engine	15
Idle Speed	16
Operating Speed	16
Shutting Down	16
Tilling	16
Drive Safety Control Levers	16
Forward Lever	16
Reverse Lever	17
Adjustments	17
Wheel Lock Pins	17
Handlebar Height Adjustment	19
Depth Regulator Lever	20
Belt Tension Adjustment	21
Tilling Tips	22
Cultivating Tips	22
MAINTENANCE AND STORAGE	23
Maintenance	23
Maintenance Schedule	24

Self-Propelled Cultivator Tiller

Servicing the Tiller	25
Change Forward/Reverse Belt	25
Engine Maintenance	26
Check or Fill the Engine Crankcase	26
Check Tiller Transmission Grease	26
Check Tire Pressure	27
Lubrication	27
Clean Tine Axle Shaft	27
Storage.....	28
Preparation for Storage	28
TROUBLESHOOTING AND REPAIR.....	29
Troubleshooting Guide	29
SPECIFICATIONS	31

Important

Please read and save these instructions. Read through this owner's manual carefully before using product. Protect yourself and others by observing all safety information, warnings and cautions. Failure to comply with instructions could result in personal injury and/or damage to product or property. Please retain instructions for future reference.

Safety

Owner's Responsibility

Accurate assembly and safe, effective use of the tiller is the owner's responsibility.

- Read and follow all safety instructions.
- Follow all assembly instructions carefully.
- Maintain the tiller according to the directions and schedule included in this operator's manual.
- Ensure that anyone who uses the tiller is familiar with all controls and safety precautions.

Special Message

Your manual contains special messages to bring attention to potential safety concerns, machine damage as well as helpful operating and servicing information.

Please read all the information carefully to avoid injury and machine damage.

NOTE: General information is given throughout the manual that may help the operator in the operation or service of the machine.

Important Safety Precautions

Please read this section carefully.

Operate the tiller according to the safety instructions and recommendations outlined here and inserted throughout the text. Anyone who uses this tiller must read the instructions and be familiar with the controls. Your tiller is equipped with a safety device that enables you to stop the wheels and tines quickly in an emergency.

Learn how the drive safety control lever operates and how to control the tiller at all times.



DANGER

DANGER INDICATES A SERIOUS INJURY OR FATALITY WILL RESULT IF THE SAFETY INSTRUCTIONS THAT FOLLOW THIS SIGNAL ARE NOT OBeyed.



WARNING

WARNING INDICATES A SERIOUS INJURY OR FATALITY COULD RESULT IF THE SAFETY INSTRUCTIONS THAT FOLLOW THIS SIGNAL ARE NOT OBeyed.



CAUTION

CAUTION INDICATES YOU OR YOUR EQUIPMENT CAN BE HURT IF THE SAFETY INSTRUCTIONS THAT FOLLOW THIS SIGNAL ARE NOT OBeyed.

IMPORTANT

IMPORTANT INDICATES HELPFUL INFORMATION FOR PROPER ASSEMBLY, OPERATION, OR MAINTENANCE OF YOUR EQUIPMENT.



WARNING

YOU MUST READ, UNDERSTAND AND COMPLY WITH ALL SAFETY AND OPERATING INSTRUCTIONS IN THIS MANUAL BEFORE ATTEMPTING TO SETUP AND OPERATE YOUR TILLER. FAILURE TO COMPLY WITH ALL SAFETY AND OPERATING INSTRUCTIONS CAN RESULT IN LOSS

OF MACHINE CONTROL, SERIOUS PERSONAL INJURY TO YOU AND/OR BYSTANDERS, AND RISK OF EQUIPMENT AND PROPERTY DAMAGE. THE TRIANGLE IN THE TEXT SIGNIFIES IMPORTANT CAUTIONS OR WARNINGS WHICH MUST BE FOLLOWED.



This symbol points out important safety instructions which if not followed could endanger your personal safety. Read and follow all instructions in this manual before attempting to operate this equipment.

Do not allow children to operate this tiller. Keep small children away from the area being tilled.
Do not allow adults to operate the tiller without proper instruction.

Preparation

- Dress appropriately when operating the tiller. Always wear sturdy footwear. Never wear sandals, sneakers, or open shoes, and never operate the tiller with bare feet. Do not wear loose clothing that might get caught in moving parts.
- Carefully inspect the area to be tilled and remove all foreign objects. Do not till above underground water lines, gas lines, electric cables, or pipes. Do not operate the tiller in soil with large rocks and foreign objects which can damage the equipment.
- Disengage all clutches and leave all control levers in the neutral position before starting the engine.
- Handle fuel with care; it is highly flammable.
 - a. Use an approved fuel container.
 - b. Never add fuel to a running engine or hot engine.
 - c. Fill the fuel tank outdoors with extreme care. Never fill fuel tank indoors.
 - d. Replace gasoline cap securely and clean up spilled fuel before restarting.
- Never attempt to make any adjustments while the engine is running.

Operation

- Never operate the tiller without guards, covers, and hoods in place.
- Never start the engine or operate the tiller with the wheels in the free-wheel position. Make sure that the wheel lock pins are engaged through the wheel hubs and wheel axle. The wheels act as a brake to keep the tiller at a controlled speed. Disengage wheel lock pins to permit free-wheeling only when engine is stopped.
- Keep hands, feet, and clothing away from rotating parts. Keep clear of tiller tines at all times.
- Tines and wheels rotate when tiller is engaged in **forward** or **reverse** – in **forward**, tines and wheels rotate when the drive safety control lever (**FORWARD**), is pushed down toward the handlebar. In **reverse**, wheels and tines rotate when the drive safety control lever (**REVERSE**), is pulled back toward the operator. Releasing the reverse handle to the **neutral** position stops the wheels and tines. Do not operate both drive safety control levers at the same time.
- Be extremely cautious when operating in **reverse**. Take extra care to avoid slipping or falling and keep hands and feet clear of the tines.
- Use extreme caution when operating on or crossing gravel drives, walks, or roads. Stay alert for hidden hazards or traffic.

IMPORTANT

THE RIGHT AND LEFT SIDES OF
YOUR TILLER ARE DETERMINED
FROM THE OPERATING POSITION AS
YOU FACE THE DIRECTION OF
FORWARD TRAVEL.



ENGINE IS SHIPPED FROM FACTORY
WITHOUT OIL. YOU MUST ADD
ENGINE OIL BEFORE STARTING
ENGINE.

- After striking a foreign object, stop the engine, remove the wire from the spark plug, thoroughly inspect the tiller for any damage, and repair the damage before restarting and operating the tiller.
- If vegetation clogs the tines, raise the handlebars to elevate the tines, and run the tiller in reverse. If this does not clean clogged vegetation from the tines, **STOP THE ENGINE AND DISCONNECT THE SPARK PLUG WIRE** before removing vegetation by hand.
- Engine muffler will be hot from operation. Do not touch it with bare skin or a severe burn may result.
- If the unit should start to vibrate abnormally, stop the engine and check immediately for the cause. Vibration is generally a warning of trouble.
- Do not run the engine indoors; exhaust fumes are deadly.
- Do not overload the machine capacity by attempting to till too deep at too fast a rate.
- Never operate the machine at high transport speeds on slippery surfaces. Look behind you and use care when backing.

Self-Propelled Cultivator Tiller

- Never allow bystanders near the unit.
- Use only attachments and accessories approved by the manufacturer of the tiller.
- Never operate the tiller without good visibility or light.
- Be careful when tilling in hard ground. The tines may catch in the ground and propel the tiller backward. If this occurs, let go of the handlebars and do not restrain the machine.
- Take all possible precautions when leaving the machine unattended. Disengage all control levers, stop the engine, wait for all moving parts to stop, and make certain guards and shields are in place.
- When leaving the operating position for any reason:
 - Shut off the engine.
 - Wait for all moving parts to stop.

Guidelines

- Keep machine, attachments, and accessories in safe working condition.
- Check shear bolts, engine mounting bolts and other bolts at frequent intervals for proper tightness to be sure the equipment is in safe working condition.
- To prevent accidental starting, always disconnect and secure the spark plug wire from the spark plug before performing tiller maintenance.
- Never run the engine indoors. Exhaust fumes are deadly.
- Always allow the muffler to cool before filling the fuel tank.
- Never store equipment with gasoline in the tank inside a closed building where fumes may reach an open flame or spark. Allow the engine to cool before storing in any building.
- Always refer to the operator's guide instructions for important details if the tiller is to be stored for an extended period.

Safety Decals

This tiller unit has been designed and manufactured to provide you with the safety and reliability you would expect from an industry leader in outdoor power equipment manufacturing.

Although reading this manual and the safety instructions it contains will provide you with the necessary basic knowledge to operate this equipment safely and effectively, we have placed several safety labels on the tiller to remind you of this important information while you are operating the unit.

These important safety labels are illustrated below, and are shown here to help familiarize you with the location and content of the safety messages you will see as you perform normal tilling operations. Please review these labels now. If you have any questions regarding their meaning or how to comply with these instructions, reread the complete safety instruction text on the preceding pages, or contact your local dealer.

Should any of the safety labels become unreadable because of being worn, faded, or otherwise damaged during the use of your tiller, please use the part number information provided to order a replacement label from your local authorised dealer.

The safety labels are easily applied, and will act as a constant visual reminder to you and other who may use the equipment. Follow the safety instructions necessary for a safe and effective operation of your tiller.

WARNING

AVOID SERIOUS INJURY

- Read operator's manual(s) before operating.
- Know the location and function of all controls.
- Keep all shields and guards in place and working while running.
- Never allow children to operate tiller.
- Dress appropriately—wear sturdy footwear.
- Carefully inspect area to be tilled—remove large rocks and other foreign objects.
- DO NOT till above underground electric, water, gas, or other utility lines and pipes.
- **STOP THE ENGINE AND DISCONNECT THE SPARK PLUG WIRE** before removing debris or servicing unit.
- When leaving the operating position for any reason:
 - shut off the engine.
 - wait for all moving parts to stop.

WARNING

WHEELS ACT AS BRAKES

- Never start or operate tiller with wheels in the Free Wheel position. Make sure wheel lockouts are engaged through wheel hubs and axle.
- Wheels act as brakes to keep the tiller at a controlled speed. Disengage wheel lockouts **ONLY** when engine is stopped.

OPERATION

REFER TO OPERATOR'S MANUAL FOR DETAILED OPERATING INSTRUCTIONS

TO START:

1. Release drive control levers to neutral position.
2. Lower the drag stake so that tines do not touch the ground.
3. Check position of wheels and wheel lockouts.
4. Slide choke control to choke position.
5. Move throttle control lever to fast position.
6. Pull starter rope.

DANGER**AVOID INJURY FROM ROTATING TINES!**

Keep hands, feet, and clothing away.

- Tines rotate when tiller is engaged in forward or reverse.
- Tines and wheels rotate when drive control levers are pulled down.
- In reverse, tines and wheels rotate when the reverse handle is pulled back toward the operator.
- Releasing the drive control levers to the neutral position stops the wheels and tines.

WARNING

DO NOT START ENGINE UNLESS BELT COVER IS ATTACHED. KEEP HANDS, FEET, AND CLOTHING AWAY FROM MOVING BELTS AND PULLEYS. FAILURE TO COMPLY COULD RESULT IN INJURY. SEE OWNER'S MANUAL FOR FULL SAFETY INSTRUCTIONS.

WARNING

Read and follow Operating Instructions before running engine.



Gasoline is flammable. Allow engine to cool at least 2 minutes before refueling.



Engines emit carbon monoxide, DO NOT run in enclosed area.



Muffler area temperature may exceed 150°F. Do not touch hot parts.


**PLACE FREE
HAND HERE**

Assembly Instructions

The tiller comes fully-assembled except for a few parts. The following instructions will help you assemble and adjust the tiller's depth regulator, cable tension, and handlebar height. You will need two 9/16" wrenches to complete the assembly.


Step 1: Install the Depth Regulator

1. Install the depth regulator into the top of the depth regulator bracket with the handle facing rearward.
2. Insert the depth regulator pin through the depth regulator bracket and the top hole of the depth regulator – tines should clear the ground.

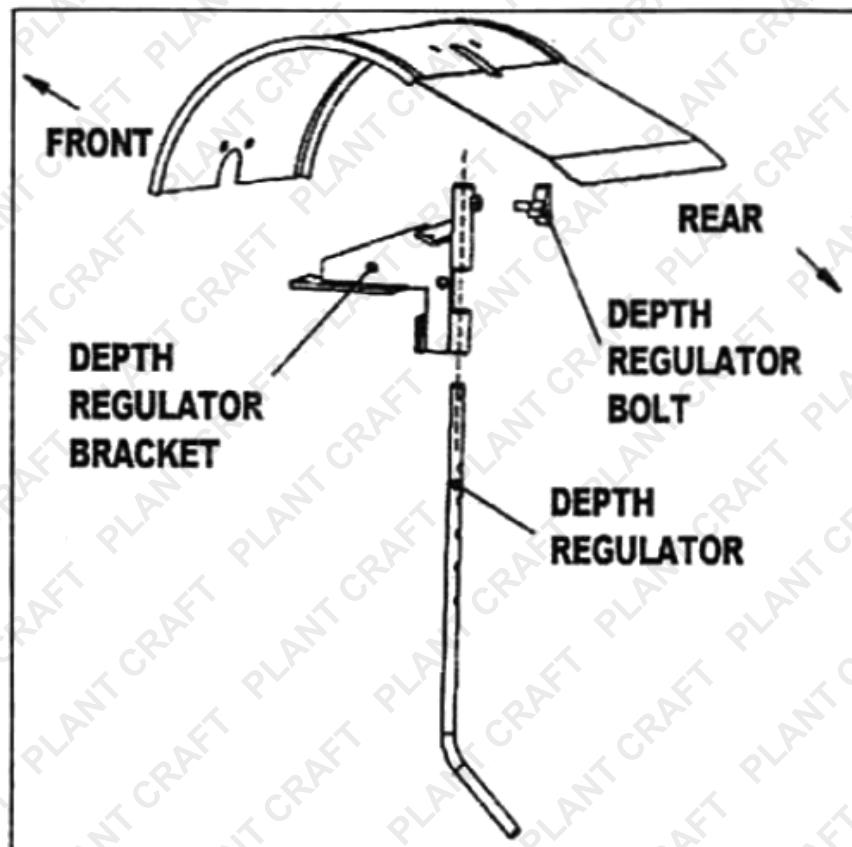


Step 2: Attach the Ex-Arm-Rest Stems to the Tiller

1. The ex-arm-rest stems from the outside of the transmission cover and is aligned with the lower boles.
2. Insert one 3/8"-16x 1" bolt for each side in lower holes.
3. Insert the 3/8"-16 nuts on each bolt.
4. Insert one 3/8"-16x 1" bolt for each side in the upper holes at a desired handlebar height.
5. Tighten all the nuts.

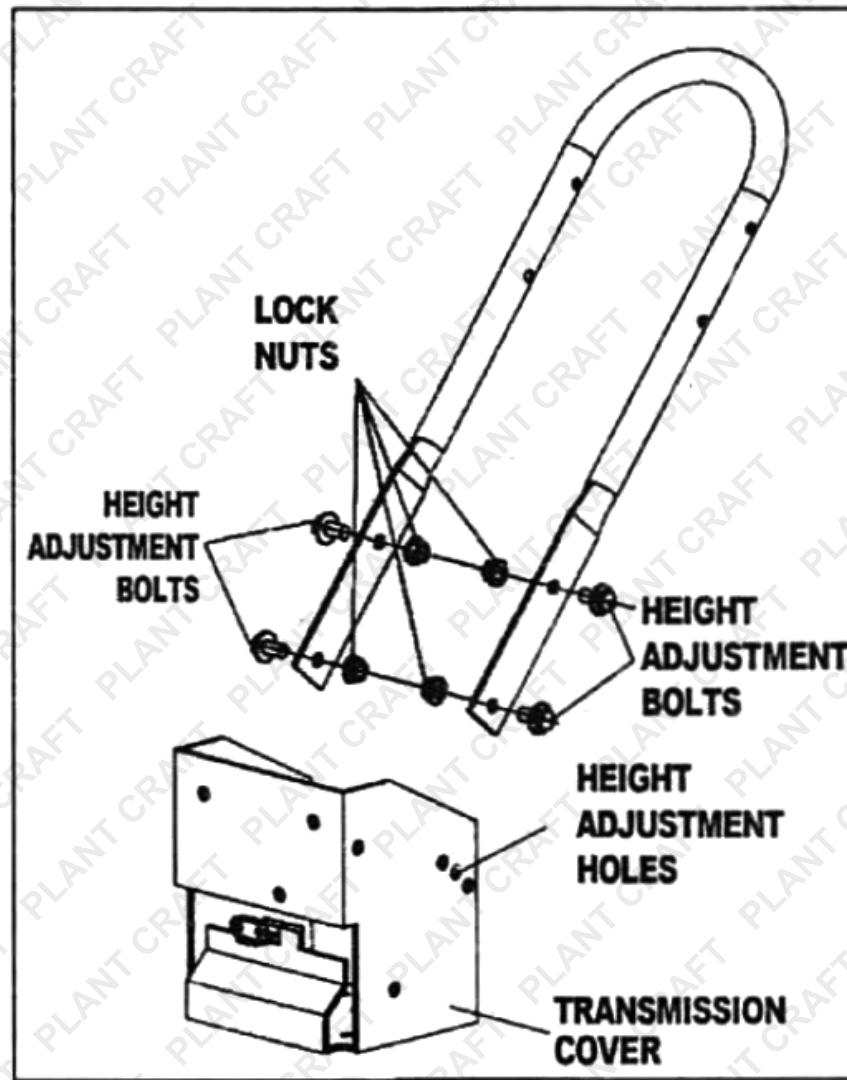

Step 3: Attach the Handle Bar to the Tiller

1. Insert four fastness bolts for each side in every holes.
2. Screw in the fastness nuts on each bolt.
3. Tighten all the nuts.

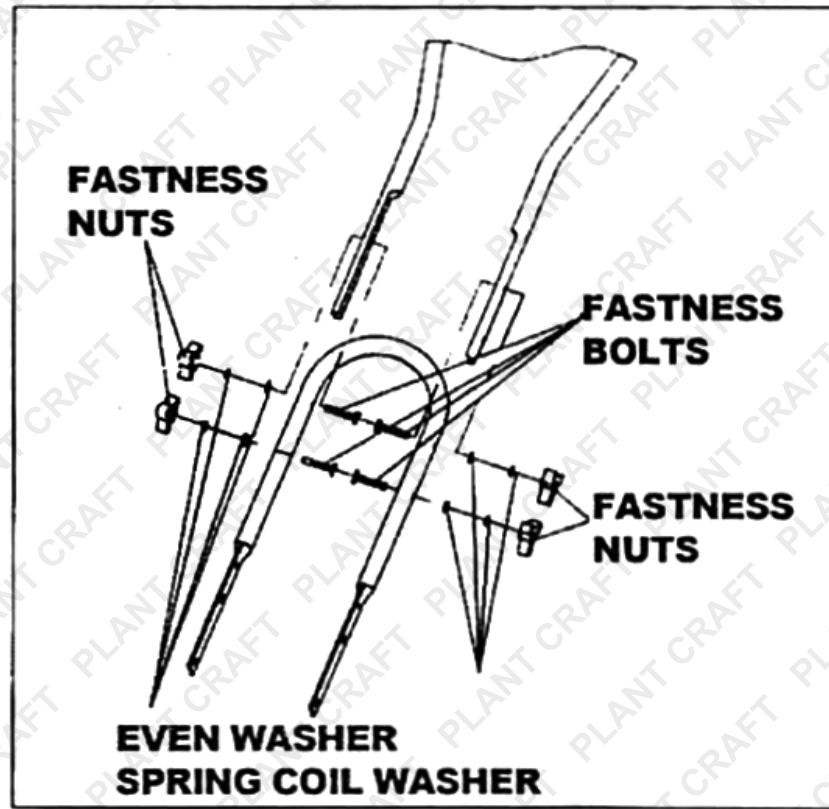

Step 4: Fill the Engine Crankcase

IMPORTANT

Engine is shipped from factory without oil. Engine oil must be added before starting the engine.

1. Add oil according to the engine manual. Do not overfill. Use clean, high quality detergent oils. Do not mix oil with gasoline. Oil level must be full. Check the oil level by removing oil fill plug.
2. Always check oil level before starting engine. Refer to engine manual for capacity and type of oil to use.



Operation

Pre-Start Inspection

1. Make sure that all safety guards are in place and that all nuts and bolts are secure.
2. Check the oil level in the engine crankcase. See your engine manual for procedure and specifications.
3. Inspect the air cleaner for cleanliness. See your engine manual for procedure.
4. Check the fuel supply. Fill the fuel tank no closer than 1 inch from the top of the tank to provide space for expansion. See your engine manual for fuel recommendations.
5. Be sure that the spark plug wire is attached and that the spark plug is tightened securely.
6. Check the position of the wheels and wheel lockouts.
7. Check the depth regulator lever position.
8. Examine underneath and around the engine for signs of oil or fuel leaks.
9. Inspect the fuel hoses for tightness and fuel seepage.
10. Look for signs of engine damage.
11. Remove excessive debris from the muffler area and recoil starter.



CAUTION

PLEASE DO NOT START YOUR TILLER UNTIL YOU HAVE READ THE MANUAL THAT CAME WITH YOUR ENGINE, AND THE SECTIONS IN THIS MANUAL TITLED CONTROLS, ADJUSTMENTS AND SAFETY. IF YOU HAVE READ THESE, FOLLOW THE STEPS BELOW TO START YOUR TILLER. ALWAYS PERFORM THIS PRE-START CHECKLIST BEFORE STARTING THE ENGINE.



WARNING

GASOLINE IS HIGHLY FLAMMABLE AND MUST BE HANDLED WITH CARE. NEVER FILL THE TANK WHEN THE ENGINE IS HOT OR RUNNING. ALWAYS MOVE OUTDOORS TO FILL THE TANK.

WHEELS MUST ALWAYS BE LOCKED IN THE TILLING POSITION WHEN ENGINE IS RUNNING. DO NOT OPERATE THE TILLER WITH THE WHEEL LOCKOUTS UNLOCKED. ALWAYS SET THE WHEELS IN TILLING POSITION BEFORE STARTING ENGINE.

ALWAYS PUT THE DEPTH REGULATOR LEVER IN THE TRANSPORT POSITION BEFORE STARTING ENGINE. TINES SHOULD CLEAR THE GROUND.

IMPORTANT

ENGINE IS SHIPPED FROM FACTORY WITHOUT OIL. YOU MUST ADD ENGINE OIL BEFORE STARTING ENGINE.



DANGER

ALWAYS KEEP HANDS AND FEET CLEAR OF ROTATING MACHINE PARTS.

Start-Up

The controls required to start and run the tiller are located on the engine and are marked "choke" and "throttle."

A more detailed description of engine operation and all related precautions and procedures can be found in the engine manufacturer's manual that accompanies each tiller.

Cold Starts

1. Move the choke lever to full choke position.
2. Move the throttle lever to "start".
3. Pull the starting rope out slowly one time and allow to return normally.
4. Pull the starting rope out rapidly, and allow rope to return normally.
5. When engine starts, gradually move choke lever to "no choke" position and increase the throttle speed.

Restarting a Warm Engine

Restarting an engine that is already warm from previous running does not normally require use of the choke.

1. Move the throttle lever to "start" position.
2. Pull the starting rope out rapidly until engine starts. Allow rope to return normally. Repeat until engine starts.
3. Adjust the throttle speed to "high" for best tiller action.

Idle Speed

Use the “low” position on the throttle lever to reduce stress on the engine when tilling is not being performed. Lowering the engine speed to “idle” will help extend the life of the motor, as well as conserve fuel and reduce the noise level of the equipment.

Operating Speed

For normal tilling, set the throttle lever to “fast”.

Shutting Down

To stop the engine at any time, turn the engine ON/OFF switch to the off position. To stop wheels and tines at any time, release the drive safety control levers to neutral position.

Tilling

1. Adjust the depth regulator lever to the desired tilling depth.
2. Move the throttle control to **fast**.
3. Place the tiller in **forward** by pushing down on the drive safety control lever (**FORWARD**) – this will engage the wheels and tines.

NOTE: *You can slow the tiller's forward advance at any time by putting a slight downward pressure on the handlebars. You can stop the tiller by releasing the drive safety control levers to the neutral position.*

Drive Safety Control Levers

Forward Lever

Engages the wheels and tines into forward.

Pushing down the drive safety control lever (**FORWARD**) toward the handlebar engages the wheels and tines. Releasing the lever stops



WARNING

TEMPERATURE OF MUFFLER AND NEAR BY AREAS MAY EXCEED 150° F. AVOID THESE AREAS.

DO NOT MOVE CHOKE CONTROL TO CHOKE TO STOP ENGINE. BACKFIRE OR ENGINE DAMAGE MAY OCCUR.

TO STOP WHEELS AND TINES AT ANY TIME, RELEASE DRIVE SAFETY CONTROL LEVERS TO NEUTRAL POSITION.

ALWAYS RELEASE DRIVE SAFETY CONTROL LEVERS TO NEUTRAL POSITION BEFORE ADJUSTING THE DEPTH OF THE REGULATOR LEVER.



DANGER

ENGINE AND SURROUNDING PARTS BECOME EXTREMELY HOT DURING NORMAL USE AND WILL CAUSE SERIOUS BURNS AND/OR INJURIES IF TOUCHED BEFORE THE ENGINE HAS COOLED.


ALLOW ENGINE TO COOL COMPLETELY BEFORE TOUCHING THESE HOT SURFACES.

IMPORTANT

PRACTICE OPERATING THE CONTROLS AND TILLER WITH TINES OUT OF GROUND BEFORE BEGINNING TO TILL. IT IS IMPORTANT THAT YOU KNOW HOW TO USE THE TILLER PROPERLY, KEEP CONTROL AT ALL TIMES, STOP THE TINES AND WHEELS FROM TURNING AND STOP THE ENGINE IF NECESSARY. IF YOU DO NOT KNOW HOW TO DO THESE THINGS, READ THE CONTROLS ADJUSTMENTS AND SAFETY SECTIONS BEFORE PROCEEDING.

Self-Propelled Cultivator Tiller


the wheels and tines and brings the tiller to a complete stop.

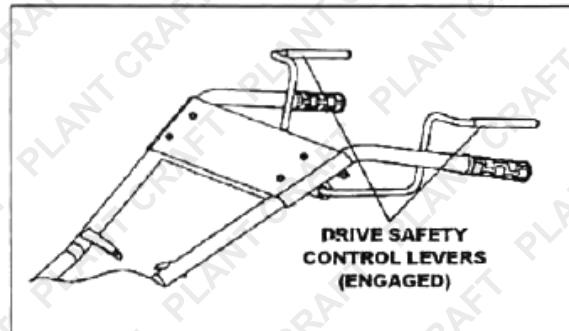

Reverse Lever

Engages the wheels and tines into reverse.

Pulling the drive safety control lever (**REVERSE**) back toward the operator reverses tiller. Releasing the lever stops the wheels and tines.

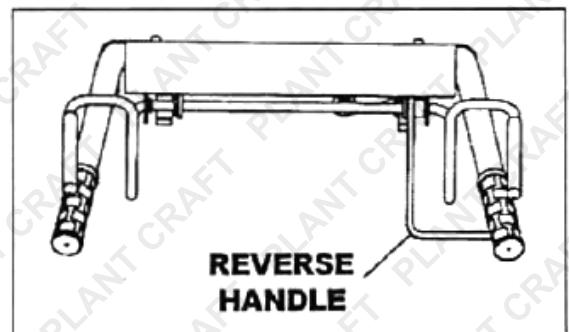

Adjustments

Wheel Lock Pins



Place the wheels in tilling position.

1. Remove the lock pin. Align the hole in the axle with the hole in the wheel hub.
2. Insert the lock pin through the holes, fold the lock pin ring to secure the pin to the axle.
3. Firmly lock the wheel and axle together before tilling.
4. Repeat for the other wheel.



CAUTION

DO NOT OPERATE BOTH "FORWARD" AND "REVERSE" DRIVE SAFETY CONTROL LEVERS AT THE SAME TIME.

THIS INFORMATION IS PROVIDED HERE ONLY TO INTRODUCE THE CONTROLS. DO NOT START THE ENGINE AT THIS TIME. STARTING AND OPERATING INSTRUCTIONS ARE GIVEN ON PAGE **15**. PLEASE READ THIS SECTION AND ALL OPERATING AND SAFETY INSTRUCTIONS BEFORE STARTING YOUR TILLER.

- AS A SAFETY PRECAUTION, THE DRIVE SAFETY CONTROL LEVERS WILL NOT LOCK IN THE FORWARD OR REVERSE POSITION.
- AS A SAFETY PRECAUTION, THE REVERSE DRIVE SAFETY CONTROL LEVER WILL NOT LOCK IN REVERSE.
- TO STOP THE WHEELS AND TINES AT ANYTIME, RELEASE THE DRIVE SAFETY CONTROL LEVERS OR RELEASE THE REVERSE HANDLE.
- DO NOT OPERATE BOTH THE REVERSE AND FORWARD DRIVE SAFETY CONTROL LEVERS AT THE SAME TIME.



WARNING

ENGINE SHOULD BE OFF BEFORE ADJUSTING ANY CONTROLS.


EXTREME CAUTION SHOULD BE USED WHEN OPERATING THE TILLER IN THE REVERSE DIRECTION.

NOTE: Always have both wheel lock pins in or out. Do not operate tiller with only one wheel locked.

To place the wheels in free-wheel position.

1. Remove the lock pin. Slide the wheel inward toward machine.
2. Insert the pin in the axle only.

Wheel should turn freely on axle.

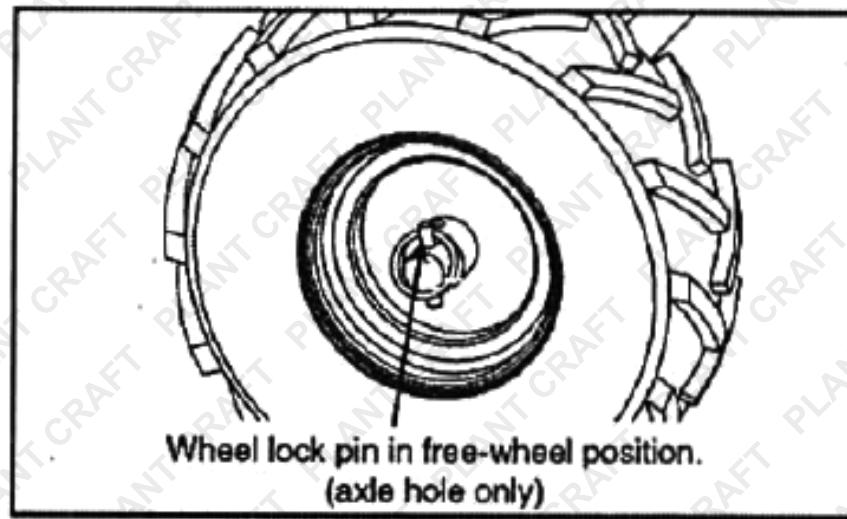


Handlebar Height Adjustment

Adjusts handlebar height.

The ideal height of the handlebar varies with operator height and the depth of tilling. To adjust handlebar height:

1. Unscrew the nuts and remove the top and bottom bolts on each side.
2. Align the handlebar to the desired holes on the lower handlebar mount.
3. Install the bolts and nuts. Retighten.

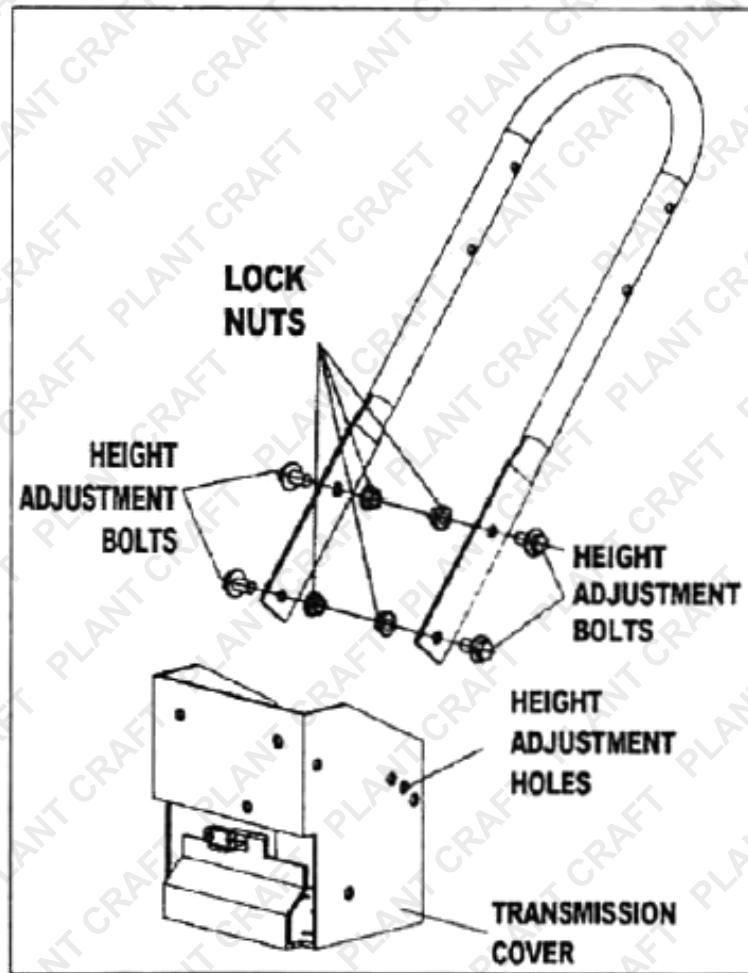

Depth Regulator Lever

Tilling depth is controlled by the height of the depth regulator lever.

To adjust the tilling depth:


1. Remove the detent pin.
2. Raise the depth regulator lever to position the tines at a chosen tilling depth.
3. Align the hole in depth regulator lever with the hole in the depth regulator bracket and replace the detent pin.

Depth Regulator Lever Down = Shallower tilling.

Place the detent pin in the top hole of the depth regulator lever for shallowest tilling.

Depth Regulator Lever Up = Deeper tilling.

Place the detent pin in the bottom hole of the depth regulator lever for deepest tilling.

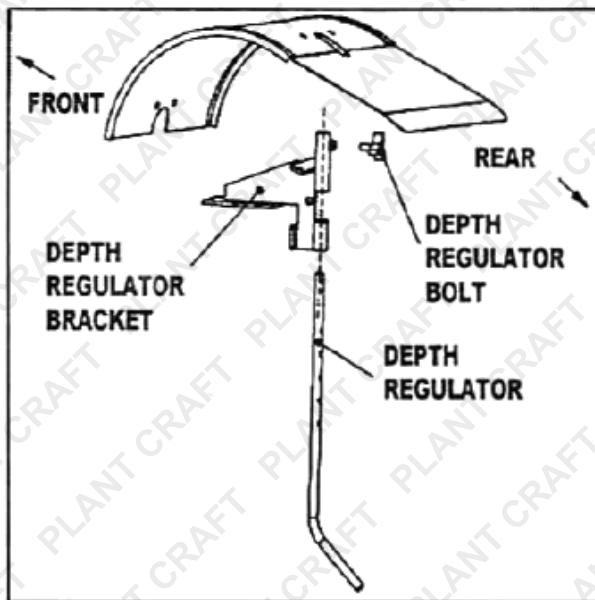

WARNING

DO NOT ADJUST TILLING DEPTH UNLESS DRIVE SAFETY CONTROL LEVERS ARE RELEASED TO NEUTRAL POSITION.

ALWAYS SET THE DEPTH REGULATOR LEVER IN THE TRANSPORT POSITION BEFORE STARTING ENGINE, THAT IS, PLACE THE DETENT PIN IN THE HIGHEST HOLE OF THE DEPTH REGULATOR LEVER.


Belt Tension Adjustment

Proper belt tension is critical for good performance. After $\frac{1}{2}$ hour of operation, all cables may have to be adjusted due to initial stretch. Thereafter, check tension after every 2 hours of operation.

To Increase belt tension:

1. Loosen the upper jam nut. Turn the nut up cable in $1/8$ " increments.
2. Tighten the lower jam nut.
3. Check the adjustment.

This procedure can be repeated until conduit adjustment bolts are fully adjusted. If no more adjustment can be made, belt may have to be replaced.

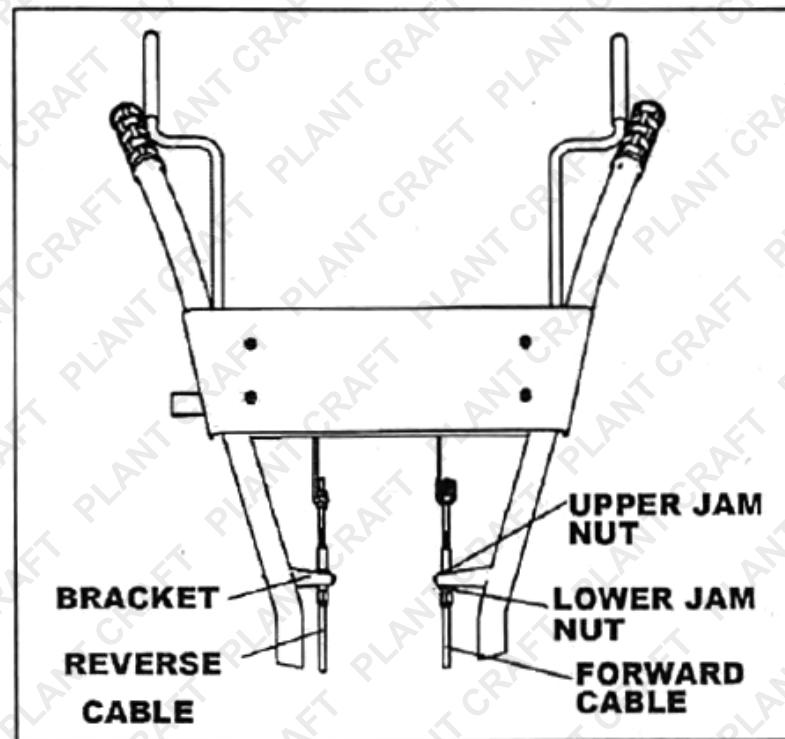

Tilling Tips

The key to a successful tilling is to begin with a shallow cut on the first pass, and then work an inch or two deeper on each successive pass.



WARNING

EXTREME CAUTION MUST BE TAKEN IN SELECTING TILLING DEPTH. IF YOU ATTEMPT TO TILL TOO DEEPLY FOR SOIL CONDITIONS, THAT IS, WITH THE DRAG STAKE IN TOO HIGH A POSITION, LOSS OF CONTROL COULD RESULT.

IF REMOVING MATERIAL FROM THE TINES BY HAND, STOP ENGINE AND REMOVE SPARK PLUG WIRE FIRST.

- Tilling depth will vary with ground conditions.
- When beginning to till in unbroken ground or in extremely hard soil, set the detent pin in the highest hole of the drag stake (follow instructions under Tilling section). This will allow for shallow tilling. With the drag stake in this position, make several light passes over the area to be tilled. Reset for deeper depths with successive passes.
- If the tiller jumps or skids uncontrollably, lower the drag stake by placing the detent pin in a higher hole. This will allow for shallower tilling. Hold firmly to the handlebars to control sudden lurches.
- If weeds, tall grasses, vines, or other materials clog or jam the tines, reverse the tiller to unwind vegetation.

Immediately release the drive control levers if the tines jam or you strike a foreign object. With drive control levers in neutral position, push throttle control to stop position to stop the engine. Disengage the spark plug wire. When tines have stopped, remove foreign objects and check for damage.

Cultivating Tips

If you plan to use your tiller for cultivating:

- Plant rows on 20" – 22" centres for ease of turning.
- Set the depth regulator lever with the detent pin in one of the higher holes. This will allow for shallow cultivation necessary to turn over weeds and break up and aerate the soil.

Maintenance and Storage

Maintenance

Keeping the tiller in top running condition will prolong the tiller's life, and help it obtain optimum performance whenever you wish to till your garden.

To help you properly care for the rototiller, the following pages include a maintenance schedule, routine inspection procedures, and simple maintenance procedures using basic hand tools. Other service tasks that are more difficult, or require special tools, are best handled by professionals and are normally performed by a qualified mechanic.

- Good maintenance is your responsibility, poor maintenance is an invitation to trouble.
 - Follow good shop practices.
 - Keep service area clean and dry.
 - Be sure electrical outlets and tools are properly grounded.
 - Use adequate light for the job at hand.
- Make sure that the engine is off before you begin any maintenance or repairs. This will eliminate several potential hazards:

Carbon monoxide poisoning from engine exhaust.

- Be sure that there is adequate ventilation whenever you operate the engine.
- Never operate the engine in a closed building.

Burns from hot parts.

- Let the engine and exhaust system cool before touching.

Injury from moving parts.

- Do not run the engine unless instructed to do so.
- Read the instructions before you begin, and make sure you have the tools and skills required.
- To reduce the possibility of fire or explosion, be careful when working around gasoline. Use only a non-flammable solvent, not gasoline, to clean parts. Keep cigarettes, sparks and flames away from all fuel-related parts.
- Always use personal protection devices such as eye, hand and hearing protectors when performing any service or maintenance.
- Frequently check tiller tines. They should be free of nicks and cracks and securely fastened in place.
- Periodically tighten all bolts, nuts, screws, and check that all pins are properly installed to make certain unit is safe to operate.
- When completing maintenance or service, make sure all safety guards and devices are installed before using the rototiller.

Self-Propelled Cultivator Tiller

- Where replacement parts are necessary for periodic maintenance and servicing, use only new, original replacement parts or their equivalents for repair and replacement to restore your equipment to original specifications.
- The manufacturer and/or distributor will not be responsible for injuries or damages caused by use of unapproved parts and/or accessories.
- A first aid kit should be kept readily accessible while performing maintenance on this equipment.

Maintenance Schedule

Your tiller has been designed and produced by the industry's leading manufacturer of outdoor power equipment to provide you with years of reliable operation.

Keeping your tiller in top running condition will prolong its life, and help you obtain optimum performance.

Please read this normal care schedule, and note the recommended care operating intervals to extend the life of your unit.

Maintenance Operation	Each Use	First Month or 20 Hours	Every 3 months or 50 Hours	Every 6 months or 100 Hours	Every Year of 300 Hours
Drive Belt Tension	Check	✓			
	Change	✓			
Engine Oil	Check level	✓			
	Change		✓	✓	
Air filter	Check	✓			
	Clean		✓ ¹	✓ ¹	
	Replace				✓
Tiller Transmission Grease	Check	✓			
	Replace		✓		
Tire Pressure	Check	✓			
Tine Shaft	Clean	✓			
Wheel Axle Shaft	Lubricate		✓		

¹ Service more frequently when used in dusty areas.

Servicing the Tiller

The following information will help you make the necessary checks and perform the procedures required to follow the normal care recommendations made for your tiller unit.

If you prefer, your local authorised dealer can make these checks and perform the required procedures for you.

Change Forward/Reverse Belt

1. Turn off the engine. Engine must be cool.
2. Remove the spark plug wire and secure it from the spark plug.
3. Remove the belt guard.
 - Remove the forward belt from the forward engine pulley:
 - Gently pull the engine recoil rope to rotate the pulley.
 - With the pulley turning, force the forward belt out of the V-groove.
 - Slide the belt free of the engine pulley.
 - Pull the forward belt down and out of the way.
 - Remove the reverse belt from the reverse engine pulley:
 - Gently pull the engine recoil rope to rotate the pulley.
 - With the pulley turning, force the reverse belt out of the V-groove.
 - Slide the belt free of engine pulleys and reverse belt guides.
 - Pull belt down and away from transmission pulley.
 - Install new reverse belt:
 - Thread belt up from bottom.
 - Place belt around transmission pulley in groove.
 - Place belt under reverse belt guides.
 - Gently pull engine recoil rope while forcing the belt over the edge of the

! WARNING

To prevent accidental starting:



Engine must be turned off and cooled down. Spark plug wire must be removed and secured from spark plug before checking and adjusting engine or equipment.

! CAUTION

DO NOT OPERATE TILLER BEFORE READING THE ENGINE MANUAL PROVIDED IN THE PARTS PACKET.

! WARNING

TEMPERATURE OF MUFFLER AND NEAR BY AREAS MAY EXCEED 150° F. AVOID THESE AREAS.

IMPORTANT

ENGINE CAN OVERHEAT AND BECOME DAMAGED IF DEBRIS BLOCKS THE COOLING SYSTEM OR ROTATING SCREEN.


NEVER RUN ENGINE WITHOUT COMPLETE AIR CLEANER INSTALLED ON ENGINE.

Self-Propelled Cultivator Tiller

engine pulley into the V-groove.

- Install new forward belt:
 - Place forward belt in transmission pulley groove.
 - Gently pull the engine recoil rope to rotate the pulley while forcing the forward belt into the V-groove.

4. Replace belt guard.
5. Attach spark plug wire.

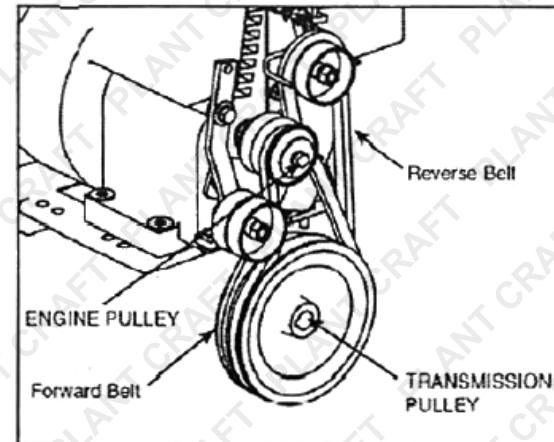

Engine Maintenance

Refer to the engine manual included in your parts packet for information on engine maintenance. Your engine manual provides detailed information and a maintenance schedule for performing the following tasks:

1. Check oil level before each use or after every 8 hours of operation.
2. Change oil after first 5-8 hours of operation. Change oil while engine is warm. Refill with new oil of recommended grade.
3. Check spark plug yearly or every 100 hours of operation.
4. Service air cleaner.
5. Keep engine and parts clean.
6. Check engine and equipment often for loose nuts and bolts, keep these items tightened.

Check or Fill the Engine Crankcase

1. Add oil according to engine manual. Do not overfill. Use a clean, high quality detergent oil. Do not mix oil with gasoline. Oil level must be full. Check the oil level by removing oil fill plug. Oil level should be up to the bottom of the fill plug opening.
2. Always check oil level before starting engine. Refer to engine manual for capacity and type of oil to use.

IMPORTANT

ENGINE IS SHIPPED FROM FACTORY WITHOUT OIL. YOU MUST ADD ENGINE OIL BEFORE STARTING ENGINE.


Check Tiller Transmission Grease

Check the grease level annually. To check the grease level:

1. Move the tiller to level ground.
2. Remove the grease level dipstick located between the handlebar mounts on the engine mount. If the grease level couldn't touch the dipstick, please re-fill the grease container.

Self-Propelled Cultivator Tiller

3. Replace the grease level dipstick in the filler hole.
4. Note that the front wheel transmission and rear tine transmission have one common reservoir. When you add to the front transmission, you must wait for a short period of time for the grease to flow rearward and equalize in both front and rear. The dipstick will read correctly on level ground for both gear units.

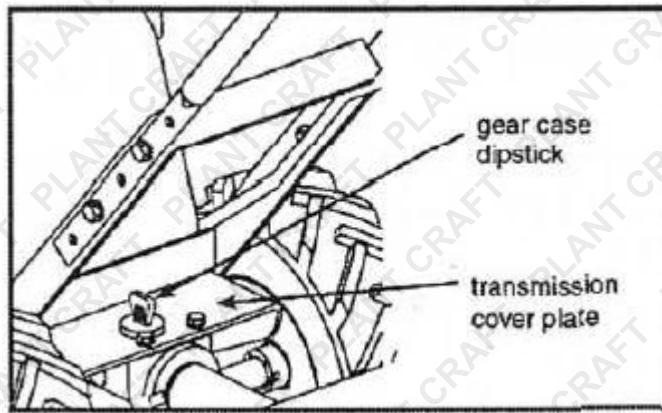**IMPORTANT**

TILLER TRANSMISSIONS ARE SHIPPED FROM FACTORY WITH THE PROPER AMOUNT OF LIQUID GREASE.

WHEN REPLACING GREASE, THE TILLER TRANSMISSION HOLDS 18 – 22 OUNCES. DO NOT OVERFILL.

Check Tire Pressure

Recommended tire pressure is 20 PSI. If tires do not have equal pressure, tiller will pull to one side.

Lubrication

Proper lubrication of moving mechanical parts is critical for proper care and maintenance. Oil the moving parts shown at 10 hour intervals using a 30 weight oil.

Clean Tine Axle Shaft

1. Turn off the engine. Engine must be cool.
2. Remove the spark plug wire and secure it from spark plug.
3. Tip the tiller forward. Block the tiller in position so that it rests on the engine mount and the tines are exposed.
4. Remove all vegetation, string, wire, and other material that may have accumulated on the axle between the inside set of tines and the seal on the transmission housing.
5. Tip the tiller back to a level position.
6. Replace spark plug wire.

Storage

Preparation for Storage

**WARNING**

DO NOT STORE TILLER IN AN UNVENTILATED AREA WHERE FUEL FUMES MAY REACH FLAME, SPARKS, PILOT LIGHTS OR AN IGNITED OBJECT.

DRAIN FUEL OUTDOORS AWAY FROM ANY IGNITION SOURCES. USE ONLY APPROVED FUEL CONTAINERS.

Follow the steps below to prepare your tiller for storage. Read your engine manual for detailed instructions on preparing the engine for storage.

1. Protect the wheels and axles from rust:
 - Remove the lock pin and slide wheel off the hub.
 - Coat the axles lightly with axle grease.
 - Slide the wheel back on the hub and insert the lock pin.
2. Drain the fuel system completely following the engine manufacturer's instructions or add fuel stabilizer to prevent fuel from gumming up during extended storage period.
3. While engine is still warm, drain the oil from the engine. Refill with fresh oil of the recommended grade.
4. Clean external surfaces, engine and cooling fan.
5. Remove spark plug, pour one ounce of SAE 30 oil into spark plug hole.
6. Plug the hole and pull the starter cord slowly to distribute oil evenly in cylinder head area.
7. Reinstall spark plug.
8. Transport unit to a suitable storage location. If you have chosen to use a fuel stabilizer and have not drained the fuel system, follow all safety instructions storage precautions in this manual to prevent the possibility of fire from the ignition of gasoline fumes. Remember, gasoline fumes can travel to distant sources of ignition and can ignite, causing risk of explosion and fire.
9. If there is any possibility of unauthorized use or tampering, remove the spark plug and store it in a safe place before storing the rototiller unit. Be sure to plug the spark plug hole to prevent foreign material from entering.

Troubleshooting and Repair

Troubleshooting Guide

While normal care and routine maintenance will extend the life of your tiller, prolonged or constant use may eventually require that service be performed to allow it to continue operating properly. The troubleshooting guide below lists the most common problems, causes and remedies.

Problem	Remedy / Action
Engine will not start	<ul style="list-style-type: none"> ▪ Add gas to gas tank. ▪ Connect spark plug wire to spark plug. ▪ Throttle must be positioned at choke for a cold start.
Engine is running roughly	<ul style="list-style-type: none"> ▪ Clean or replace the air cleaner.
Engine is hard to start	<ul style="list-style-type: none"> ▪ Drain old fuel and replace with fresh fuel. Use gas stabilizer at the end of season. ▪ Make sure that the spark plug wire is securely attached to the spark plug. ▪ Drive safety control levers must be released to neutral position to start the engine.
Engine lacks power	<ul style="list-style-type: none"> ▪ Raise the tines for shallow tilling by lowering the depth regulator lever. ▪ Remove and clean the fuel tank. ▪ Clean or replace the air cleaner. ▪ Improper carburettor adjustment; take it to an authorised engine service centre. ▪ Replace the spark plug and adjust the gap. ▪ Drain and refill the gas tank and the carburettor.
Engine will not stop when the throttle control is positioned at stop	<ul style="list-style-type: none"> ▪ See the engine manual to check and adjust the throttle linkage.
Tiller moves forward during starting	<ul style="list-style-type: none"> ▪ Drive safety control levers must be released to neutral position to start the engine.
Tiller is difficult to control when tilling (machine jumps or lurches forward)	<ul style="list-style-type: none"> ▪ Lock the wheels in tilling position. ▪ Raise the tines for shallower tilling by lowering the depth regulator lever.
Tines turn, wheels do not turn	<ul style="list-style-type: none"> ▪ Lock the wheels in tilling position. ▪ Internal transmission failure, please see your dealer.

Self-Propelled Cultivator Tiller

Problem	Remedy / Action
Belts squeal when in neutral and/or reverse	<ul style="list-style-type: none"> ▪ Adjust the forward belt guide: <ul style="list-style-type: none"> – Turn the engine off and allow the muffler to cool. – Disconnect the spark plug wire and secure it from the spark plug. – Remove the belt guard. – Pull down on the drive safety control levers. – Manually bend forward the belt guide and the belt. – Replace the belt guard and the spark plug wire.
Belts squeal while in forward mode	<ul style="list-style-type: none"> ▪ Adjust the tabs on the reverse belt guide. <ul style="list-style-type: none"> – Turn the engine off and allow the muffler to cool. – Disconnect the spark plug wire and secure it from the spark plug. – Release the drive safety control levers to neutral position. – Remove the belt guard. – Adjust the tabs of the reverse belt guide; while the drive safety control levers are released, bend the metal tabs on the reverse belt guide to 1/64 inch or less clearance from the reverse belt. – Replace the belt guard and the spark plug wire.
Excessive heat build-up in transmission/tine area during tilling	<ul style="list-style-type: none"> ▪ Remove vegetation by following the instructions in Clean Tine Axle Shaft of Normal care section. ▪ FOLLOW ALL SAFETY INSTRUCTIONS ▪ Check the transmission fluid and fill if needed.

Specifications

Engine Type	Briggs & Stratton 750 Series - 4 Stroke
Displacement	163cc
Power Output	5.5hp/4.0kW
Fuel Type	Regular Unleaded 95 +RON
Fuel Capacity	4.0L
Oil Capacity	0.7L
Bore/Stroke	6.83cm / 5.59cm
Transmission	Forward / Reverse
Tyre Size	12"
Tilling Width	700mm
Tilling Depth	Up to 350mm
Walk Speed	4kph
Tiller Dimensions (L x W x H)	1400 x 480 x 600mm
Package Size (L x W x H)	260 x 1070 x 340mm
Weight	70 kg



Some experts believe the incorrect or prolonged use of almost any product could cause serious injury or death. For information that may reduce your risk of serious injury or death consult the points below and additionally, the information available at www.datastreamserver.com/safety

- Consult all documentation, packaging and product labelling before use. Note that some products feature online documentation which should be printed and kept with the product.
- Check product for loose / broken / damaged / missing parts, wear or leaks (if applicable) before each use. Never use a product with loose / broken / damaged / missing parts, wear or leaks (if applicable).
- Products must be inspected and serviced (if applicable) by a qualified specialist every 6 months assuming average residential use by a person of average weight and strength, above average technical aptitude, on a property matching average metropolitan specification. Intended use outside these guidelines could indicate the product is not suitable for intended use or may require more regular inspection or servicing.
- Ensure all possible users of the product have completed an industry recognised training course before being given access to the product.

- The product has been supplied by a general merchandise retailer that may not be familiar with your specific application or your description of the application. Be sure to attain third party approval for your application from a qualified specialist before use regardless of prior assurances by the retailer or its representatives.
- This product is not intended for use where fail-safe operation is required. As with any product (take an automobile, aircraft, computer or ball point pen for example) there is always a small chance of a technical issue that needs to be repaired or may require replacement of the product or a part. If the possibility of such failure and the associated time it takes to rectify could in any situation inconvenience the user, business or employee or could financially affect the user, business or employee then the product is not suitable for your requirements. This product is not for use where incorrect operation or a failure of any kind, including but not limited to a condition requiring product return, replacement, service by a technician or replacement of parts could cause a financial loss, loss of employee time or an inconvenience requiring compensation.
- If this item has been purchased in error considering the points above simply contact the retailer directly for details of their returns policies if required.