




18 ft. TELESCOPING WAND INSTRUCTION MANUAL

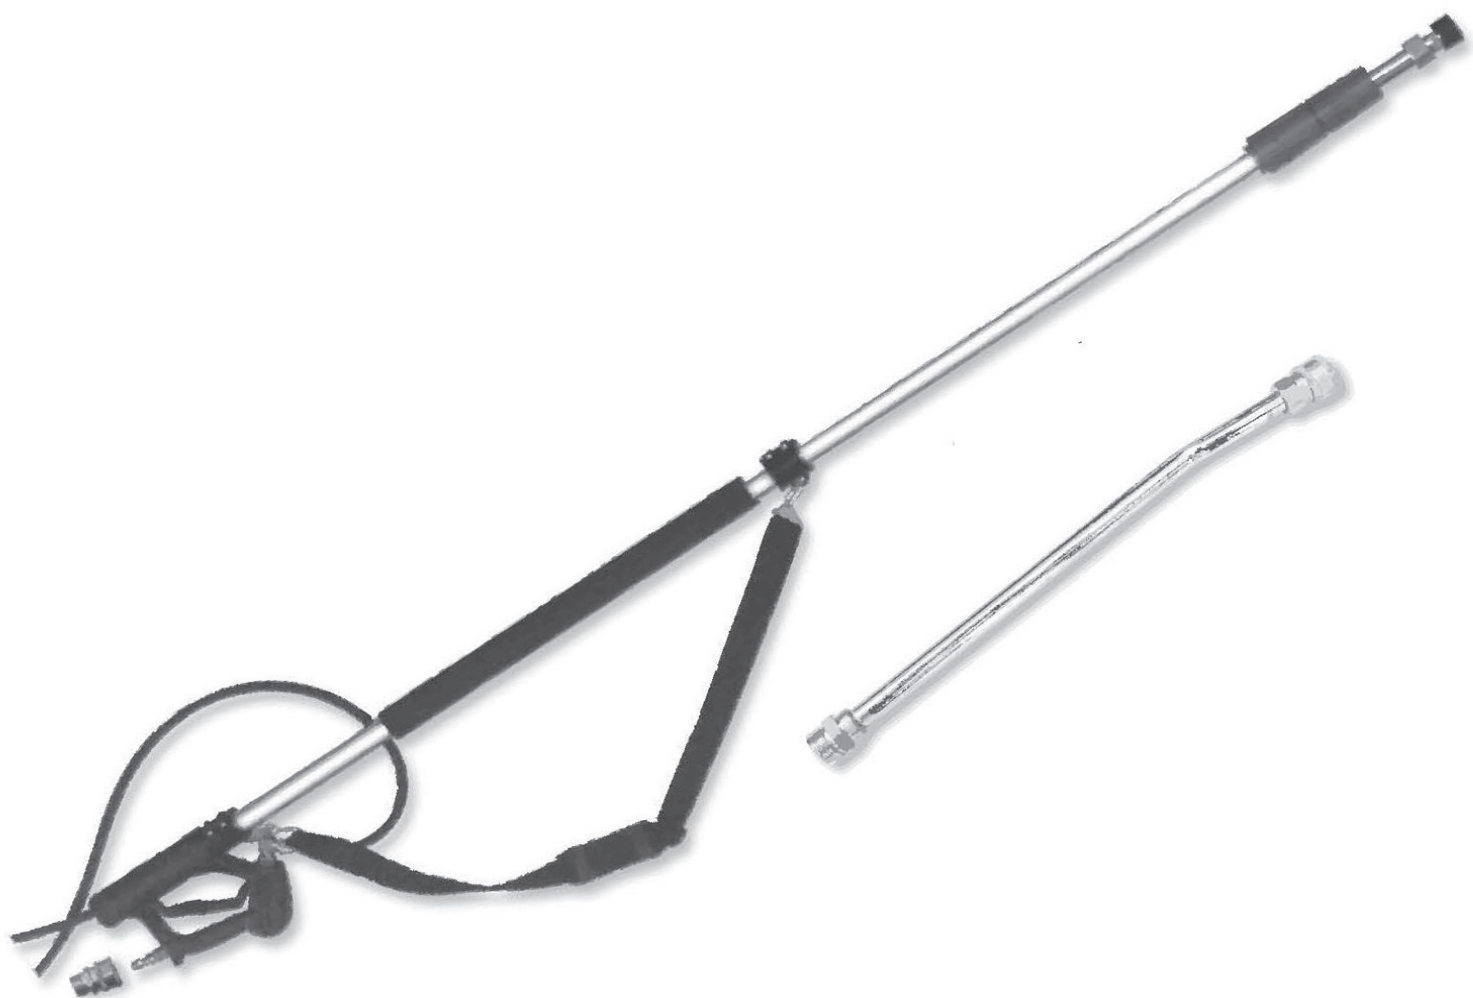

**5,5 m Varilla extensible
Manual de instrucciones**


✓N19071

18 ft. Telescoping Wand

Varilla extensible de 5,5 m (página 4)

PACKAGE CONTENTS

Description	Quantity
17 ft. Telescoping Wand	1
15 in. Extension Wand	1
Adaptor Hose-to-gun	1
Black Strap	1

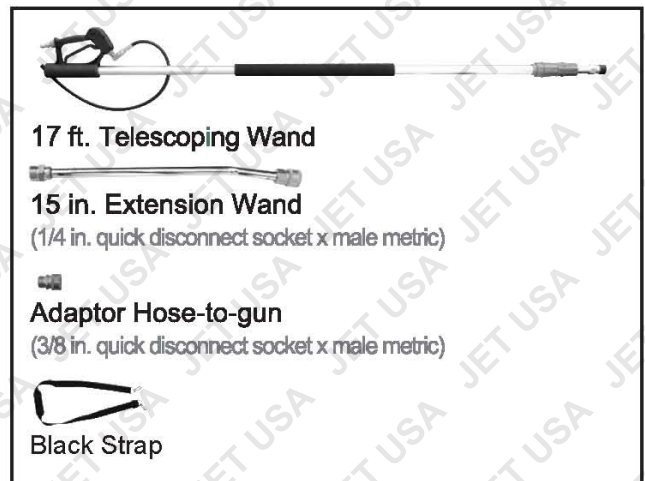

⚠ WARNINGS AND CAUTIONS

WARNING = indicates potentially hazardous situation which if not avoided could result in death or serious injury.

- Beware of overhead power lines. Contacting these lines with the long wand may result in electrocution, injury, or even death.
- Always shut down pressure washer / water supply and depressurize before removing or cleaning accessories.
- Wear Safety glasses when operating unit.
- Never point spray nozzles or guns at humans or animals. Never place any body part in the water stream.
- Serious injury can result from the high pressure discharge produced by pressure washers.
- To prevent accidental discharge from the gun always use the trigger lock when you've finished spraying.

CAUTION = indicates potentially hazardous situation which if not avoided may result in minor or moderate injury.

- Fits gas and electric pressure washers rated up to 4000 PSI.
- Make sure all connections are secure. Hold the gun securely while starting pressure washer unit.
- When operating pressure washer always stand on a permanent, stable surface. Do not stand on ladders, chairs, etc.
- Before changing out tips, make sure the pressure washer has been turned off and depressurized. The collar on the quick disconnect socket will snap back into its original forward locking position when tip is inserted correctly.
- Do not fully extend the telescoping wand. A minimum of 6 inches must remain inside each section of the wand for stability.

PREPARATION

Before beginning assembly, installation or operation of product, make sure all parts are present. Compare parts with package contents list and diagram above. If any part is missing or damaged, do not attempt to assemble, install or operate the product. Contact customer service for replacement parts.

- Estimated Assembly Time: 10 minutes
- Tools Required for Assembly: 1 in. Adjustable Wrench and pipe thread tape (not included)

ASSEMBLY INSTRUCTIONS

1. HOSE CONNECTION

Apply pipe tape to male threads on ends of hose assembly. Thread the end of the hose assembly (of telescoping wand) into gun elbow and tighten with adjustable wrench.

2. WAND & EXTENSION WAND CONNECTION

Screw female metric (of telescoping wand) onto male metric end (of extension wand) and hand tighten.

3. QUICK DISCONNECT SPRAY TIP CONNECTION

Pull back on socket collar and insert plug, or pull out to remove, then release collar.

Spray tips are not supplied with this unit. These are normally interchangeable with your existing pressure washer. Alternatively, please contact your supplier for availability.



Fig. 1



Fig. 2

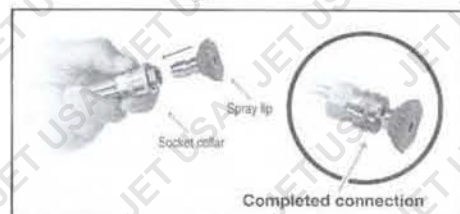


Fig. 3

INSTALLATION INSTRUCTIONS

choose one: Step 4. Gun & Quick Disconnect Hose Connection or Step 5. Gun & Metric Hose Connection.

4. GUN & QUICK DISCONNECT HOSE CONNECTION

Pull back on socket collar and insert plug, or pull out to remove, then release collar.



Fig. 4

5. GUN & METRIC HOSE CONNECTION

Insert the plug into the socket. Next screw female metric (of hose) onto male metric end (of adaptor) and hand tighten.



Fig. 5

OPERATION INSTRUCTIONS

6. ADJUST WAND LENGTH

Twist grey knobs to unlock and then pull to extend to desired length. Turn knobs in opposite directions to retighten.

IMPORTANT: Overtightening the knobs can cause damage.



Fig. 6

7. INSTALL THE STRAP

Connect the 2 hooks (on the strap) to the 2 holes (on the wand).



Fig. 7

OPERATING INSTRUCTIONS continued

8. CLEANING SURFACE

Put the strap on one shoulder to reduce load during usage. Grasp the gun firmly with one hand and place the other hand on the long wand. Use a side to side motion to clean desired surface.



Fig. 8

CARE AND MAINTENANCE

To promote longer life of accessories, run clean, fresh water through them, and then turn off pressure washer and water supply. Depressurize by squeezing the gun trigger until all of the water has been drained out of the unit.

Accessories can now be disconnected safely for storage in a cool, dark area. If debris exists after connection, clean before storing.

TROUBLESHOOTING

Problem	Possible Cause	Corrective action
Connections leak	1. Loose connections 2. Sealant Worn 3. O-ring is worn	1. Retighten fittings 2. Reapply pipe tape 3. Replace o-ring
Unit won't spray	1. Unit power / water supply off 2. Unit is clogged	1. Consult owners manual 2. Reverse flush unit with water
Grey knobs won't turn	1. Overtightened	1. Spray lubricant on threads on inside of grey knobs ("Tool Free" telescoping mechanism)

WARRANTY


ONE YEAR LIMITED WARRANTY.

The manufacturer warrants this product against defects in materials and workmanship for one (1) year from date of purchase. If within this period a product is found to be defective in material or workmanship, the product must be returned with a copy of the bill of sale as proof of purchase to the place of purchase. The manufacturer will, at its option, repair, replace or refund the purchase price to the consumer. This warranty does not cover the product becoming defective due to misuse, accidental damage, improper handling and/or installation and specifically excludes liability for direct, incidental or consequential damages. As some states do not allow exclusions or limitations on how long an implied warranty lasts, the above exclusion and limitation may not apply to you. This warranty gives you specific rights and you may also have other rights which vary from state to state.

REPLACEMENT PARTS LIST

For replacement parts, call our customer service department at 1-800-444-6742, 8 a.m.-6 p.m., EST, Monday-Thursday; 8 a.m.-5 p.m., EST, Friday.

Part #	Description
1.	17 ft. Telescoping Wand
2.	15 in. Extension Wand
3.	Adaptor Hose-to-gun
4.	Black Strap

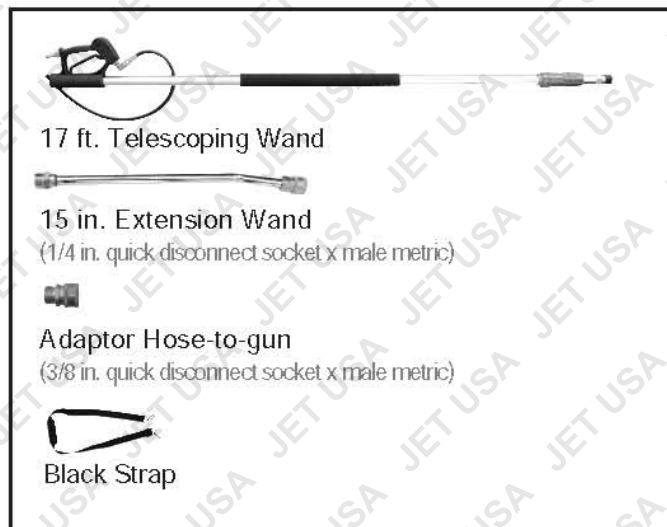

Varilla extensible de 5,5 m

CONTENIDO DEL PAQUETE

Descripción	Cantidad
Varilla extensible de 5,2 m	1
Varilla de extensión de 38 cm	1
Adaptador - Manguera a pistola	1
Correa negro	1



ADVERTENCIA / PRECAUCIONES

ADVERTENCIA = Indica una situación potencialmente peligrosa que de no evitarse puede dar lugar a la muerte o a lesiones serias.

- Tenga cuidado con las líneas eléctricas. Entrar en contacto con estas líneas y la varilla puede dar lugar a electrocución, lesiones o incluso la muerte.
- Siempre apague la lavadora a presión, el suministro de agua y despresurice antes de quitar o limpiar los accesorios.
- Use gafas de seguridad cuando opere la unidad.
- Nunca apunte las boquillas de aspersión o la pistola hacia humanos o animales. Nunca exponga cualquier parte del cuerpo al chorro de agua.
- Serias lesiones pueden resultar de la descarga de alta presión producida por las lavadoras a presión.
- Para evitar descargas accidentales de la pistola, coloque siempre el seguro del gatillo cuando haya terminado de rociar.

PRECAUCIÓN = Indica una situación potencialmente peligrosa que de no evitarse puede dar lugar a lesiones menores o moderadas.

- Se adapta a lavadoras a presión de gas y eléctricas clasificadas hasta 3000 PSI.
- Verifique que todas las conexiones estén aseguradas. Sujete la pistola con firmeza al arrancar la unidad de lavado a presión.
- Cuando opere la lavadora a presión, párese siempre sobre una superficie con estabilidad permanente. No se pare sobre escaleras, sillas, etc.
- Antes de cambiar las puntas, asegúrese que la lavadora a presión este apagada y despresurizada. El cuello del socket de desconectado rápido encajará de nuevo en su posición de fijación delantera original.
- No extienda completamente la varilla telescópica. Un mínimo de 15.24 cm debe quedar dentro de cada sección de la varilla para que quede estable.

PREPARACIÓN

Asegúrese de tener todas las piezas presentes antes de empezar el ensamble, la instalación u operación del equipo. Compare las piezas con la lista de contenido del paquete y con el diagrama de arriba. Si cualquier pieza falta o está dañada, no intente ensamblar, instalar u operar el producto. Contacte a servicio al cliente para el reemplazo de piezas.

- Tiempo estimado de ensamble: aproximadamente 10 minutos.
- Herramientas necesarias para el ensamble: 0-1 en. El hilo ajustable de la Llave Inglesa y el tubo graba (no incluyó)



Varilla extensible de 5,2 m



Varilla de extensión de 38 cm

(socket de desconectado rápido de 0,635 cm x métrico macho)



Adaptador - Manguera a pistola

(socket de desconectado rápido de 0,952 cm x métrico macho)



Correa negro

INSTRUCCIONES DE ENSAMBLAJE

1. CONEXIÓN DE LA MANGUERA

Aplique cinta para tubería a la rosca macho en el extremo del montaje de la manguera. Enrosque el extremo del montaje de la manguera (varilla telescópica) al codo de la pistola y apriete con una llave inglesa.

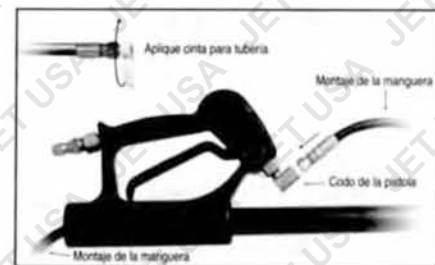


Fig. 1

2. CONEXIÓN DE LA VARILLA A LA VARILLA DE EXTENSIÓN

Luego, enrosque el métrico hembra (varilla telescópica) en el extremo métrico macho (de la varilla de extensión) y apriete con la mano.



Fig. 2

3. CONEXIÓN DE LA PUNTA DE ASPERSIÓN DE DESCONECTADO RÁPIDO

Tire del cuello del socket e inserte la espiga, o tire hacia afuera para quitarla, luego suelte el cuello.



Fig. 3

INSTRUCCIONES PARA LA INSTALACIÓN

escoja cualquiera de las siguientes conexiones: Paso 4. Conexión de desconectado rápido de la manguera y la pistola o Paso 5. Conexión métrica de la manguera y la pistola

4. CONEXIÓN DE DESCONECTADO RÁPIDO DE LA MANGUERA Y LA PISTOLA

Tire del cuello del socket e inserte la espiga, o tire hacia afuera para quitarla luego suelte el cuello.



Fig. 4

5. CONEXIÓN DE MANGUERA MÉTRICA Y PISTOLA

Luego, enrosque el métrico hembra (de la manguera) en el extremo métrico macho (del adaptador y apriete con la mano.



Fig. 5

INSTRUCCIONES DE OPERACIÓN

6. AJUSTE LA LONGITUD DE LA VARILLA

Déle vuelta a las perillas grises para aflojarías y luego jale la varilla para extenderla a la longitud deseada. Déle vuelta a las perillas hacia la dirección opuesta para volverlas a fijar. Apretar las perillas demasiado puede dañarlas.

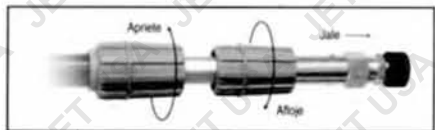


Fig. 6

7. INSTALL THE STRAP

Connect the 2 hooks (on the strap) to the 2 holes (on the wand).



Fig. 7

INSTRUCCIONES DE OPERACIÓN continua

8. LIMPIANDO LA SUPERFICIE

Put the strap on one shoulder to reduce load during usage. Grasp the gun firmly with one hand and place the other hand on the long wand. Use a side to side motion to clean desired surface.



Fig. 8

CUIDADO Y MANTENIMIENTO

- Para prolongar la vida útil de los accesorios, enjuáguelos con un chorro de agua fresca y limpia. Luego, apague la lavadora a presión y suministro de agua. Despresurice al apretar el gatillo de la pistola hasta que toda el agua haya sido drenada fuera de la unidad. Una vez drenada, los accesorios ya pueden ser desconectados de manera segura para guardarse en un lugar fresco y oscuro. Si existen desechos después de desconectarse, vuelva a limpiarlos bien antes de almacenarse.

RESOLUCIÓN DE PROBLEMAS

Problemas	Causa posible	Acción correctiva
Las conexiones gotean	1. Afloje las conexiones 2. El sellador está desgastado 3. El anillo O está desgastado	1. Vuelva a apretar las piezas 2. Vuelva a aplicar cinta de tubería 3. Remplace el anillo O
La unidad no rocía	1. El suministro eléctrico de la unidad y el suministro de agua está apagados 2. La unidad está obstruida	1. Consulte el manual del propietario. 2. Invierta la unidad y límpiela a chorro de aire o de agua.
Las perillas grises no se pueden aflojar	1. Demasiado apretado	1. Rocíe lubricante por la parte interior de las roscas de las perillas grises (Mecanismo extensible "Too! Free")


GARANTÍA:

GARANTIA LIMITADA DE 1 AÑO

Distribuidor garantiza que este producto no presentará defectos en los materiales y en la mano de obra por un (1) año a partir de la fecha de compra. Si encuentra defectos en los materiales o en la mano de obra durante el período de garantía establecido, deberá devolver el producto al lugar donde lo compró y presentar una copia del recibo de compra original como comprobante de la compra. El distribuidor, a su elección, reparará o reemplazará las piezas defectuosas, o reembolsará al comprador el monto original de la compra. Esta garantía no cubre ningún producto que no funcione debido al uso indebido, a daños accidentales y al uso y a la instalación inadecuados, y excluye la responsabilidad por daños directos, incidentales o causales. Algunos estados no permiten exclusiones o limitaciones en las garantías implícitas. Por lo tanto, las exclusiones y limitaciones y las limitaciones anteriores pueden no ser aplicables en su caso. Esta garantía le proporciona derechos legales específicos. Además, usted tiene otros derechos que varían para cada estado.

LISTA DE PIEZAS DE REEMPLAZO

Pieza	Descripción
1.	Varilla extensible de 5,2 m
2.	Varilla de extensión de 38 cm
3.	Adaptador - Manguera a pistola
4.	Correa negro

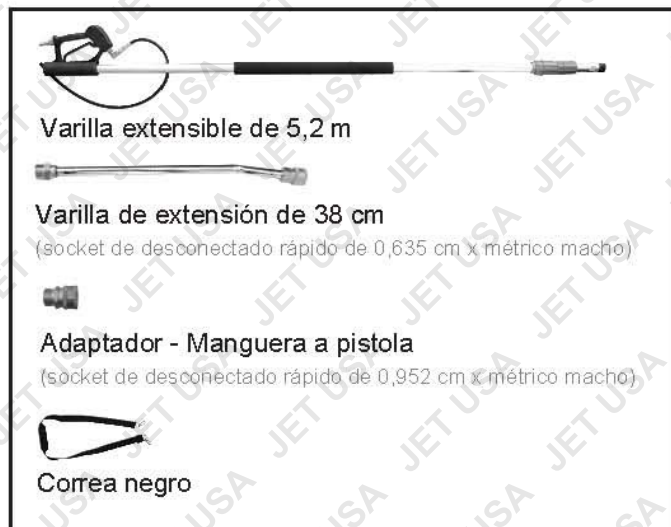



Some experts believe the incorrect or prolonged use of almost any product could cause serious injury or death. For information that may reduce your risk of serious injury or death consult the points below and additionally, the information available at www.datastreamserver.com/safety

- Consult all documentation, packaging and product labelling before use. Note that some products feature online documentation which should be printed and kept with the product.
- Check product for loose / broken / damaged / missing parts, wear or leaks (if applicable) before each use. Never use a product with loose / broken / damaged / missing parts, wear or leaks (if applicable).
- Products must be inspected and serviced (if applicable) by a qualified specialist every 6 months assuming average residential use by a person of average weight and strength, above average technical aptitude, on a property matching average metropolitan specification. Intended use outside these guidelines could indicate the product is not suitable for intended use or may require more regular inspection or servicing.
- Ensure all possible users of the product have completed an industry recognised training course before being given access to the product.

- The product has been supplied by a general merchandise retailer that may not be familiar with your specific application or your description of the application. Be sure to attain third party approval for your application from a qualified specialist before use regardless of prior assurances by the retailer or its representatives.
- This product is not intended for use where fail-safe operation is required. As with any product (take an automobile, aircraft, computer or ball point pen for example) there is always a small chance of a technical issue that needs to be repaired or may require replacement of the product or a part. If the possibility of such failure and the associated time it takes to rectify could in any situation inconvenience the user, business or employee or could financially affect the user, business or employee then the product is not suitable for your requirements. This product is not for use where incorrect operation or a failure of any kind, including but not limited to a condition requiring product return, replacement, service by a technician or replacement of parts could cause a financial loss, loss of employee time or an inconvenience requiring compensation.
- If this item has been purchased in error considering the points above simply contact the retailer directly for details of their returns policies if required.