



*Product will vary to above image*

# Heated Towel Rack

## User Manual

[Revision 3.0 October 2018]

---

READ THIS MANUAL CAREFULLY BEFORE USE – FAILURE TO DO SO MAY RESULT IN INJURY, PROPERTY DAMAGE AND MAY VOID WARRANTY. • KEEP THIS MANUAL FOR FUTURE REFERENCE. • Products covered by this manual may vary in appearance, assembly, inclusions, specifications, description and packaging.

---

# Table of Contents

**Safety ..... 1**

**Included Items..... 1**




**Installation ..... 2**




**Specifications ..... 3**

# Safety

- This heated towel rack is not intended to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given proper supervision or instructions concerning the use of the heated towel rack by a person responsible for their safety. Children should be supervised to ensure that they do not play with the heated towel rack.
- In order to avoid any potential hazards for very young children, this heated towel rack should be installed so that the lowest heated rail is at least 600mm above the floor.
- Make sure to clean the heated towel rack first before using it.
- Wipe the surface clean with a soft, damp cloth. Never use abrasive cleaners on the heated towel rack.
- Please wipe the heated towel rack with a dry cloth after an extended time without using it.
- Make sure to use the right plug and power rating according to the heated towel rack's instruction.
- It is recommended that a professional electrician do the electrical works. Do not attempt to adjust the power and/or cable while the heated towel rack is still turned on!

# Included Items

Parts	Appearance	Description	Qty.
A		Towel rack	1
B		Masonry wall plug	4
C		Long screw	4


Parts	Appearance	Description	Qty.
D		5mm small screw	4
E		Wall base	4
F		Hexagon spanner	1

# Installation


## Tools required (not supplied):




Large, flat  
screwdriver



Impact drill




Hammer





Tape measure


1. Place the rack on the wall of where you'd like to install it. Mark out (either by drawing around the wall attachments or draw lines with a level) where the holes are to be drilled.

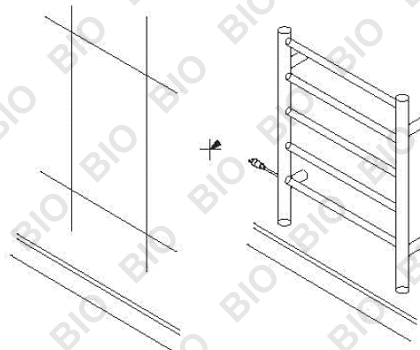

2. Drill the hole on the right position. Secure the 8mm masonry wall plugs (B) into the wall. Insert the wall base (E) into the hole. Insert the long screw (C) through the centre of the wall to support the wall base (E) tightly into the wall.

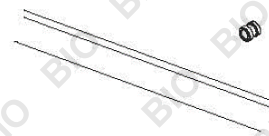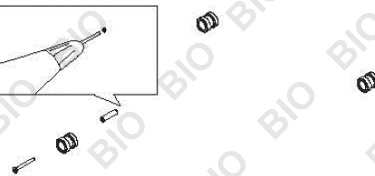


3. Place the towel rack onto the wall bases that were previously installed and ensure they align properly. Make adjustments if needed.

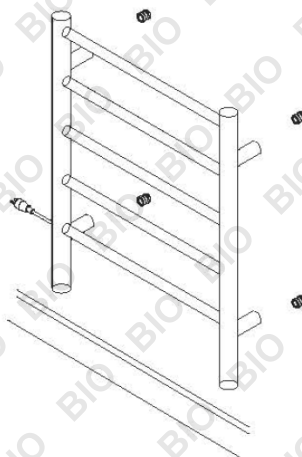

4. Fit the towel rack onto the wall bases and screw the small 5mm screws (D) into the wall attachments to secure.

Power can now be connected and turned on when needed.

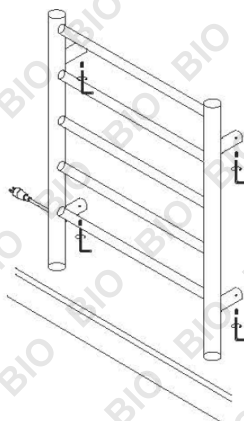

## Specifications

Model	Rungs	Style	Power
<b>S40</b>	4	Square	80W
<b>S44</b>	8	Square	100W
<b>R33</b>	6	Round	80W
<b>R55</b>	10	Round	100W



**Some experts believe that the incorrect or prolonged use of almost any product may cause serious injury or death. To help reduce your risk of serious injury or death, refer to the information below. For more information, see [www.datastreamserver.com/safety](http://www.datastreamserver.com/safety)**

- Consult all documentation, packaging and product labelling before use. Note that some products feature documentation available online. It is recommended to print and retain the documentation.
- Before each use, check the product for loose/broken/damaged/missing parts, wear or leaks (if applicable). Never use a product with loose/broken/damaged / missing parts, wear or leaks.
- Products must be inspected and serviced (if applicable) by a qualified technician every 6 months. This is based on average residential use by persons of average size and strength, and on a property of average metropolitan size. Use beyond these recommendations may require more frequent inspections / servicing.
- Ensure that all users of the product have completed a suitable industry recognised training course before being allowed access to the product.
- The product has been supplied by a general merchandise retailer that may not be familiar with your specific application or description of application. Be sure to attain third-party approval from a qualified specialist for your application before use, regardless of any assurances from the retailer or its representatives.
- This product is not intended for use where fail-safe operation is required. As with any product (for example, automobile, computer, toaster), there is the possibility of technical issues that may require the repair or replacement of parts, or the product itself. If the possibility of such failure and the associated time it may take to rectify could in any way inconvenience the user, business or employee, or financially affect the user, business or employee, then the product is not suitable for your requirements. This product is not intended for use where incorrect operation or a failure of any kind, including but not limited to, a condition requiring product return, replacement, parts replacement or service by a technician may cause financial loss, loss of employee time or an inconvenience requiring compensation.
- If this product has been purchased in error when considering the information presented here, contact the retailer directly for details of their returns policy, if required.



©2018 Bio. All rights reserved. No part of this document, including descriptive content, concepts, ideas, diagrams or images may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying, scanning or recording, or any information storage and retrieval system, without express permission or consent from the publisher.