

carson



Portable Air Conditioner - PA200 II

User Manual

[Revision 1.0 October 2018]

READ THIS MANUAL CAREFULLY BEFORE USE – FAILURE TO DO SO MAY RESULT IN INJURY, PROPERTY DAMAGE AND MAY VOID WARRANTY. • KEEP THIS MANUAL FOR FUTURE REFERENCE. • Products covered by this manual may vary in appearance, assembly, inclusions, specifications, description and packaging.

Safety

Safety messages are designed to alert you to possible dangers or hazards that could cause death, injury or equipment or property damage if not understood or followed. Safety messages have the following symbols:

 <p>You WILL be KILLED or SERIOUSLY INJURED if you do not follow instructions.</p>	 <p>You CAN be KILLED or SERIOUSLY INJURED if you do not follow instructions.</p>	 <p>You CAN be INJURED if you do not follow instructions or equipment damage may occur.</p>
<p>It is vital that you read and understand this user manual before using the product, including safety warnings, and any assembly and operating instructions. Keep the manual for future reference.</p> <p>Safety precautions and recommendations detailed here must be fully understood and followed to reduce the risk of injury, fire, explosion, electrical hazard, and/or property damage.</p>	<p>General Personal Safety</p> <ul style="list-style-type: none"> Wear appropriate protective equipment when operating, servicing, or when in the operating area of the equipment to help protect from eye and ear injury, poisoning, burns, cutting and crush injuries. Protective equipment such as safety goggles, respirators, non-slip safety footwear, hard hat, hearing protection etc should be used for appropriate equipment / conditions. Other people nearby should also wear appropriate personal protective equipment. Do not wear loose clothing or jewellery, which can be caught in moving parts. Keep hair and clothing away from the equipment. Stay alert and use common sense when operating the equipment. Do not over-reach. Always maintain secure footing and balance. Do not use the equipment if tired or under the influence of drugs, alcohol or medication. This equipment is not intended for use by persons with reduced physical, sensory or mental capabilities. 	<p>General Equipment Use and Care</p> <ul style="list-style-type: none"> The equipment is designed for domestic use only. Handle the equipment safely and carefully. Before use, inspect the equipment for misalignment or binding of moving parts, loose components, damage or any other condition that may affect its operation. If damaged, have the equipment repaired by an authorised service centre or technician before use. Prevent unintentional starting of the equipment - ensure equipment and power switches are in the OFF position before connecting or moving equipment. Do not carry equipment with hands or fingers touching any controls. Remove any tools or other items that are not a part of the equipment from it before starting or switching on. Do not force the equipment. Use the correct equipment for your application. Equipment will perform better and be safer when used within its design and usage parameters. Use the equipment and accessories etc. in accordance with these instructions, considering working conditions and the work to be performed. Using the equipment for operations different from those intended could result in hazardous situations. Always keep equipment components (engines, hoses, handles, controls, frames, housings, guards etc) and accessories (cutting tools, nozzles, bits etc) properly maintained. Keep the equipment clean and, where applicable, properly lubricated. Store the equipment out of reach of children or untrained persons. To avoid burns or fire hazards, let the equipment cool completely before transporting or storing. Never place or store the equipment near flammable materials, combustible gases or liquids etc.
<ul style="list-style-type: none"> Before Use - If you are not familiar with the safe operation/handling of the equipment, or are in any way unsure of any aspect of suitability or correct use for your application, you should complete training conducted by a person or organization qualified in safe use and operation of this equipment, including fuel/electrical handling and safety. Do NOT operate the equipment in flammable or explosive environments, such as in the presence of flammable liquids, gases or dust. The equipment may create sparks or heat that may ignite flammable substances. Keep clear of moving parts. Equipment may be a potential source of electric shock or injury if misused. Do NOT operate the equipment if it is damaged, malfunctioning or is in an excessively worn state. Do NOT allow others to use the equipment unless they have read this manual and are adequately trained. Keep packaging away from children - risk of suffocation! Operators must use the equipment correctly. When using the equipment, consider conditions and pay due care to persons and property. <p>General Work Area Safety</p> <ul style="list-style-type: none"> Work areas should be clean and well lit. Do not operate the equipment if bystanders, animals etc are within operating range of the equipment or the general work area. If devices are provided for connecting dust extraction / collection facilities, ensure these are connected and used properly. Dust collection can reduce dust-related hazards. 	<p>General Fuel Safety</p> <ul style="list-style-type: none"> Petrol/fuel/gasoline is extremely flammable – keep clear of naked flames or other ignition sources. Do not spill fuel. If you spill fuel, wipe it off the equipment immediately – if fuel gets on your clothing, change clothing. Do NOT smoke near fuel or when refuelling. Always shut off the engine before refuelling. Do NOT refuel a hot engine. Open the fuel cap carefully to allow any pressure build-up in the tank to release slowly. Always refuel in well ventilated areas. Always check for fuel leakage. If fuel leakage is found, do not start or run the engine until all leaks are fixed. <p>General Carbon-Monoxide Safety</p> <ul style="list-style-type: none"> Using a combustion engine indoors CAN KILL IN MINUTES. Engine exhaust contains carbon-monoxide – a poison you cannot smell or see. Use combustion engines OUTSIDE only, and far away from windows, doors and vents. 	<ul style="list-style-type: none"> The equipment is not weather-proof, and should not be stored in direct sunlight, at high ambient temperatures or locations that are damp or humid. Do not clean equipment with solvents, flammable liquids or harsh abrasives. For specific equipment safety use and care, see Equipment Safety.

General Electrical Safety

- Inspect electrical equipment, extension cords, power bars, and electrical fittings for damage or wear before each use. Repair or replace damaged equipment immediately.
- Ensure all power sources conform to equipment voltage requirements and are disconnected before connecting or disconnecting equipment.
- When wiring electrically powered equipment, follow all electrical and safety codes.
- Wherever possible, use a residual current device (RCD).
- High voltage / high current power lines may be present. Use extreme caution to avoid contact or interference with power lines. Electrical shock can be fatal.

General Electrical Safety

- Electrically grounded equipment must have an approved cord and plug and be connected to a grounded electrical outlet.
- Do NOT bypass the ON/OFF switch and operate equipment by connecting and disconnecting the electrical cord.
- Do NOT use equipment that has exposed wiring, damaged switches, covers or guards.
- Do NOT use electrical equipment in wet conditions or in damp locations.
- Do NOT use electrical cords to lift, move or carry equipment.
- Do NOT coil or knot electrical cords, and ensure electrical cords are not trip hazards.

General Service Information

- The equipment must be serviced or repaired at authorised service centres by qualified personnel only.
- Replacement parts must be original equipment manufacturer (OEM) to ensure equipment safety is maintained.
- Do NOT attempt any maintenance or repair work not described in this manual.
- After use, the equipment and components may still be hot – allow the equipment to cool and disconnect spark plugs and/or electrical power sources and/or batteries from it before making adjustments, changing accessories or performing repair or maintenance.
- Do NOT make adjustments while the equipment is running.
- Perform service related activities in suitable conditions, such as a workshop.
- Replace worn, damaged or missing warning/safety labels immediately.

Portable Air Conditioner Safety

- This appliance can be used by children aged from 8 years and above, and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction regarding the use of the appliance in a safe way and given an understanding of the hazards involved.
- Children should not be allowed to play with the appliance.
- Do not install the air conditioner in a location where there is flammable gas or liquids.
- If the power supply cord is damaged, it must be replaced by an authorised technician.
- Do not stick anything, including fingers or sticks, into any of the air outlets or inlets.
- Do not touch the swinging wind vanes. They may clamp or pinch your fingers or be damaged due to having their movement blocked.
- Do not attempt to repair the air-conditioner yourself.
- In the event of a lightning storm, please unplug the air-conditioner from the power supply to prevent damage from a power surge.
- Do not operate the air-conditioner in a laundry, bathroom or other humid location.
- Do not use liquid or corrosive detergents to clean the air-conditioner. Do not splash water or other liquids onto it either, as this can cause fire or electric shock.
- Do not apply cold air from the air-conditioner directly to your body for extended periods of time.
- Clean the air-conditioner with a piece of soft, dry cloth.
- If the filter is very dirty, the cooling capacity of the air-conditioner will be weakened. Please clean the filter regularly.

Safety Symbols

The product may have safety warning labels attached to it, explained below. Understand the symbols on your product and their meanings. If any stickers become unreadable, unattached etc, replace them.


 <p>Flammable Material Hazard Flammable liquids, gases or substances etc may present. Avoid ignition sources and open flames. Danger of fire.</p>	 <p>Read User Manual Read and fully understand product safety warnings, operation, procedures etc before using the product.</p>	 <p>Use Hand Protection Wear appropriate hand protection and take due care as the product or use of the product may present hand hazards.</p>	 <p>WARNING EXHAUST FUMES Carbon-Monoxide Hazard Do not use the product in confined areas or without adequate ventilation. Carbon-monoxide poisoning can be fatal.</p>
 <p>Electrocution / Electrical Shock Hazard High voltage or high current electricity may be present or required by the product. Take due care when handling electrical products, cables, plugs and leads. Electrical shock can be fatal.</p>	 <p>Toxic Fumes / Dust Hazard Using the product or by-products from use may produce fumes, smoke or particles that could be harmful if inhaled. Wear appropriate breathing protection and have adequate ventilation.</p>	 <p>Explosive Material Hazard Combustible liquids, gases or substances etc may be present. Avoid ignition sources and open flames. Danger of explosion.</p>	 <p>Cutting / Amputation Hazard The product may have blades, edges or mechanical devices that can cause severe cut injury to fingers, limbs etc. Take due care when handling and using the product.</p>
 <p>Crush Hazard The product may have blades, edges or mechanical devices that can cause severe crush injury to fingers, limbs etc. Take due care when handling and using the product.</p>	 <p>Single Operator Only The product must be operated by a single person only. More than one person operating the product may introduce additional hazards.</p>	 <p>Use Face Protection Wear appropriate full-face protection and take due care as the product or use of the product may present face and eye hazards.</p>	 <p>Use Foot Protection Wear appropriate foot protection and take due care as the product or use of the product may present foot hazards.</p>
 <p>Use Eye / Ear / Head Protection Wear appropriate eye and / or ear and / or head protection and take due care as the product or use of the product may present eye, hearing and head hazards.</p>	 <p>Running Hazard Do not run on or near the product as doing so may present a fall hazard.</p>	 <p>Diving Hazard Do not dive into the product as doing so may present a neck / head injury hazard.</p>	 <p>Adult Supervision Required Always supervise children and other users of a product to prevent drowning or injury.</p>
 <p>Skin Penetration / Puncture Hazard The product may produce pressure, emit liquids or objects that can cause severe injury to fingers, limbs, blood etc. Take due care when handling and using the product.</p>	 <p>Hot Surface Hazard Be aware that the product may produce high temperatures and hot surfaces that can cause burn injuries.</p>	 <p>Flying Debris Hazard Be aware that the product or use of the product may present hazards produced by flying debris. Wear appropriate clothing and protective devices.</p>	 <p>Moving Parts Hazard Be aware that the product contains or uses mechanical devices that move or rotate. Always wait for moving parts to stop fully before handling the product, adjusting, maintenance etc.</p>

Carbon-Monoxide Hazard Do not use the product in confined areas or without adequate ventilation. Carbon-monoxide poisoning can be fatal.	Pull Hazard Be aware that the product contains or uses mechanical devices that can pull in objects and can cause severe injury to fingers, limbs etc. Take due care when handling and using the product.	Slope / Fall Injury Hazard Be aware that using the product on sloping surfaces or in slippery conditions may present additional dangers from falls and contact with blades, moving parts, hot surfaces etc.	"Slam Dunk" Warning Do NOT attempt "slam dunk" manoeuvres as this may result in severe injury due to falling, product breakage or collapse etc.
Electrocution / Electrical Shock Hazard - Outdoor High voltage or high current electricity may be present or required by the product. Do NOT use in rain, damp or wet conditions. Electrical shock can be fatal.	Electrocution / Electrical Shock Hazard - Disconnect High voltage or high current electricity may be present or required by the product. Always disconnect the product from the electrical supply before handling the product, adjusting, maintenance etc.	Power Line Electrocution Hazard High voltage / high current power lines may be present. Use extreme caution to avoid contact or interference with power lines. Electrical shock can be fatal.	"Kick-Back" Hazard High level of "kick-back" hazard that can cause the machine to suddenly rotate towards operator. Kick-back injury can be fatal.
Winch Operator Position Hazard Do NOT stand between winch and load. Do NOT use winch to move people.	Winch Lift Hazard Do NOT LIFT load vertically. Use machine to PULL only.	Cable Hazard Ensure that load bearing cable is not kinked or knotted.	Winch Cable Hazard Ensure that there is a minimum number of cable coils on winching mechanism.
Winch Hook Hazard Carry hook to load – do NOT throw or run.	Flash / Blinding Hazard Wear appropriate eye protection for welding. Direct exposure to weld arcs may cause permanent eye injury.	Laser Hazard Laser may be in use – do NOT look directly at laser, or allow others to.	

Table of Contents


Safety	2
Safety Symbols	4
Parts Identification	7
Fittings List.....	7
Assembly and Set-Up	8
Selecting Your Location	8
Exhaust Pipe Assembly	8
Window Kit Installation.....	9
Installation Examples	10
Wall Mounted Exhaust.....	10
Bow Alignment.....	10
Incorrect Pipe Bending	10
Operation	11
Control Panel	11
Function Buttons.....	11
Displays.....	11
Remote Control.....	12
Timer Setting.....	12
1 - Setting Timer Off	12
2 - Setting Timer On	12
3 - Changing the Set Time.....	12
Operating Modes	13
HEAT and COOL modes	13
DEHUMIDIFY mode	13
FAN mode	13
Drainage	14
Maintenance	15
Cleaning the Unit	15
Cleaning the Air Filters.....	15
Postseason Storage.....	15
Error Codes	16
Troubleshooting	16
Specifications	17

Parts Identification

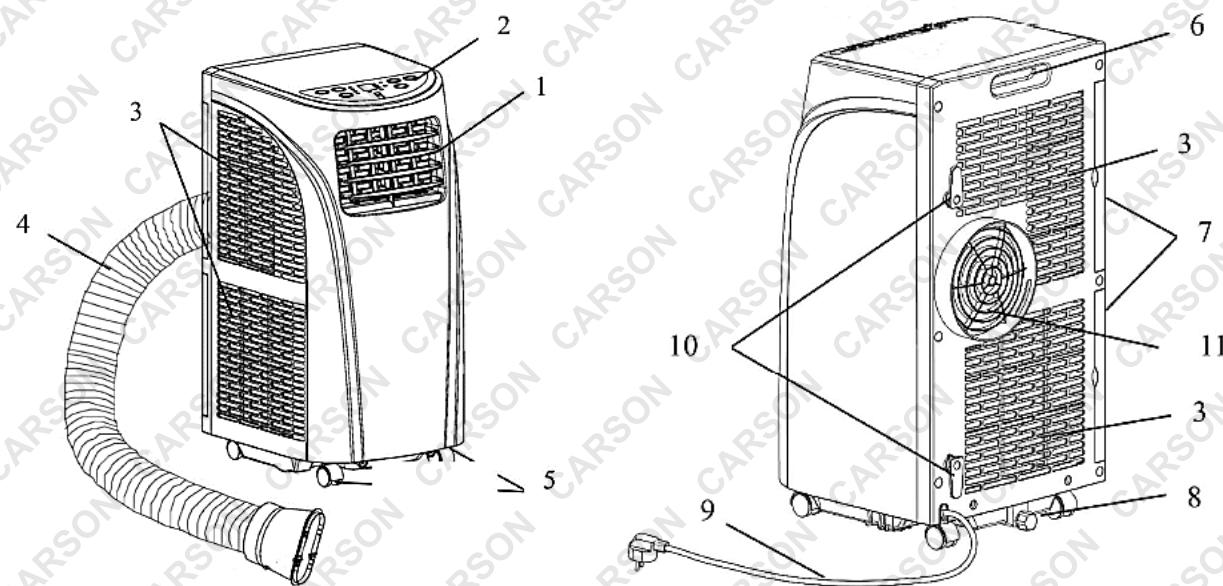

No.	Name	No.	Name
1	Guide strip	7	Strainer
2	Control panel	8	Drainage outlet
3	Inlet grid	9	Power cord and plug
4	Exhaust pipe	10	Power cord storage hooks
5	Corner wheel	11	Exhaust outlets
6	Handle		

Fittings List

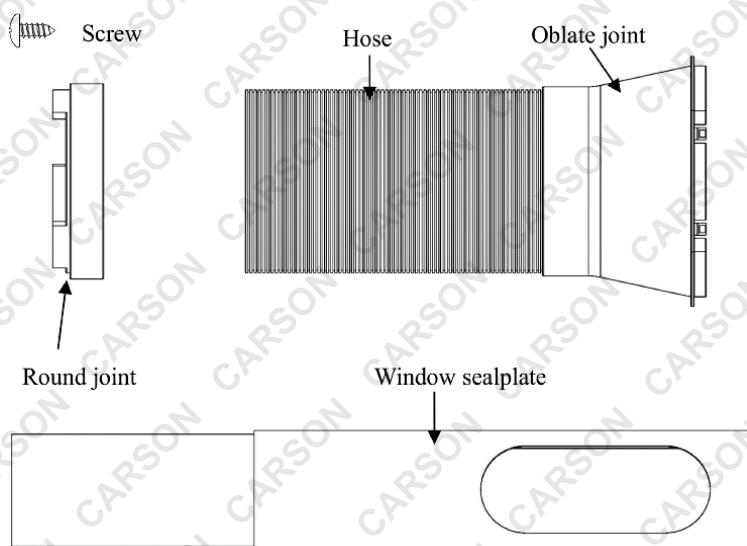


Extendable Hose length: 28 - 150cm

Window Seal plate length: 90 - 130cm

Assembly and Set-Up


Selecting Your Location

Install the air-conditioner in a flat, dry location, allowing 50cm of space around the air-conditioner in all directions to allow for adequate circulation of air.

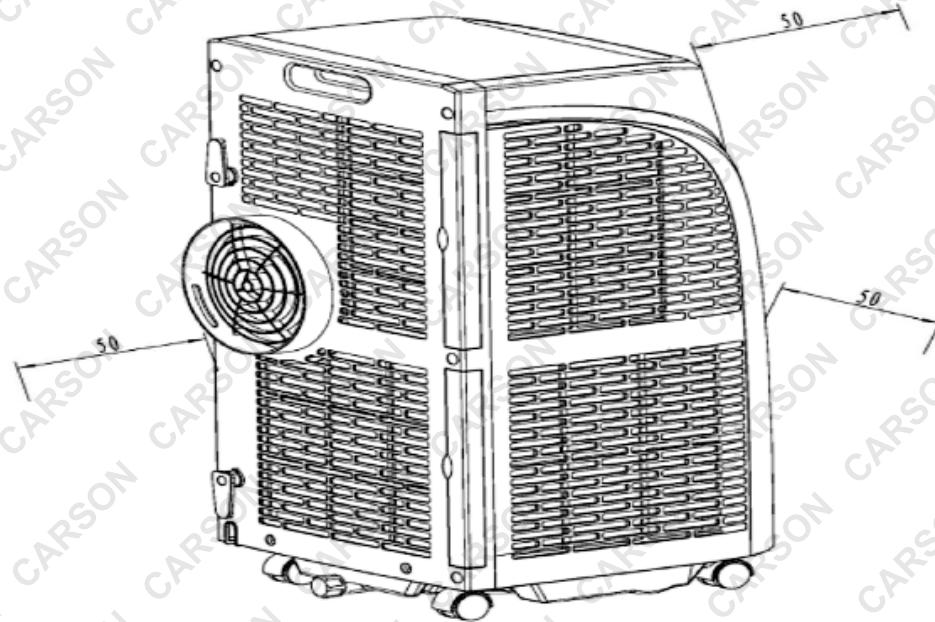


Exhaust Pipe Assembly

1. Connect the exhaust pipe assembly with the round joint.

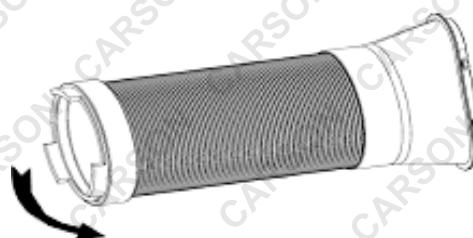

2. Fix the round end of the connected exhaust pipe assembly to the air outlet of the air conditioner.

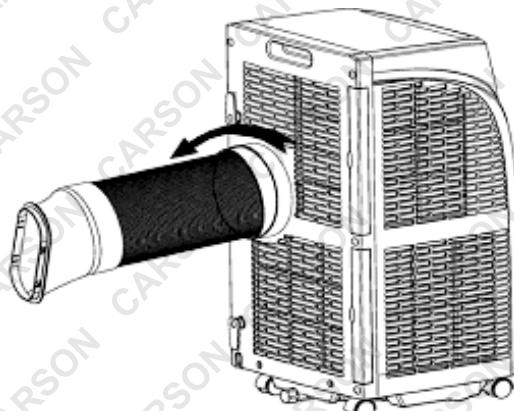

Portable Air Conditioner - PA200 II

3. Connect the elongated joint of the exhaust pipe to the window seal plate.
4. Install the seal plate into the nearest window. Ensure there are no objects within 50cm of the window itself to allow the air exhaust to flow freely.





• It is recommended to use a short exhaust pipe as much as possible, as the shortest length will result in the most efficient operation. • The length of the exhaust pipe is designed specifically for this product. Please do not use other exhaust pipes or extend the pipe at all, as this may result in product failure.

Window Kit Installation


The window kit has been designed to fit most standard vertical and horizontal window applications. However, it may be necessary for you to improve or modify some aspects of the installation procedure for certain types of window.

Please refer to the images below for usage examples:

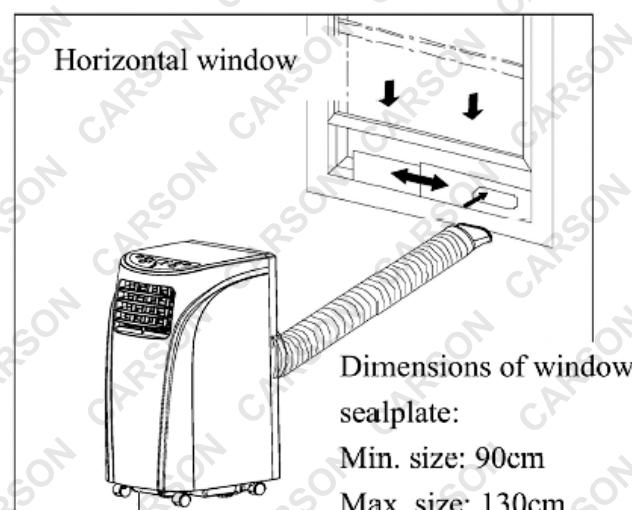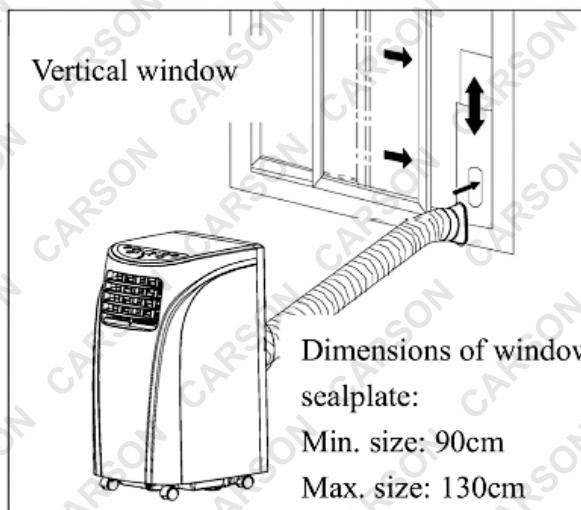


Installation Examples


Wall Mounted Exhaust

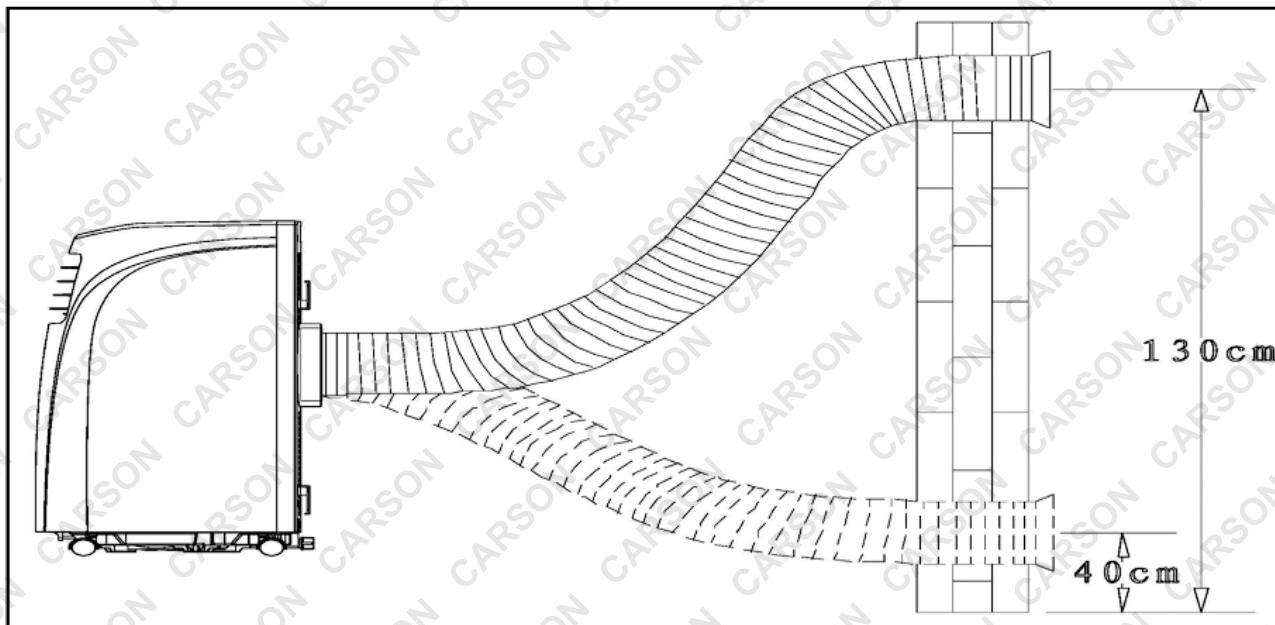

Bow Alignment

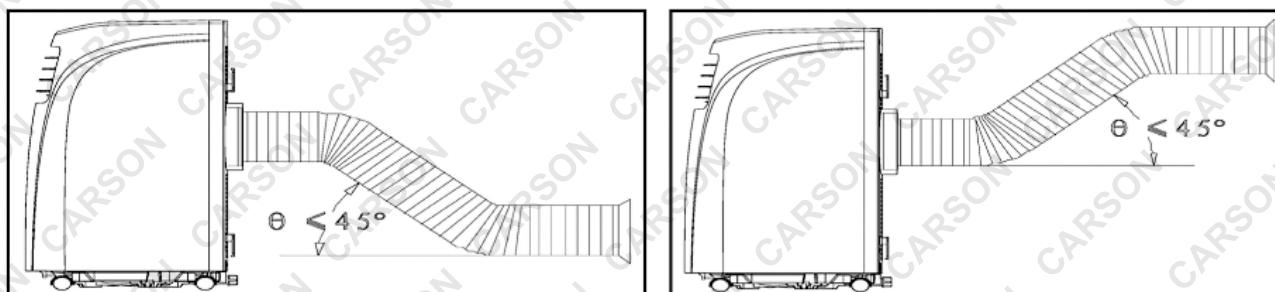


Incorrect Pipe Bending

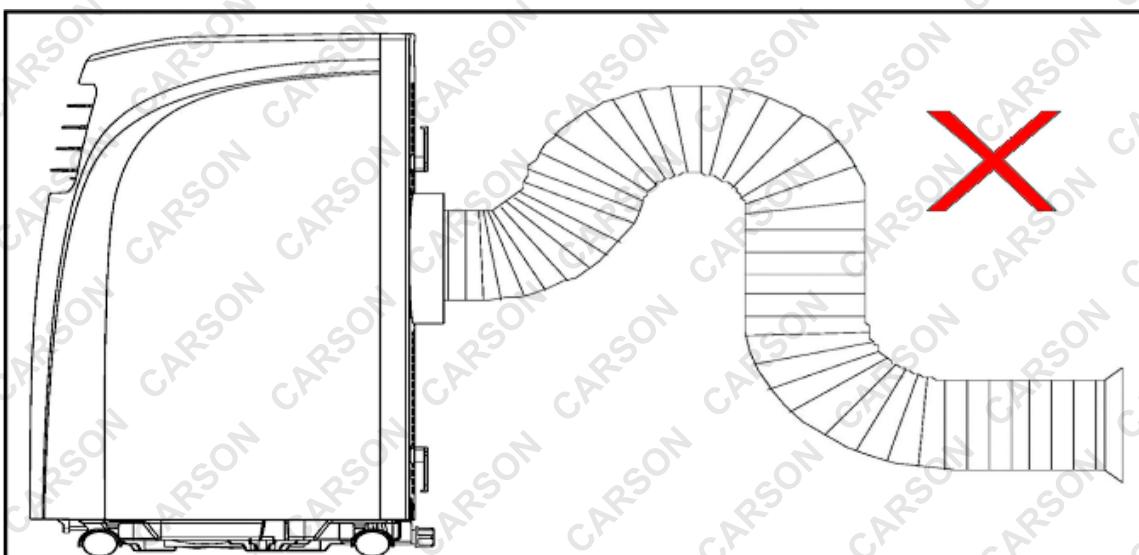

Operation

Control Panel

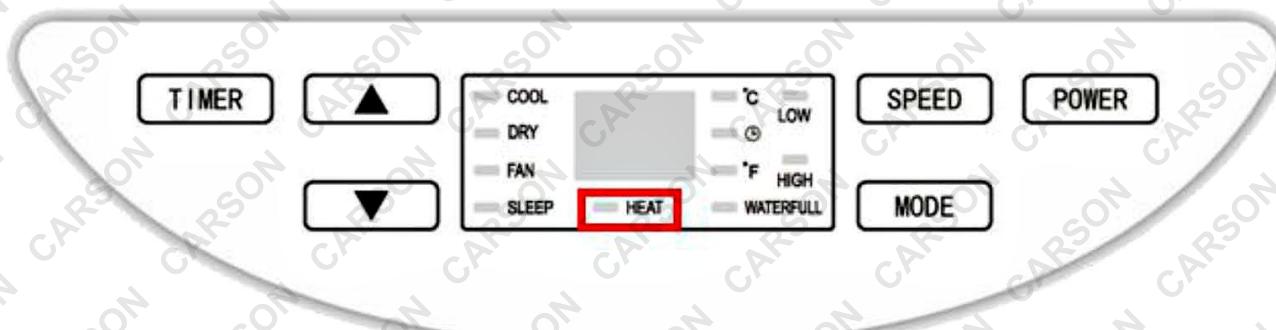

Function Buttons


- **POWER** - Press this button to turn the air-conditioner ON or OFF.
- **MODE** – While running or when a timer is set, this button can select between COOL, DEHUMIDIFY, FAN and HEAT modes. Once a mode is selected, the corresponding light will be ON.
- **UP and DOWN** - If the Time On or Time Off timer is set, pressing UP and DOWN will adjust the ON/OFF time. If the air-conditioner is already running, pressing UP or DOWN will adjust the temperature setting. Pressing UP and DOWN together at the same time will swap between C° and F° modes.
- **SPEED** - Pressing this button will select airspeeds between LOW and HIGH. Once an airspeed is selected, the corresponding light will be ON.
- **TIMER** - Press this button to set a timer.

Displays

- **88** - This figure will display the set temperature in HEAT and COOL modes and will display the room temperature in FAN and DEHUMIDIFY modes.
 - If **E2** is displayed, it means the room temperature sensor has encountered an error.
 - If **E3** is displayed, it means the evaporator temperature sensor has encountered an error.
 - If **DF** is displayed, it means the defrosting function is active.
 - If **FL** is displayed, it means the water tank is full.
- **SLEEP** - If this indicator light is lit, it means the SLEEP state is operating.
- **WATER FULL** - If this indicator light is lit, it means the water tank needs to be emptied.

Remote Control

-  **POWER:** Press to turn air-conditioner ON/OFF.
-  **TIMER:** press to set timer.
-  **TEMPERATURE CONVERSION:** Swap from C° to F°.
-  **COOL:** Press to select COOL mode.
-  **DEHUMIDIFY:** Press to select DEHUMIDIFY mode.
-  **FAN:** Press to select FAN mode.
-  **UP/DOWN:** Press UP or DOWN to select temperature or adjust timer.
-  **HIGH:** Press to select HIGH fan speed.
-  **LOW:** Press to select LOW fan speed.
-  **SLEEP:** Press to set the air-conditioner to SLEEP mode. This will lock the fan speed mode to LOW. The temperature will also be unable to be changed. Press SLEEP again to cancel.

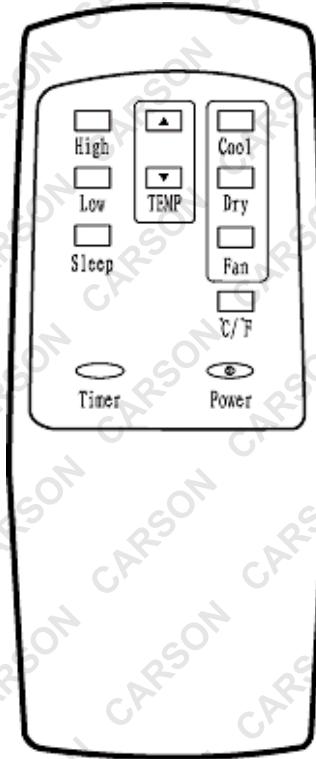

Timer Setting

1 - Setting Timer Off

When the air-conditioner is running, press the TIMER button and the timer LED will light up. The number readout will flash "--" for 5 times. While it is flashing, press UP and DOWN to adjust the time for 0.5 hours (30 minutes) to 24 hours. For timer settings under 3 hours, the increments will be in 30-minute blocks. For timer settings over 3 hours, increments will be in 1-hour blocks. When the timer expires, the air-conditioner will turn off automatically.

2 - Setting Timer On

When the air-conditioner is in standby, press the TIMER button and the timer LED will light up. The number readout will flash "--" for 5 times. While it is flashing, press UP and DOWN to adjust the time and set the method of operation required. If you set the mode to COOL or HEAT, then you can also select the desired temperature. For timer settings under 3 hours, the increments will be in 30-minute blocks. For timer settings over 3 hours, increments will be in 1-hour blocks. When the timer expires, the air-conditioner will turn on and run in the selected operating mode.

3 - Changing the Set Time

In the process of running the timer, if you intend to change the existing timer, you can press the TIMER button. The number display will flash, showing the time remaining. While it is flashing, you can press UP or DOWN to increase or decrease the time. If you press the TIMER a second time while the numbers are flashing, the timer will simply be cancelled.

Operating Modes

HEAT and COOL modes

- While the air-conditioner is running or is in TIMER ON mode, press MODE to select the HEAT or COOL mode. The LED lights on the control panel will light up.
- Press UP/DOWN to set the appropriate temperature in a range of 18-30°C (64-86°F). For each press of the UP or DOWN button, the temperature will change by 1°.
- Press SPEED to select the most appropriate fan speed, between LOW and HIGH speeds.
- After selecting COOL or HEAT mode, press SLEEP on your remote control (or press UP and TIMER on the control panel simultaneously) to enter SLEEP mode. Both the upper and lower fans will be set and locked to LOW speed. Set the timer from 0.5 to 12 hours, based on your requirements, after which the air-conditioner will automatically be turned off. If you wish to cancel the SLEEP mode, simply press the SLEEP button again.

DEHUMIDIFY mode

- While the air-conditioner is running or is in TIMER ON mode, press MODE to select DEHUMIDIFY mode. The LED light on the control panel will light up.
- Temperature and speed are not adjustable in dehumidify mode.

FAN mode


- While the air-conditioner is running or is in TIMER ON mode, press MODE to select FAN mode. The LED light on the control panel will light up.
- Press SPEED to select the appropriate fan speed, between LOW and HIGH speeds. Temperature is not adjustable.



When the full water indicator is displayed, the air-conditioner will stop working and you should drain the water. In DEHUMIDIFY and FAN modes, you do not need to use the exhaust pipe.

Drainage

- When COOL, DEHUMIDIFY or HEAT is run in humid weather, condensation will be produced. The Water Full alarm will be triggered when the water in the pan reaches a certain level.
- When the Full alarm is triggered, please drain the water quickly. You can do this by moving the air-conditioner to a location where water can be drained directly, such as a drain, shower or outdoors. Unscrew the nut and pull the water plug out to drain the water.
- Reinstall the plug and nut before use.

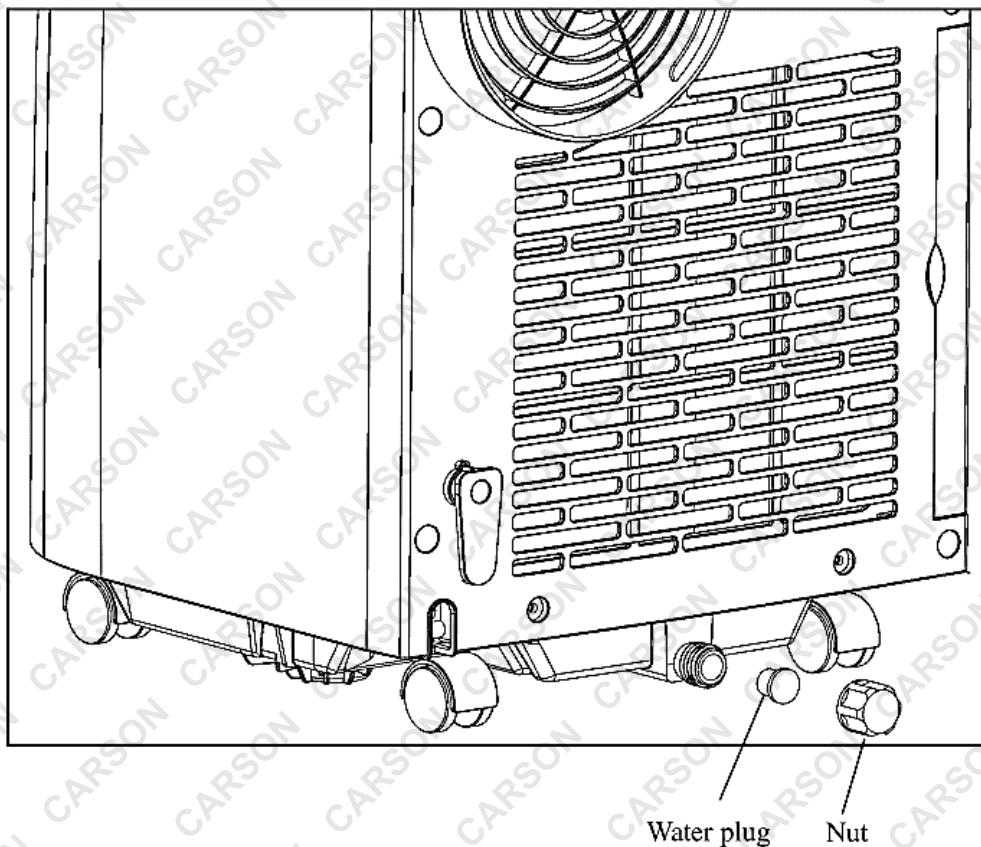

When the water tank is full, please move the air-conditioner carefully, as the water may overflow from inside if the unit gets shaken or knocked.

Maintenance

This air-conditioner is designed to give you dependable service for many years. This section will explain how to clean and care for the air-conditioner properly.

Before performing any maintenance, please turn the air-conditioner off and unplug it.

Cleaning the Unit


Clean the surface of the air-conditioner with a duster or semi-wet soft cloth. Do not use any chemical agents or thinners, as this can cause damage to the cover.

Cleaning the Air Filters

If the air filter is covered with dust, the cooling capability will be decreased. Please clean the filter every two weeks while the air-conditioner is in use.

1. Pull the filters out as shown to right.
2. Put the filters into warm water with a neutral detergent and clean them, then leave them to dry in a cool, shady location.
3. Install the filters back into their original positions.

NOTE: • To remove the filters, remove filter 1, then filter 2. • To replace the filters, install filter 2, then filter 1.

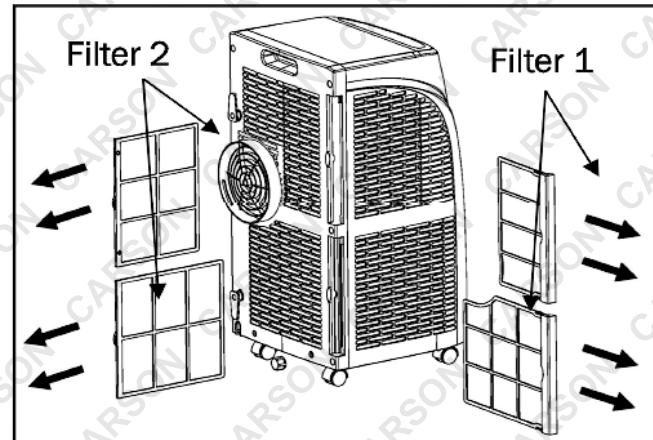

Postseason Storage

When the air-conditioner is out of season and not going to be used for an extended period, please follow these storage measures.

1. Drain all the water out of the pan outlet, then adjusting the operation mode to FAN mode. Press the SPEED button for 5 seconds until the fan operates and keep the unit running in this mode for 2-3 hours. This will dry the inside of the unit out and prevent mildew from growing inside.
2. Turn off the air-conditioner and unplug it.
3. Wind and fasten the power cord up.
4. Remove and store the exhaust pipe.
5. Cover the air-conditioner with a plastic bag to keep dust out and store in a cool, dry place.
6. Remove the batteries from the remote control.

Error Codes

The air-conditioner is built with sensors that will detect issues before they cause a malfunction. If the following errors appear on the screen, please refer to the table below.

Error Code	Meaning
E2	External temperature sensor fault
E3	Coil pipe sensor fault
FL	Water tank is full.

If "DF" is displayed, it means the air-conditioner is in anti-freezing or defrosting mode. This is completely normal and the correct behaviour will commence once the function has completed.

Troubleshooting

If you experience any issues with the air-conditioner, please refer to this table to see if you can troubleshoot and correct the problem yourself.

Problem	Possible Cause	Possible Solution
Air conditioner will not operate at all.	Power is not turned ON. Fuse has burnt out. Startup timer hasn't been triggered.	Switch the power ON. Replace the fuse. Wait or delete the original setting.
Unit is not starting when pressing ON/OFF.	<ul style="list-style-type: none"> Unit was just recently turned OFF and the compressor is cooling down. Room temperature is lower than the setting temperature. 	<ul style="list-style-type: none"> Wait for three minutes before attempting to start again. Reset the temperature.
Air is blowing out, but the cooling isn't very effective.	Temperature setting is incorrect. Air filter is blocked with dust. Air inlet or outlet is blocked. Air-conditioner has been turned ON inside a very hot room.	Set the proper temperature, ensuring that the temperature set is lower than the ambient temperature. Clean the air filter. Remove the obstacle. Allow additional time for the air-conditioner to remove all the heat stored in the room.
Noise or vibration	Cooling capacity is insufficient. Doors or windows are open.	If the room being cooled down is too large for the air-conditioner, then it may not have the power required to do the task. Close the doors and windows.
	Ground is not level or flat enough.	Move the air-conditioner to a flatter, more level area of flooring.

Specifications

Model	PA200 II
Cooling Capacity	4.1kW (14000BTU)
Noise level	55dB
Refrigerant	R410A
Airflow Volume	350m ³ /h
Power supply	240V/50Hz
Power Plug	10Amp, Australian Standard



Some experts believe that the incorrect or prolonged use of almost any product may cause serious injury or death. To help reduce your risk of serious injury or death, refer to the information below. For more information, see www.datastreamserver.com/safety

- Consult all documentation, packaging and product labelling before use. Note that some products feature documentation available online. It is recommended to print and retain the documentation.
- Before each use, check the product for loose/broken/damaged/missing parts, wear or leaks (if applicable). Never use a product with loose/broken/damaged/missing parts, wear or leaks.
- Products must be inspected and serviced (if applicable) by a qualified technician every 6 months. This is based on average residential use by persons of average size and strength, and on a property of average metropolitan size. Use beyond these recommendations may require more frequent inspections/servicing.
- Ensure that all users of the product have completed a suitable industry recognised training course before being allowed access to the product.
- The product has been supplied by a general merchandise retailer that may not be familiar with your specific application or description of application. Be sure to attain third-party approval from a qualified specialist for your application before use, regardless of any assurances from the retailer or its representatives.
- This product is not intended for use where fail-safe operation is required. As with any product (for example, automobile, computer, toaster), there is the possibility of technical issues that may require the repair or replacement of parts, or the product itself. If the possibility of such failure and the associated time it may take to rectify could in any way inconvenience the user, business or employee, or financially affect the user, business or employee, then the product is not suitable for your requirements. This product is not intended for use where incorrect operation or a failure of any kind, including but not limited to, a condition requiring product return, replacement, parts replacement or service by a technician may cause financial loss, loss of employee time or an inconvenience requiring compensation.
- If this product has been purchased in error when considering the information presented here, contact the retailer directly for details of their returns policy, if required.

